


PART LIST

CODE	QTY
A	1
B	1
C	1
D	1
E	1
F	1
G	1
H	1
I	1
J	1
K	1

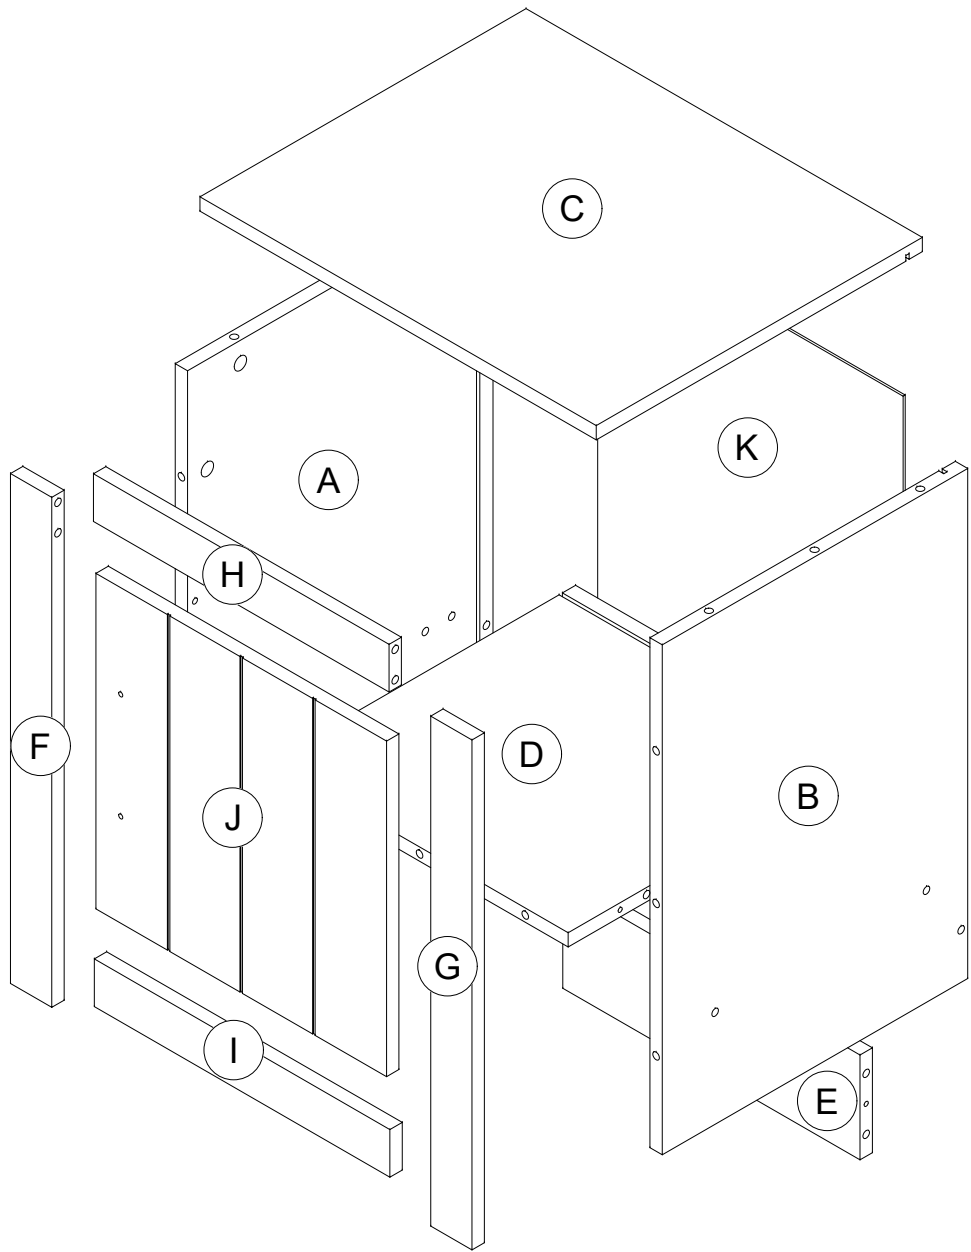





ASSEMBLY INSTRUCTIONS

DO NOT FULLY TIGHTEN ANY BOLTS BEFORE ALL PARTS ARE LOOSELY ASSEMBLED. THE PRODUCT/FITTINGS MAY BE DAMAGED IF OVERTIGHTENED. BEWARE OF CROSS THREADING SCREWS AND BOLTS DURINGS ASSEMBLY. SMALL COMPONENT PARTS COULD CHOKE A CHILD IF SWALLOWED. WE STRONGLY RECOMMEND THAT YOU KEEP CHILDREN AWAY FROM THE WORK AREA.

END TABLE 3222

HARDWARE LIST

1		Wood Dowel $\phi 8 \times 30 \text{mm}$	18 pcs
2		Minifix Bolt	10 pcs
3		Minifix Cam	10 pcs
4		Screw $\phi 6.3 \times 50 \text{mm}$	6 pcs
5		Allen Key M4	1 pc
6		PVC Nail With Pin	4 pcs
7		PVC Stopper	1 pc
8		Hinges 7/8"	2 pcs
9		Screw $\phi 3.5 \times 16 \text{mm}$	8 pcs
10		Handle - 128mm	1 pc
11		Handle Screw $\phi 4 \times 19 \text{mm}$	2 pcs
12		192 Stub	4 pcs
13		Screw $\phi 3.5 \times 20 \text{mm}$	4 pcs
14		Seal Sticker - 18mm	6 pcs

Minifix Setup :




STEP 1
UNLOCK



STEP 2







STEP 3
LOCK

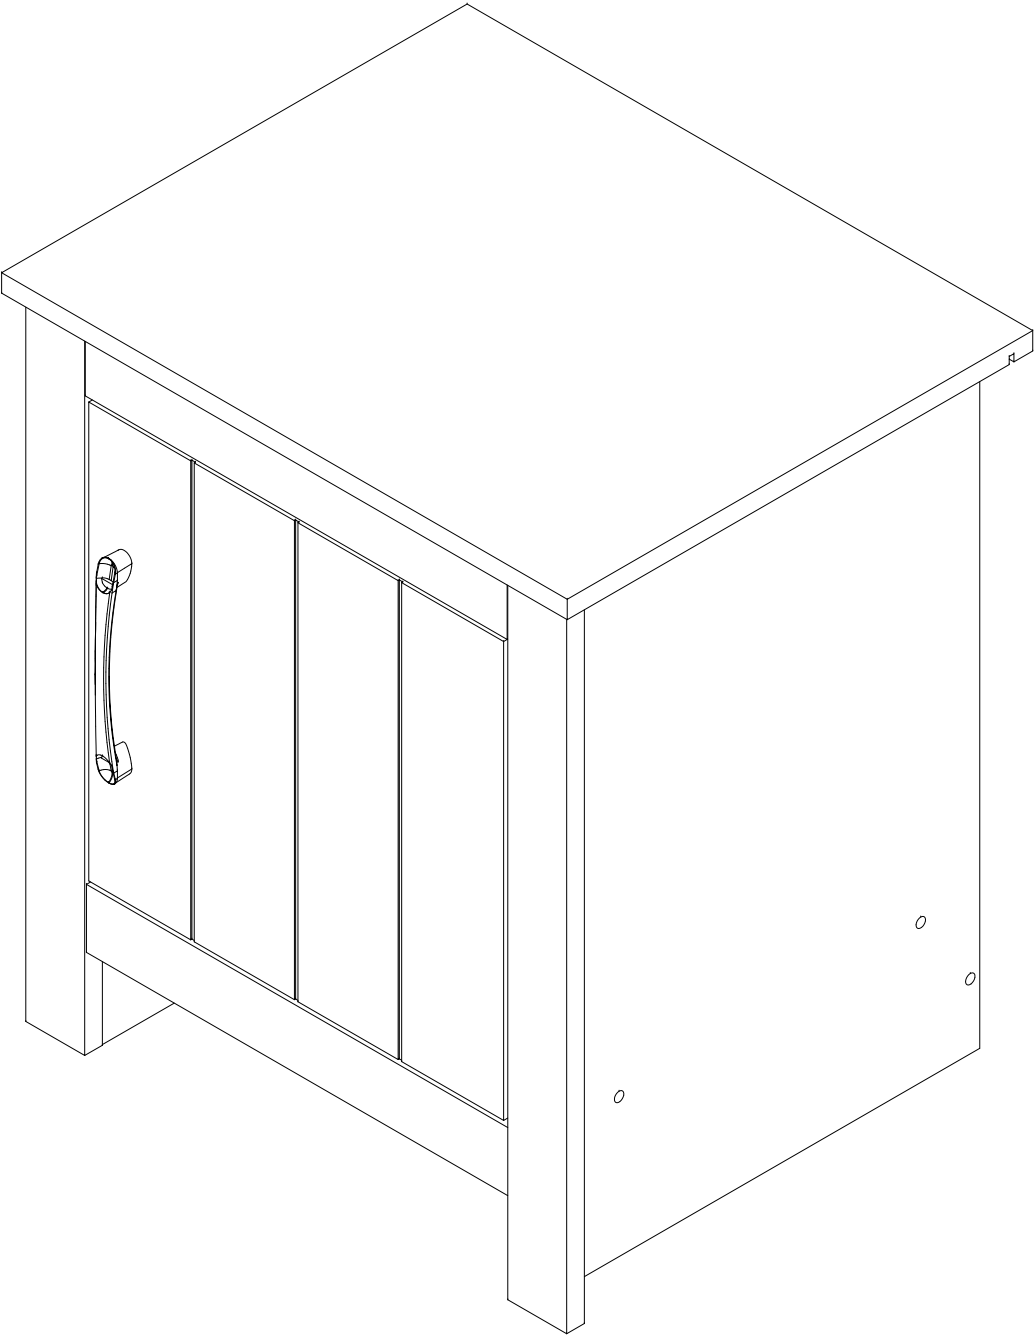

STEP 1

Insert dowels (1) and bolt (2) into all panel as shown.

1		18 pcs
2		10 pcs
7		1 pc

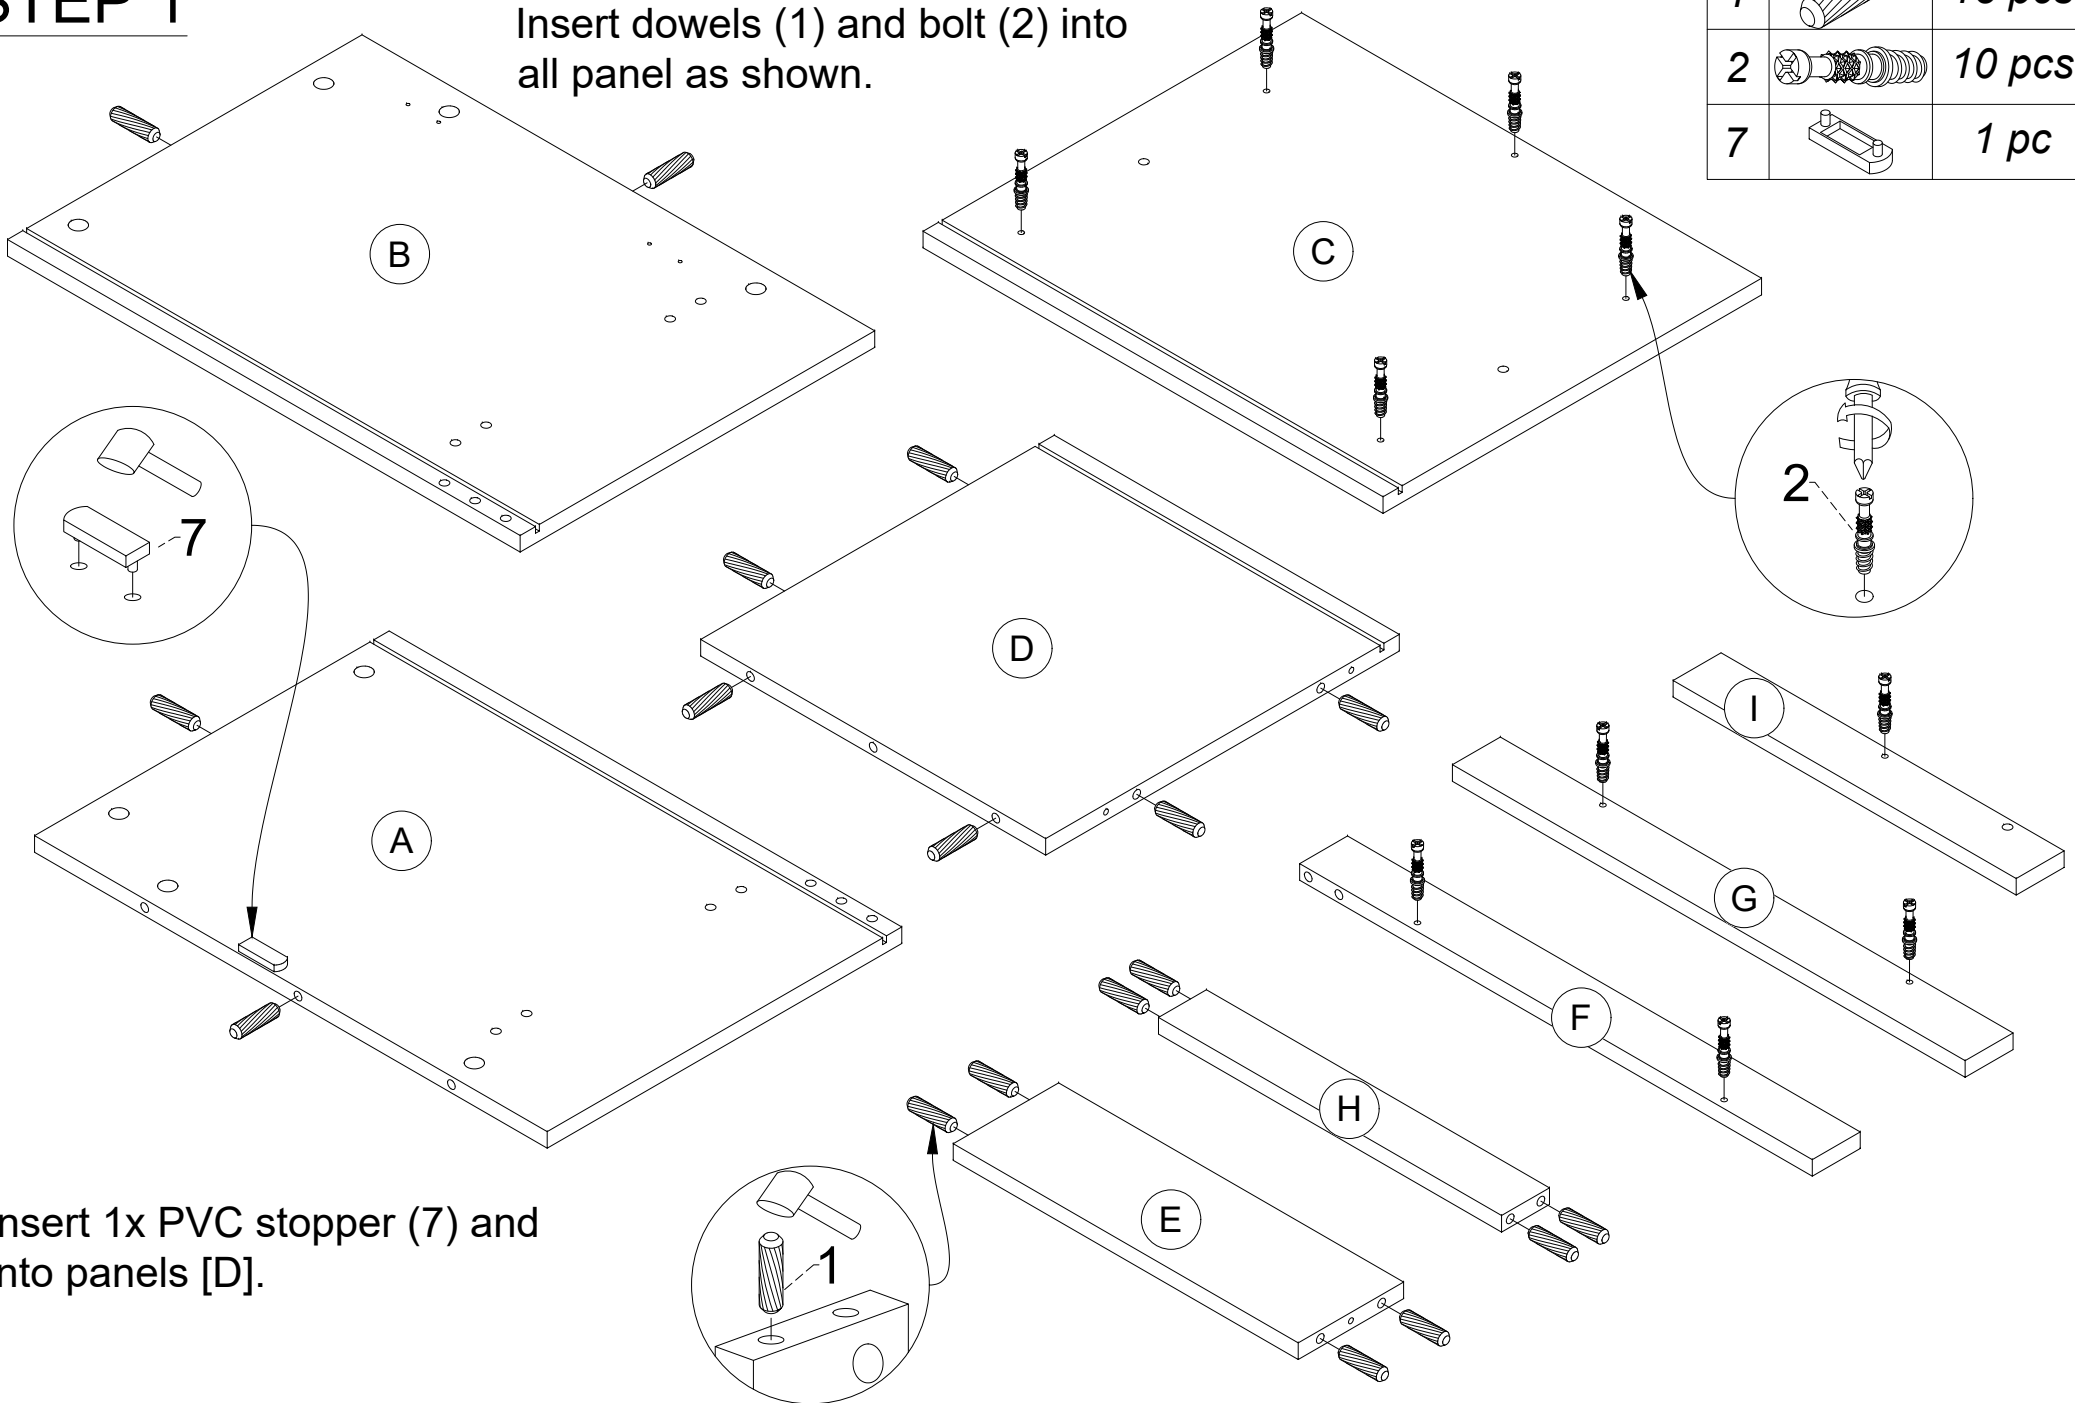


STEP 2

8




2 pcs


9



4 pcs

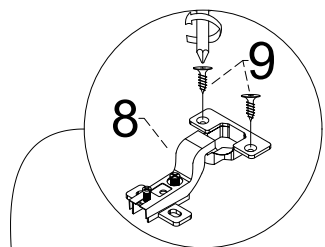


Insert 2x hinges (8) into panel [J] with 4x screw (9).

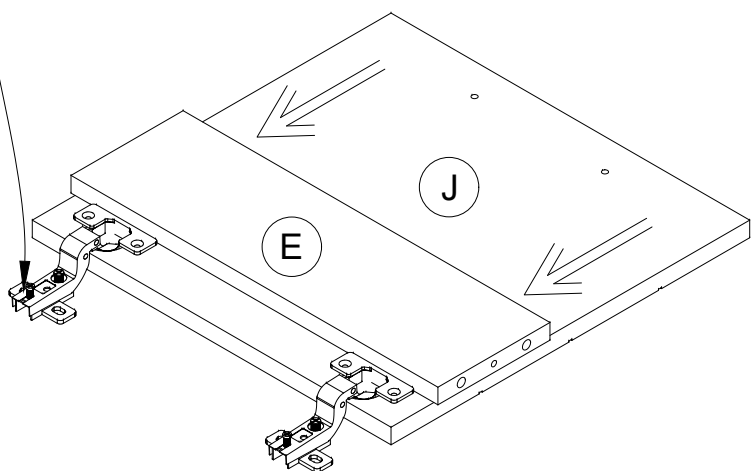

PLEASE PUT ANOTHER BOARD IN ORDER TO ALIGN THE HINGES ACCORDINGLY.

STEP 3

4



6 pcs


5



1 pc

Attach panels [A] [B] into panel [D] with 4x screw (4) and tighten with a allen key.

Slide panel [K] to place in the grooves as shown.

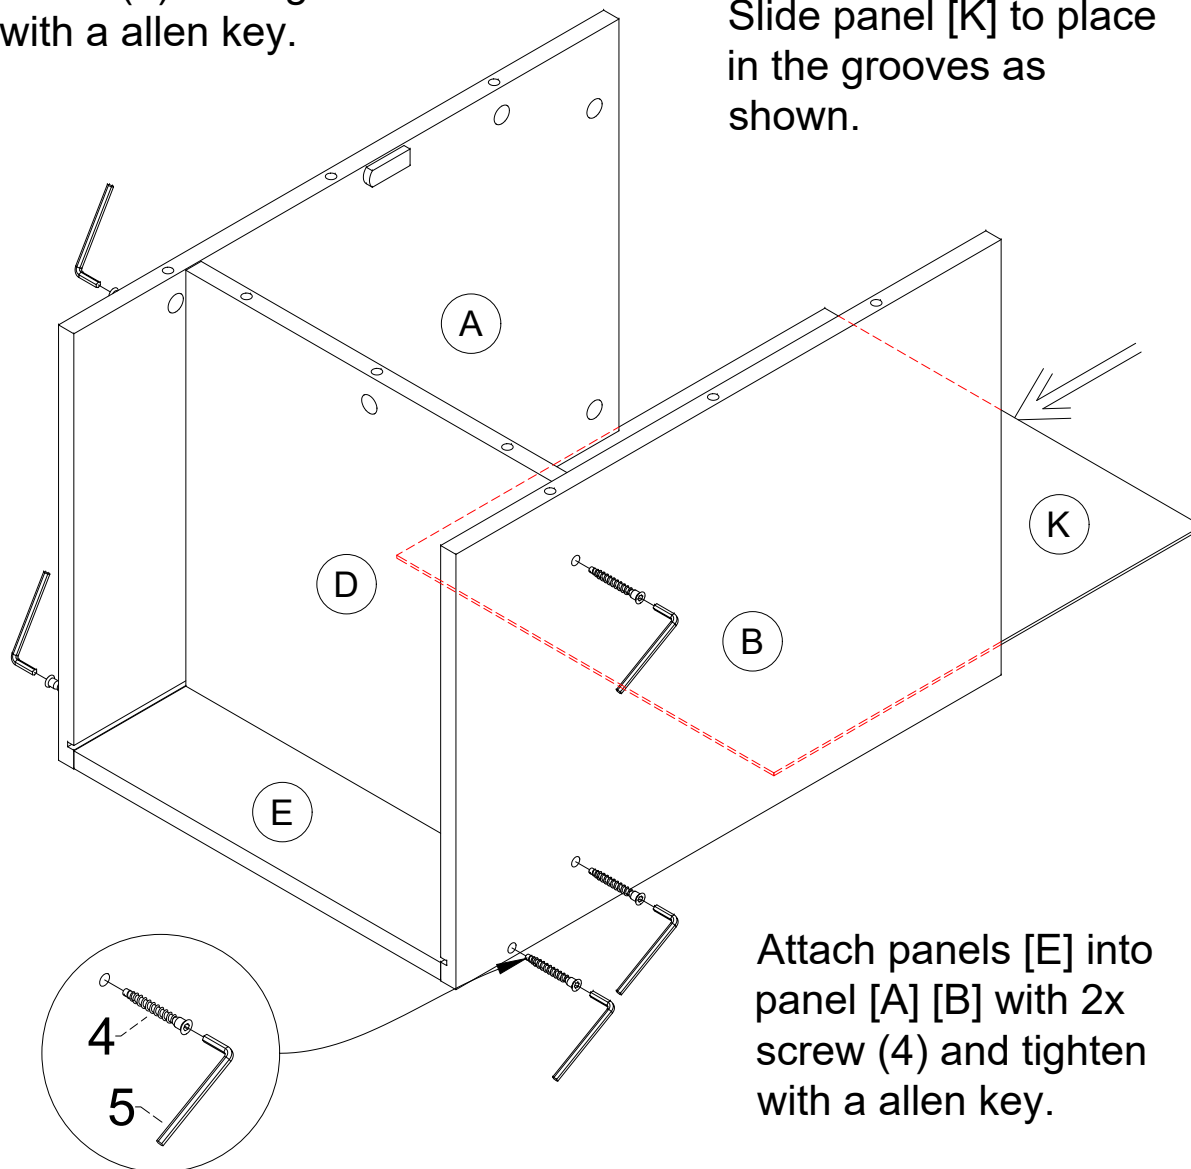


Attach panels [E] into panel [A] [B] with 2x screw (4) and tighten with a allen key.

STEP 4

3



10 pcs

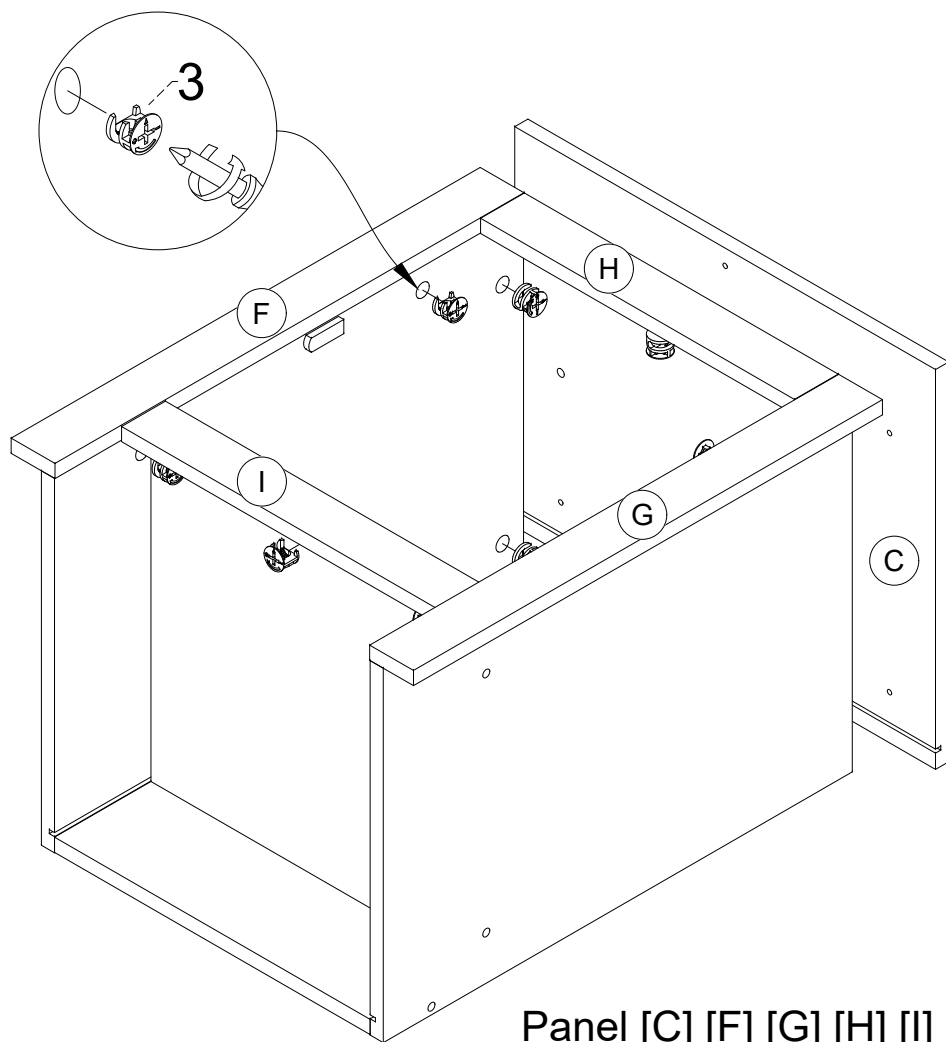

Panel [C] [F] [G] [H] [I] slot together with the rest of cabinet place 10x locking cam (3) into connecting parts and tighten with screwdriver.

STEP 5

6




4 pcs

12






4 pcs

13



4 pcs

Attach 4x stub (12) in the back panel [K] with 4x screw (13).

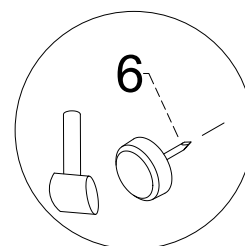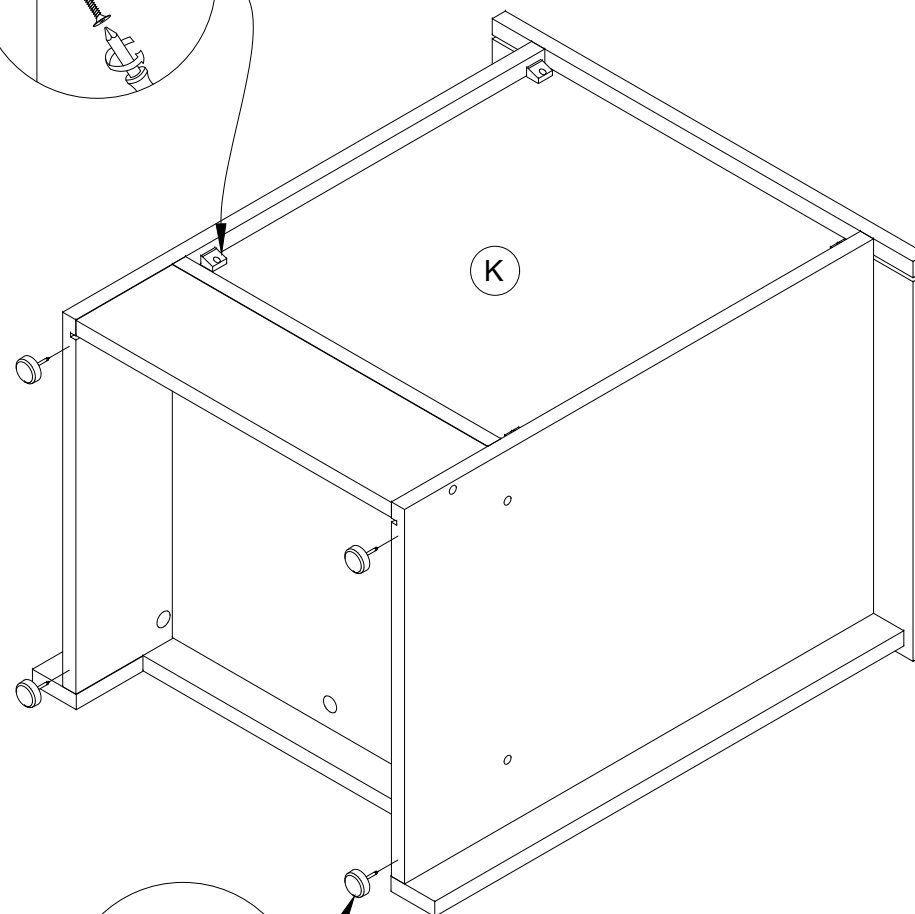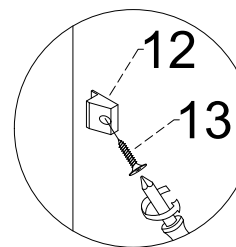





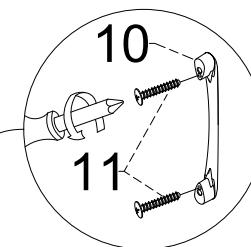
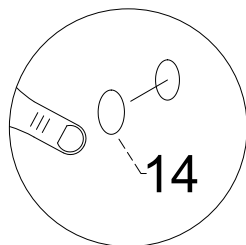
Attach 4x PVC nail pin (6) into the base.

STEP 6


Attach 1x handle (10) into panel [J] by 2x screw (11).

Close up both side screw holes with 6x holes sticker (14).


9		4 pcs
10		1 pc
11		2 pcs
14		6 pcs




A. Lateral adjustment by screw adjusting

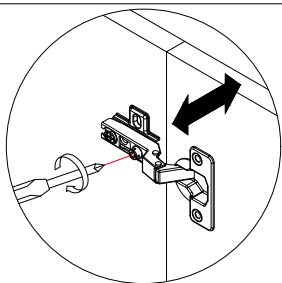

B. Vertical adjustment via slot in the mounting plate

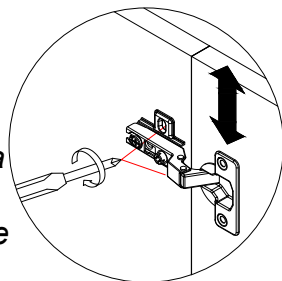

C. Front-to-Back by the slacking the hinge arm mounting screw

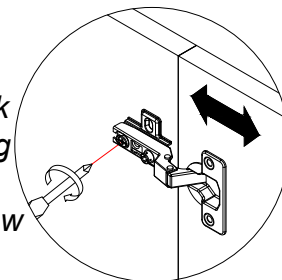

Using 2x screw (9) for 1x hinges (8).

