


Lennart Desk 1.4m 3224 - PR-6657

PART LIST

CODE	QTY
A	1
B	1
C	1
D	1
E	1
F	1
G	1
H	1
I	1
J	1
K	1
L	1
M	1

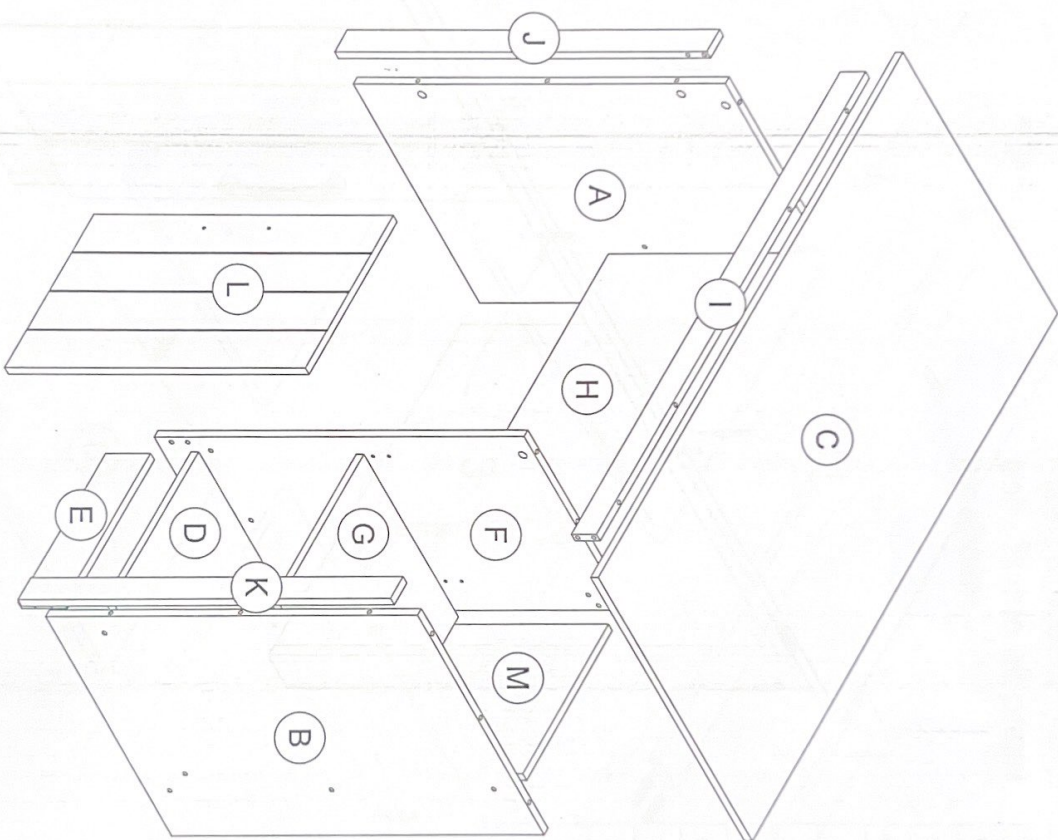













ASSEMBLY INSTRUCTIONS

DO NOT FULLY TIGHTEN ANY BOLTS BEFORE ALL PARTS ARE LOOSELY ASSEMBLED. THE PRODUCT/FITTINGS MAY BE DAMAGED IF OVERTIGHTENED. BEWARE OF CROSS THREADING SCREWS AND BOLTS DURING ASSEMBLY. SMALL COMPONENT PARTS COULD CHOKE A CHILD IF SWALLOWED. WE STRONGLY RECOMMEND THAT YOU KEEP CHILDREN AWAY FROM THE WORK AREA.

DESK 1.4M 3224

HARDWARE LIST

1		Wood Dowel $\phi 8 \times 30 \text{mm}$	17 pcs
2		Screw $\phi 6.3 \times 50 \text{mm}$	14 pcs
3		Minifix Bolt	13 pcs
4		Minifix Cam	13 pcs
5		Allen Key M4	1 pc
6		Handle - 128mm	1 pc
7		Handle Screw $\phi 4 \times 19 \text{mm}$	2 pcs
8		Seal Sticker - 18mm	12 pcs
9		Hinges 7/8"	2 pcs
10		Screw $\phi 3.5 \times 16 \text{mm}$	8 pcs
11		PVC Nail With Pin	6 pcs
12		Shell Support $\phi 5 \times 16 \text{mm}$	4 pcs

Minifix Setup :




STEP 1
UNLOCK



STEP 2



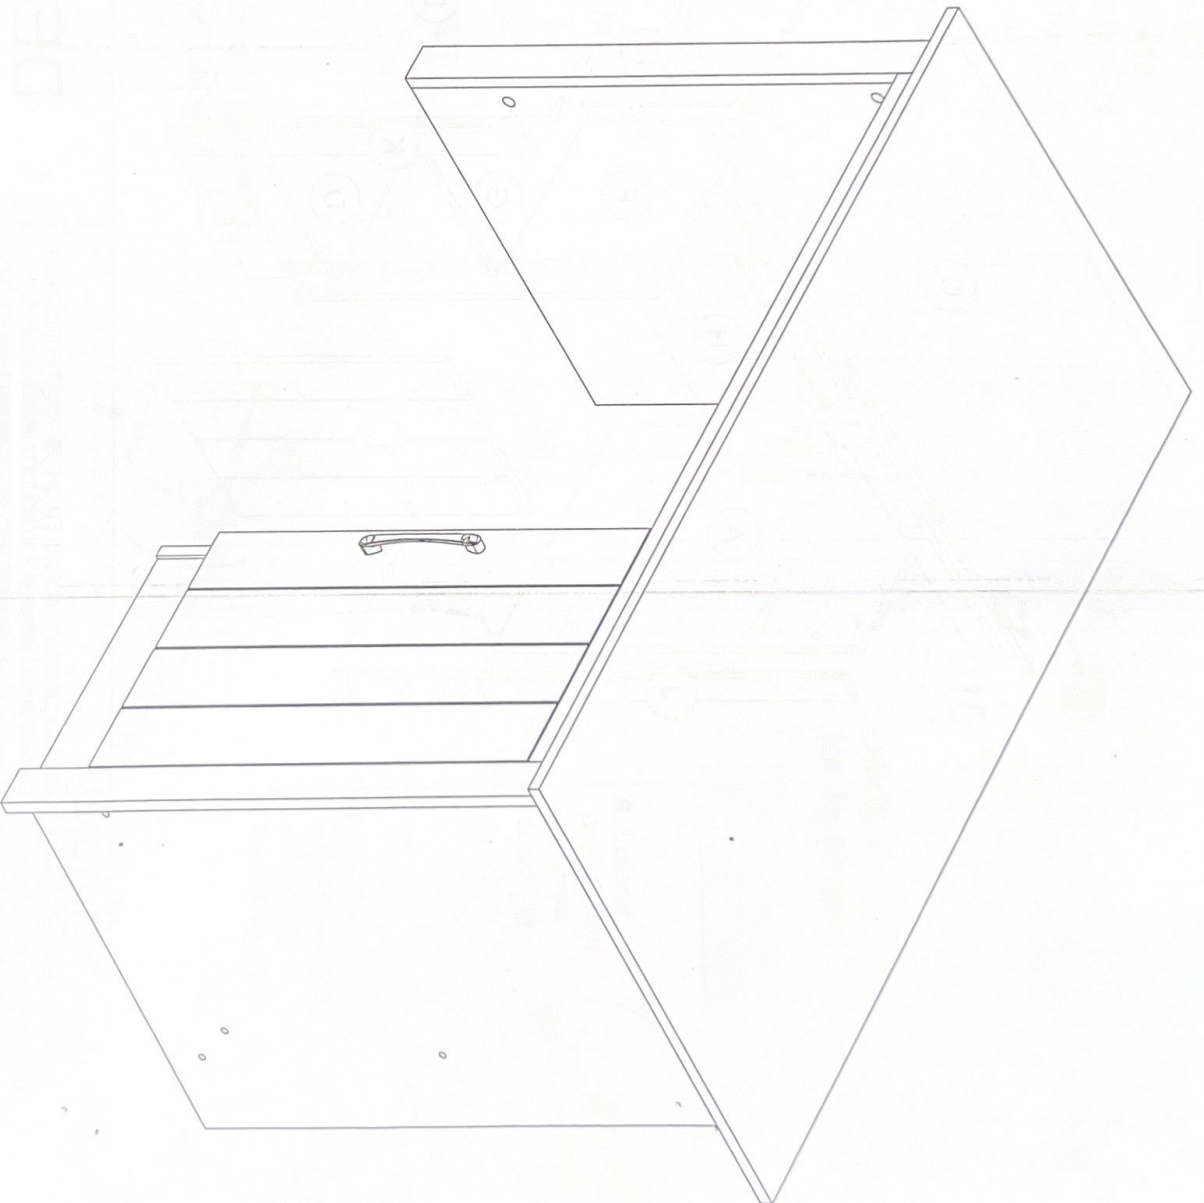


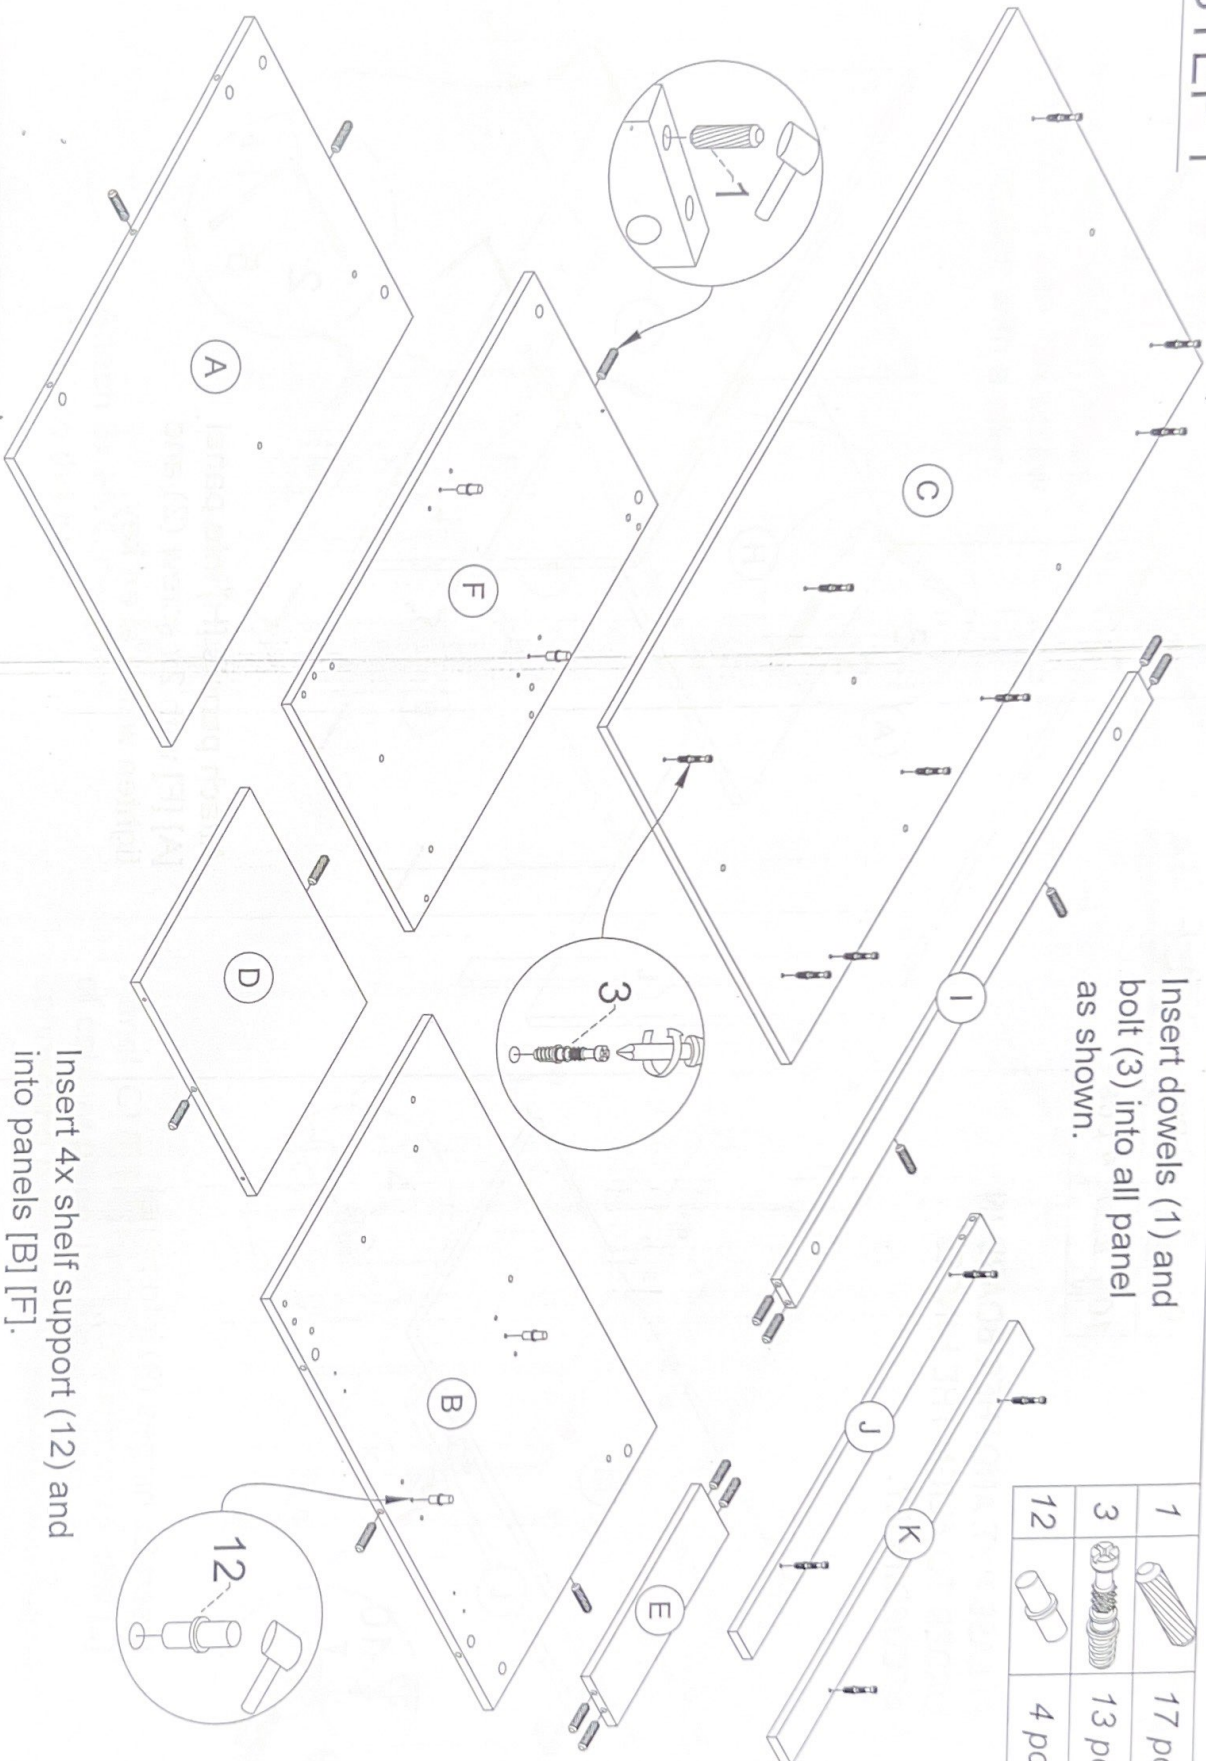
STEP 3
LOCK



STEP 1



Insert dowels (1) and bolt (3) into all panel as shown.

1		17 pcs
3		13 pcs
12		4 pcs




Insert 4x shelf support (12) and into panels [B] [F].

STEP 2



9		2 pcs
10		4 pcs

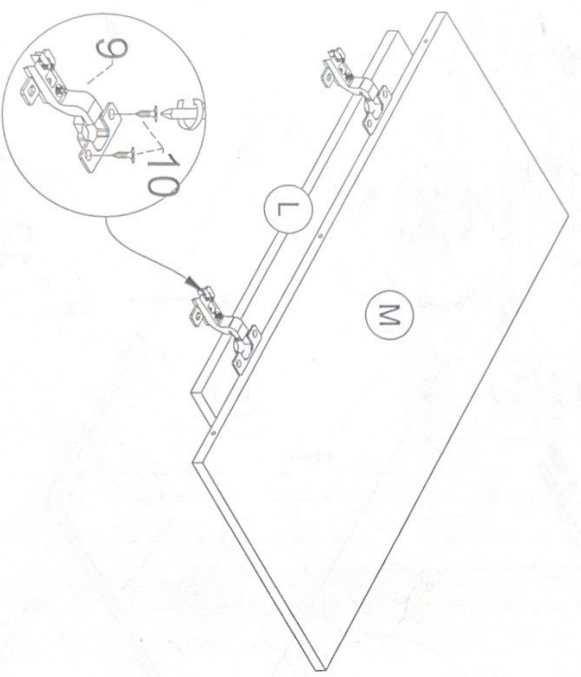
PLEASE PUT ANOTHER BOARD IN ORDER TO ALIGN THE HINGES ACCORDINGLY.



Insert 2x hinges (9) into panel [L] with 4x screw (10).

STEP 3

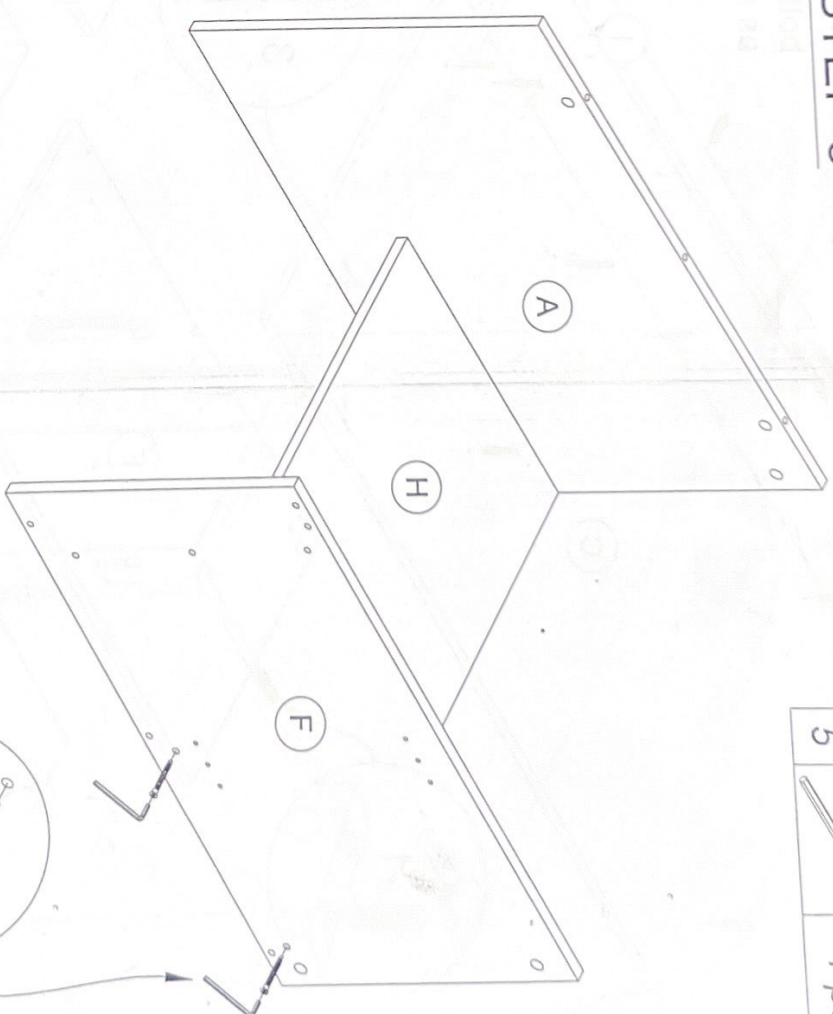

2		1 pc
5		




Attach panels [H] into panel [A] [F] with 2x screw (2) and tighten with a allen key.

STEP 4


Attach panels [E] [D] [M] into panel [B] [F] with 10x screw (2) and tighten with a allen key.

2		10 pcs
5		1 pc
11		6 pcs

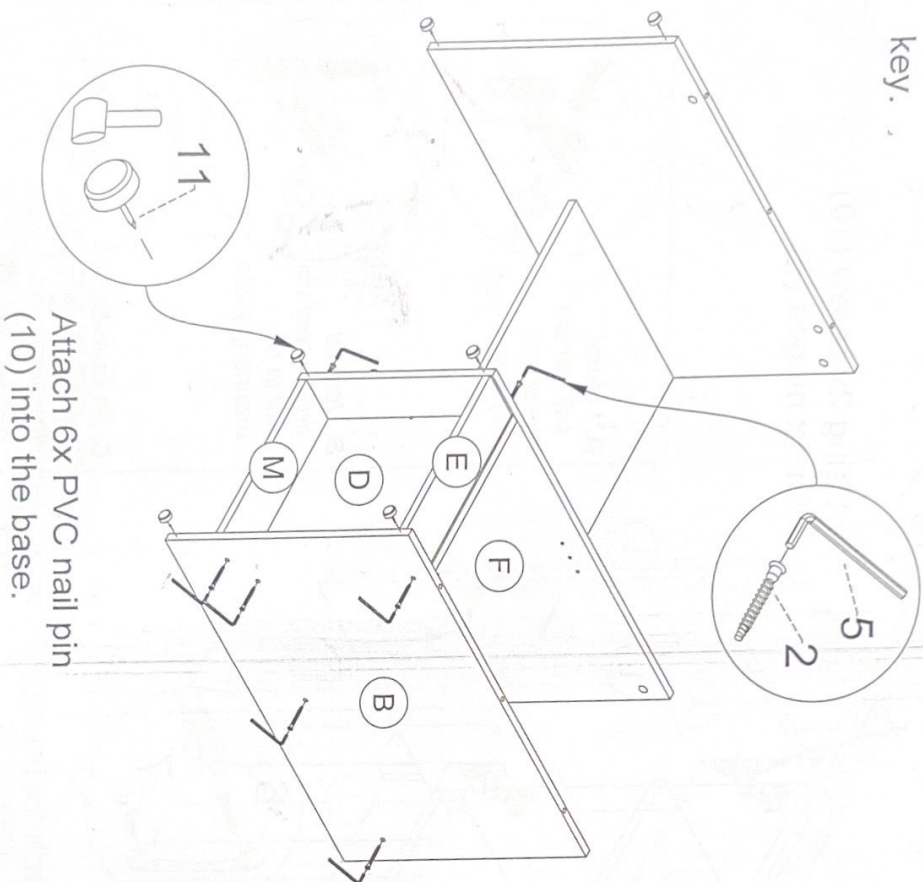



STEP 5

4		13 pcs
---	---	--------

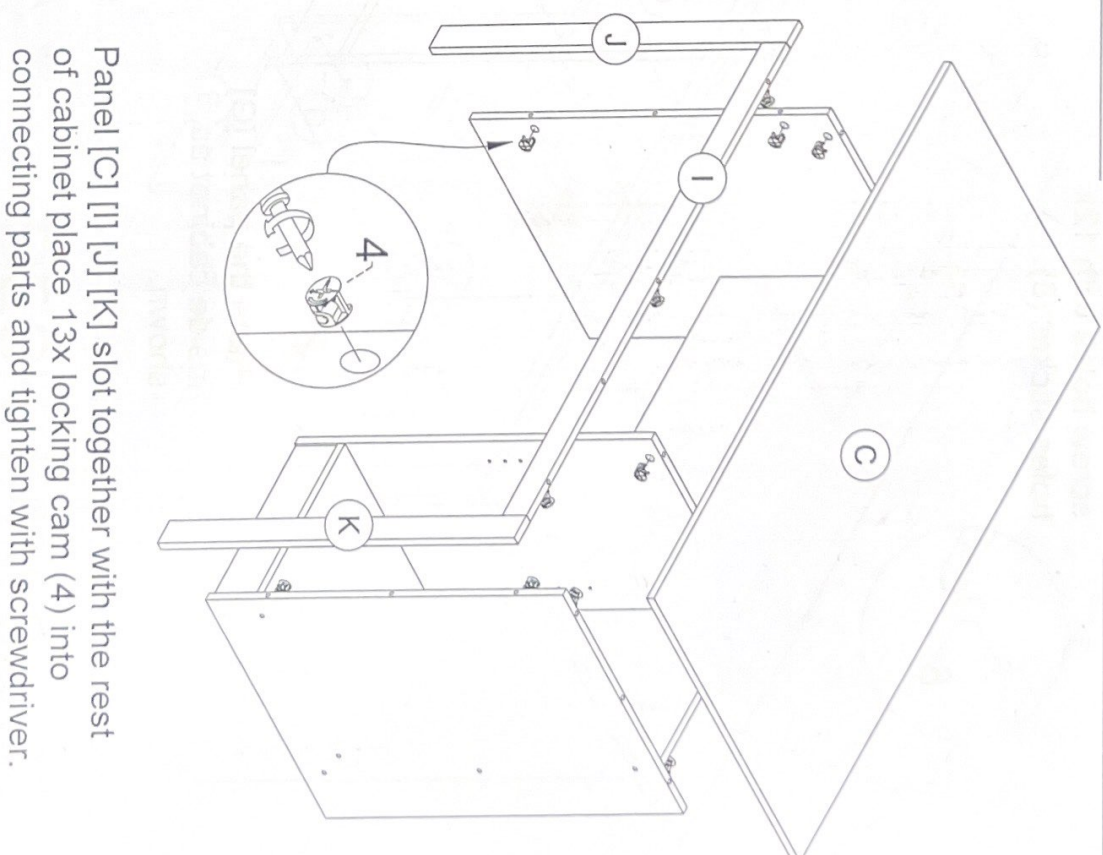

STEP 6

Close up both side screw holes with 12x holes sticker (8).

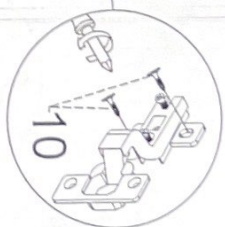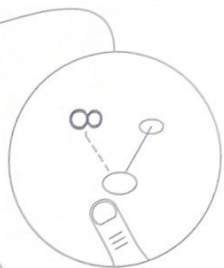

6		1 pc
7		2 pcs
8		12 pcs
10		4 pcs

Using 2x screw (10) for 1x hinges (9).

Place the panel [G] inside cabinet as shown.

Attach 1x handle (6) into panel [L] by 2x screw (7).

A. Lateral adjustment by screw adjusting

B. Vertical adjustment via slot in the mounting plate

C. Front-to-Back by the slacking the hinge arm mounting screw