

RETURN / DAMAGE CLAIM INSTRUCTIONS

1. **DO NOT** discard of the box / original packaging.

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

2. Take a photo of the box markings.

A photo of the markings (text) on the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

3. Take a photo / Video of Damage (if applicable).


A photo /Video of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

4. Send us an email with the images requested.


Email us directly with the attached images, order number (SOXXXX) and a description of your claim.

Auckland / Waikato / BOP Branch:	sales@tsbliving.co.nz
Christchurch Branch:	customersupport@tsbliving.co.nz
Wellington Branch:	wellington@tsbliving.co.nz


Step 1 : Tighten the legs (F) to both arm (A) as shown.

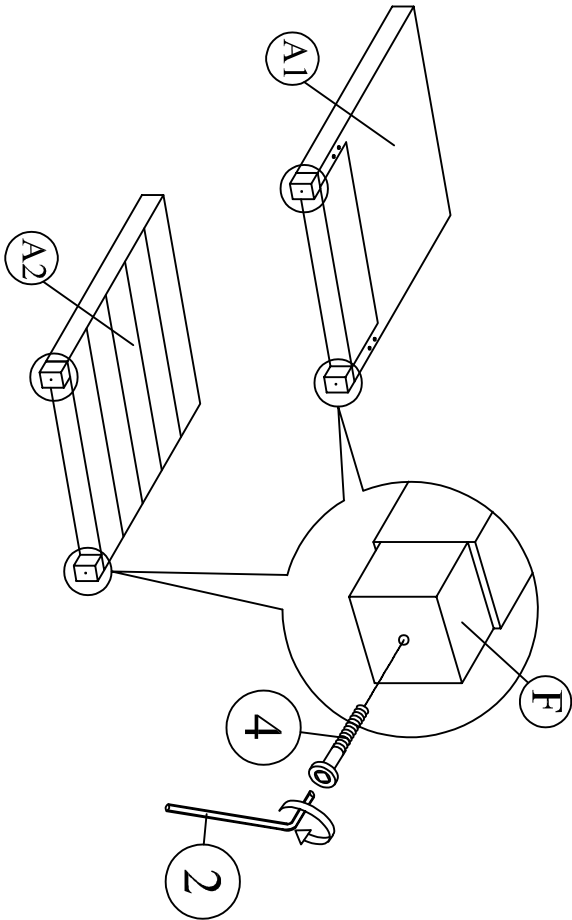


Step 2 : Attach side rail (D) & (E) to arm (A) by pushing the bracket down to fit it.

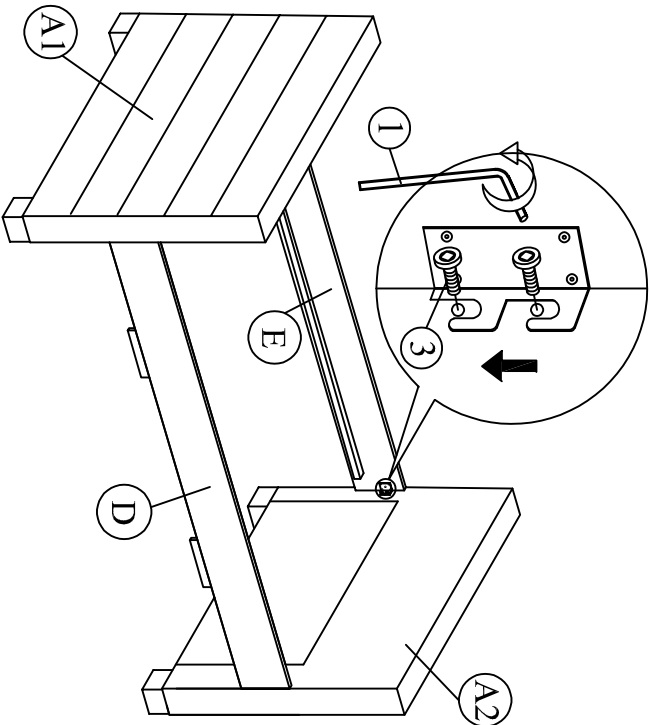




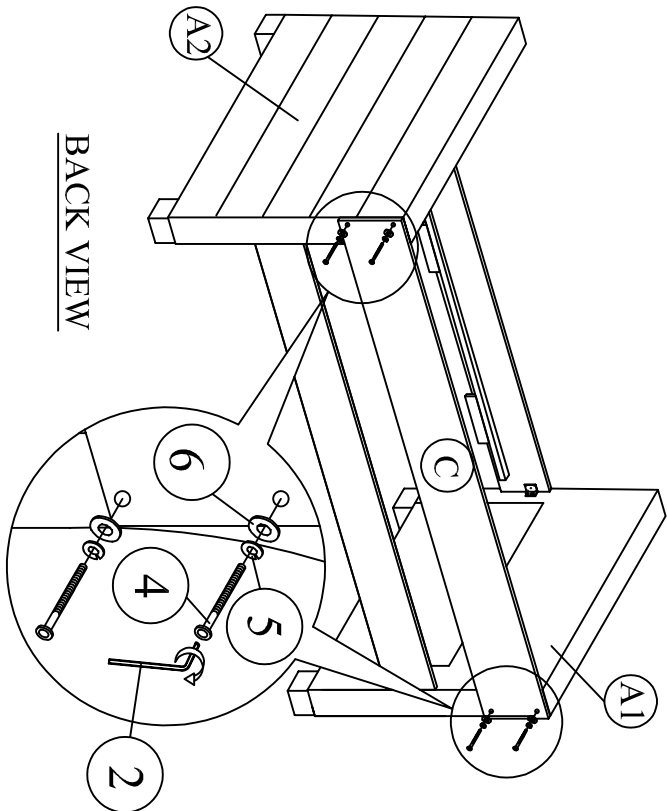





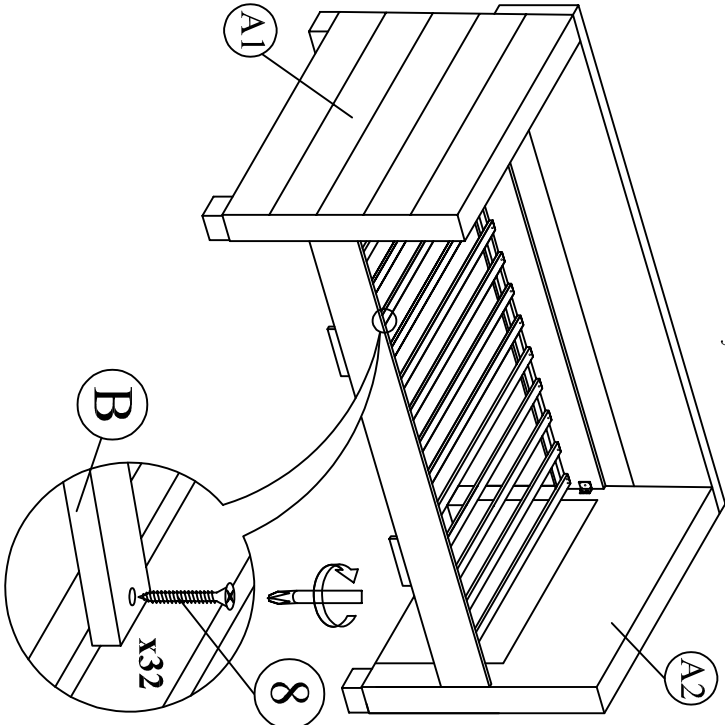













Step 3 : Attach the Back Panel (C) to the arm (A1+A2) as shown.




Step 4 : Install the slats to side rail. Tighten the slats with CSK screw (8). The distance of the slats should be sufficient to obtain desirable bed stability.




MODEL : CF 9334 (3')			
A		A1 Arm	A2 2 pcs
B		927mm Slat 13 Pcs	1 pc
C		Back Panel	1 pc
D		Front Side Rail (PU)	1 pc
E		Back Side Rail	1 pc
F		Legs Wooden Leg 50 x 50 x 50(H)	4 pcs
G		Trundle Front Panel (PU)	2 pcs
H		Trundle Back Panel	2 pcs
I		Trundle Side Panel	4 pcs
J		Bottom Panel	2 pcs
K		Bottom Panel Big Support	4 pcs
L		Bottom Panel Small Support	2 pcs
Packing Hardware (1)			
1		M5 x 70 mm	1 pc
2		M4 x 100 mm	1 pc
3		JCBB M8 X 20	8 pcs
4		JCBC M6 X 50	8 pcs
5		SPRING WASHER	4 pcs
6		FLAT WASHER	4 pcs
7		CSK M4 x 16 mm	32 pcs
8		CSK M4 x 32 mm	54 pcs
9		CSK M4 x 50 mm	16 pcs
10		Roller	8 pcs
11		Power Nail 68	32 pcs

BACK VIEW


Step 5 : Tighten the side panel (I) to the front panel (G) and back panel (H) with screws (9) using screw driver (not included).

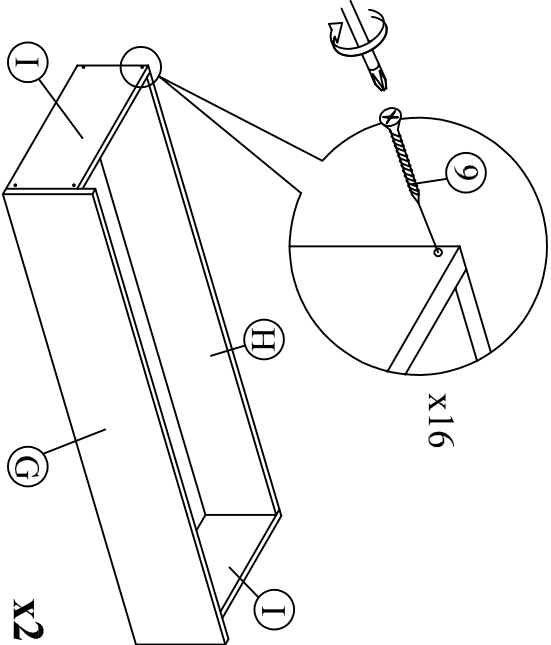


Step 6 : Slide the footboard bottom panel (J) to the set up drawer.

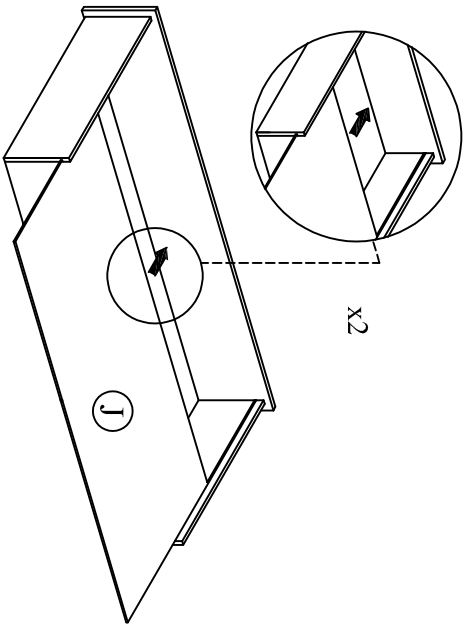

Step 7 : Tighten the bottom panel support (K & L) with screws (8) using screw driver (not included). Attach the bottom panel with Nail (11) using the hammer (not included).

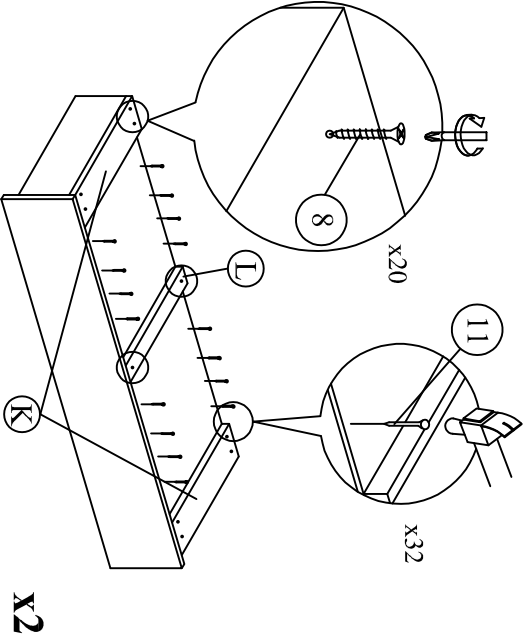

Step 8 : Tighten the roller (10) with screws (7) using screw driver (not included).

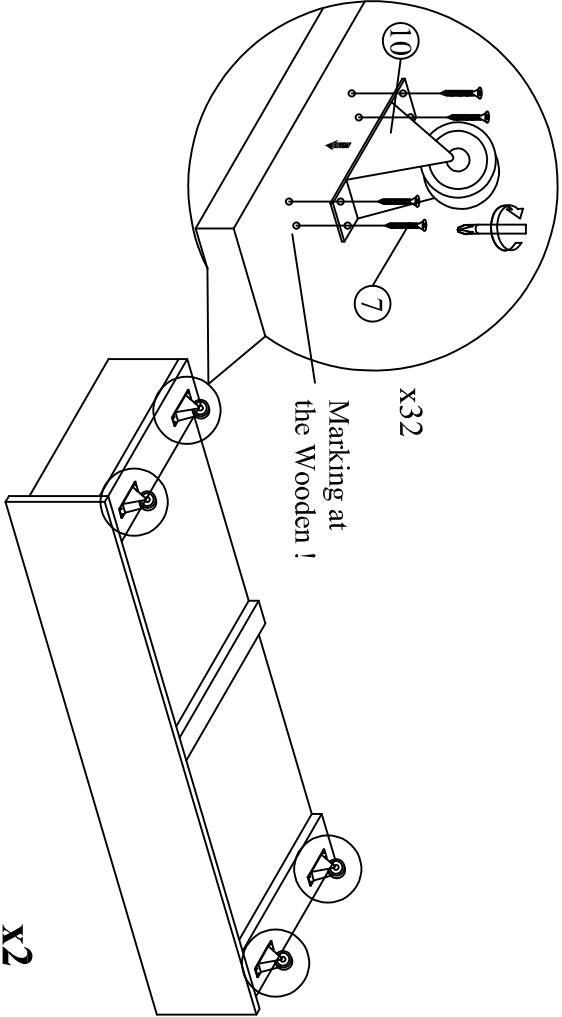

Step 9 : Assembly is complete.

