


Assembly Instructions

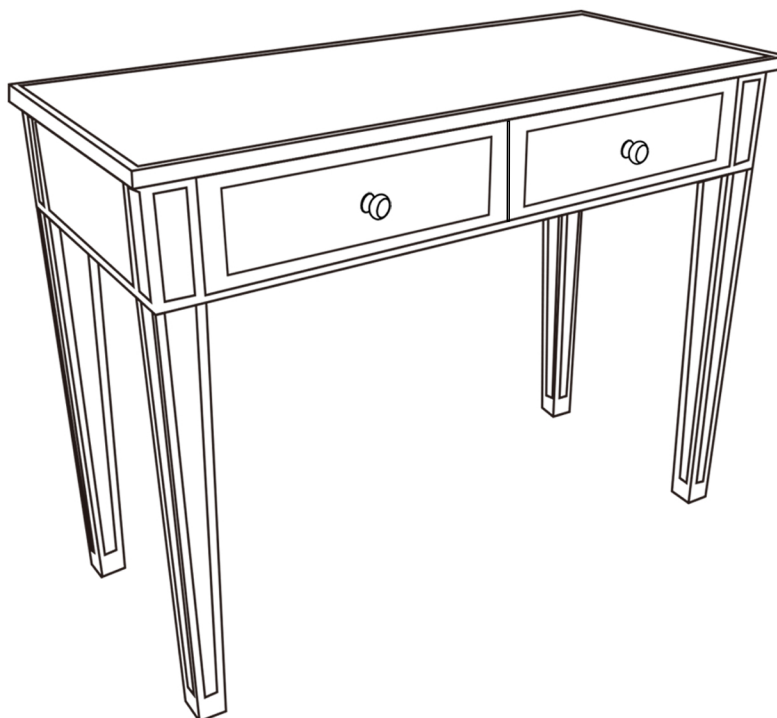

WARNING















Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.


This is a permanent label.

Do not remove!


Hardware List

| | | | | | | | |
|---|---|-----------------|------|---|---|-----------------|------|
| A |  | Bolt | 8pcs | B |  | Allen wrench | 1pc |
| C |  | Anchor | 1pc | D |  | Eyelet Screw | 1pc |
| E |  | Washer | 8pcs | F |  | Cable tie | 1pc |
| G |  | Short screw | 2pcs | H |  | Screw for knob | 2pcs |
| I |  | Knob | 2pcs | J |  | Polishing cloth | 1pc |
| K |  | Plastic bracket | 1pc | L |  | Sleeve | 2pcs |

Panel List

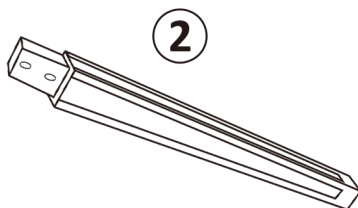


Leg (4pcs)

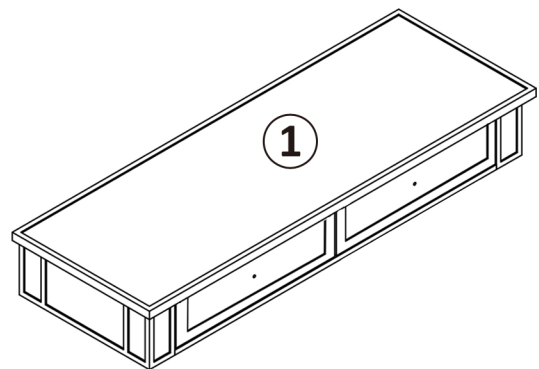

Mirrored cabinet (1pc)


Step1

- 1.Remove drawers from table top① make sure to turn drawer stopper to the horizontal direction as shown,so that drawers can be removed.
- 2.Face down the mirrored cabinet① on the soft carpet, then connect legs② to table top as shown,using bolts(A),washers(E) and allen wrench(B).

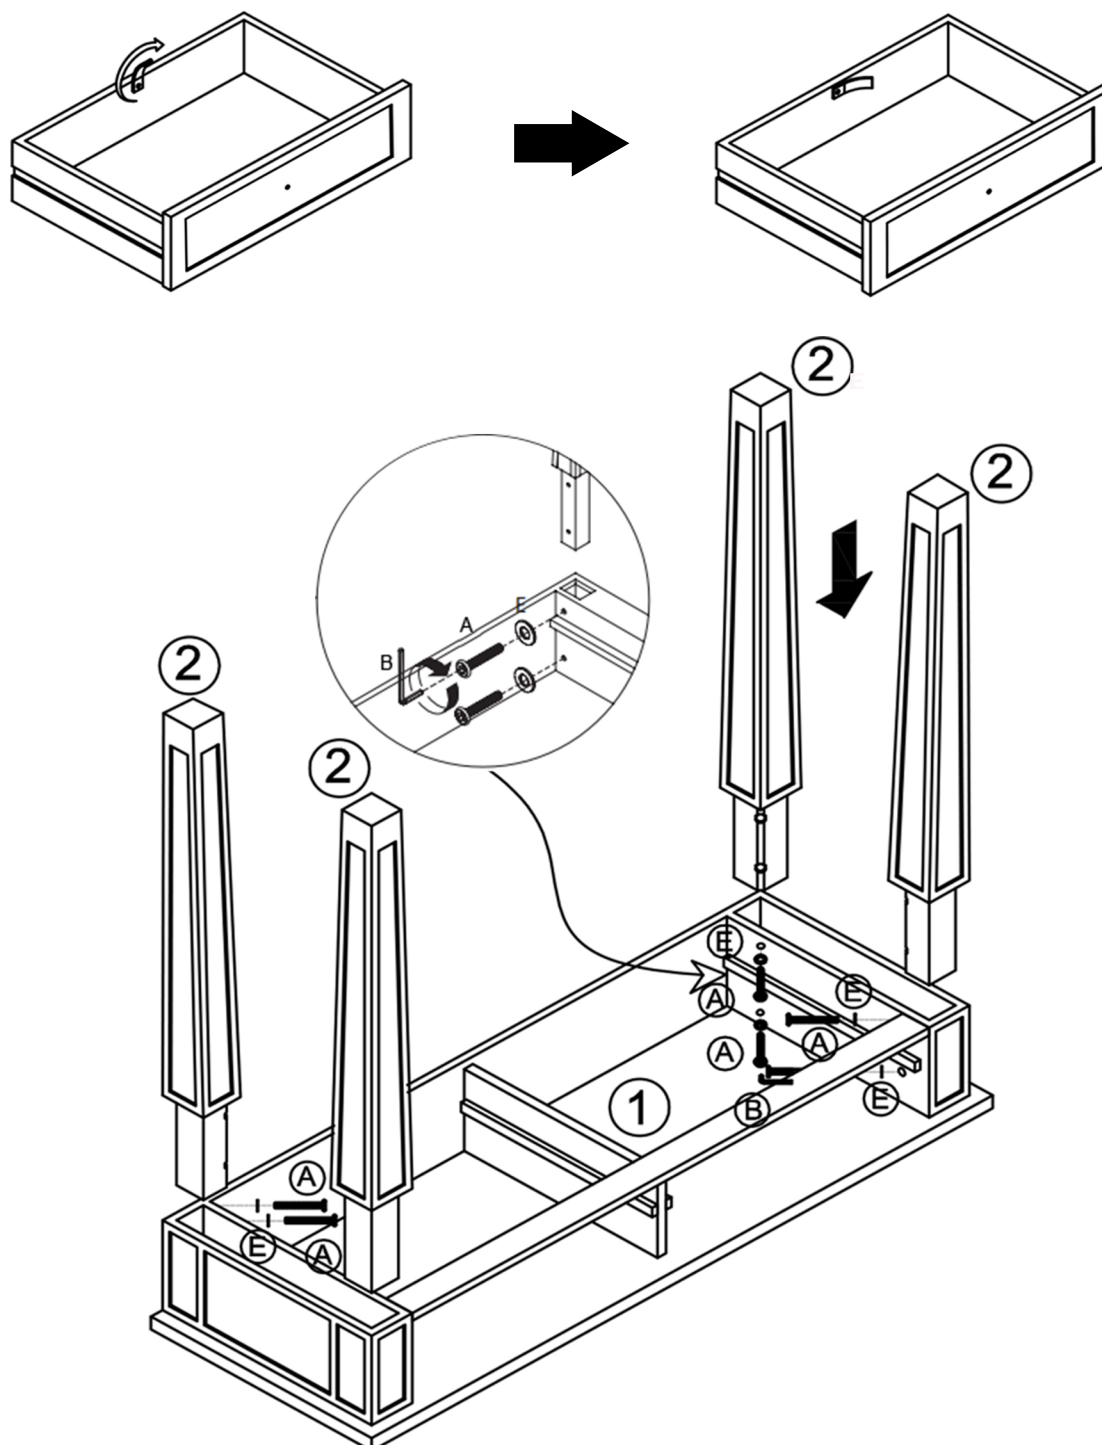

Step2

1. Move knob(I) from inside of drawer to outside of drawer using screwdriver.
2. Move screw(H) from outside of drawer to inside of drawer.
3. Knob(I) needs to be installed with sleeve (L) as shown.
4. Put drawers into table top and turn drawer stopper to vertical direction as shown.

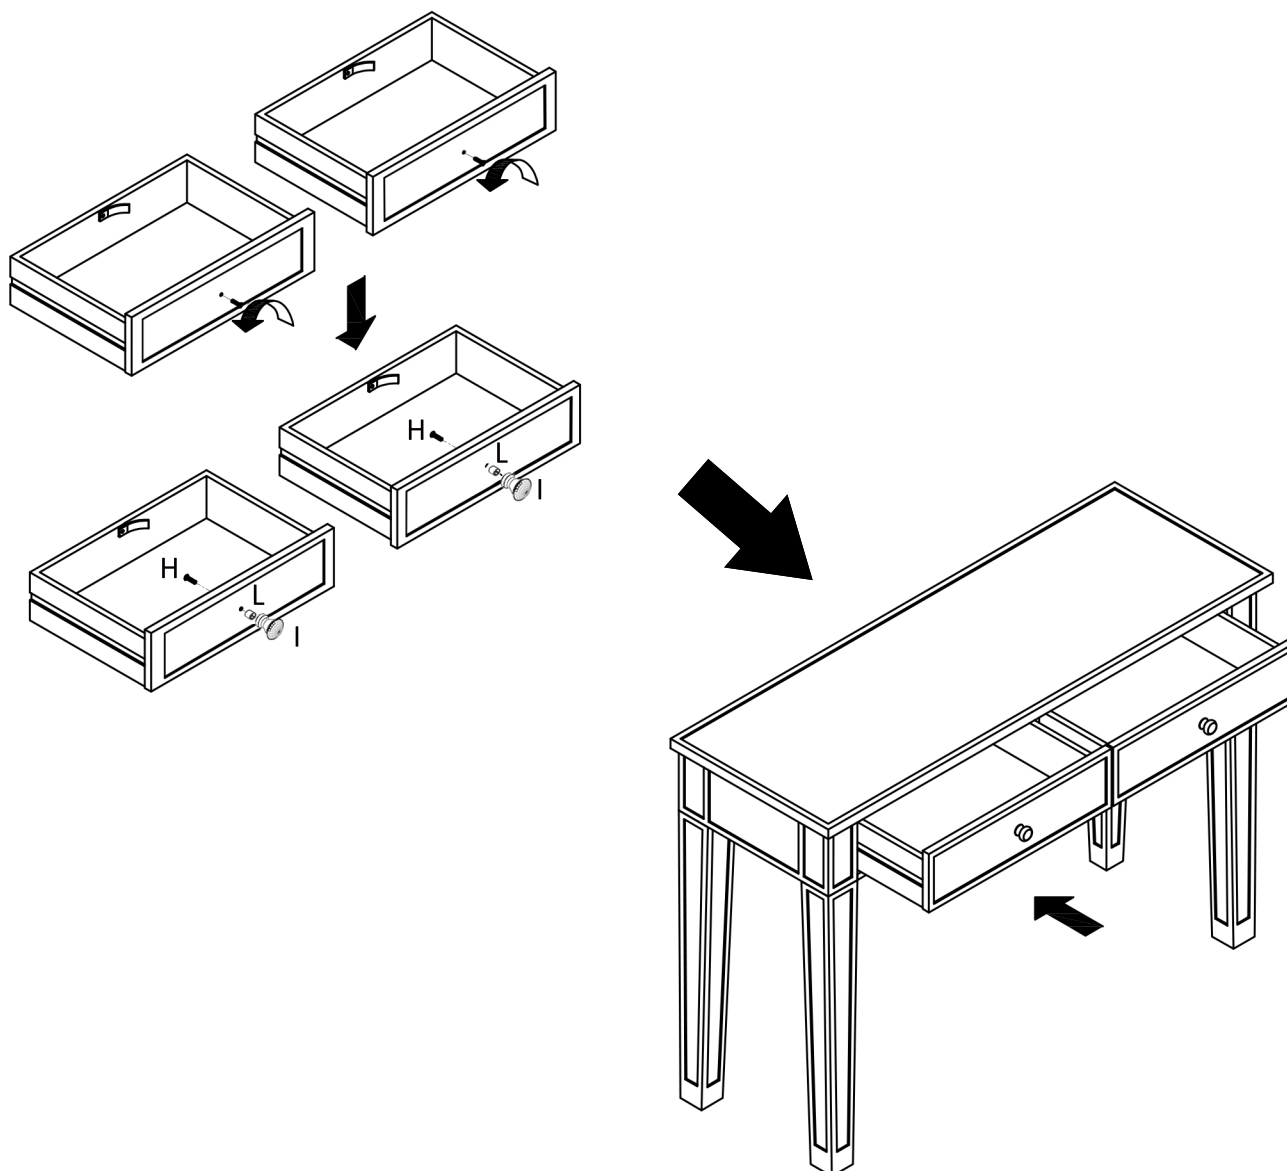

Step3

- 1.Connect plastic bracket(K) to back of the unit as shown using short screw(G).
- 2.Insert cable tie(F) into plastic bracket(K) as shown.
- 3.Drill hole slightly and insert anchor(C) into drywall and gently tap anchor(C) into hole.
- 4.Insert eyelet screw(D) into anchor(C) and fasten unit to wall using cable tie(F).

