



ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

ITEM NO/NO ARTICLE: CONSOLE/TABLE
182259

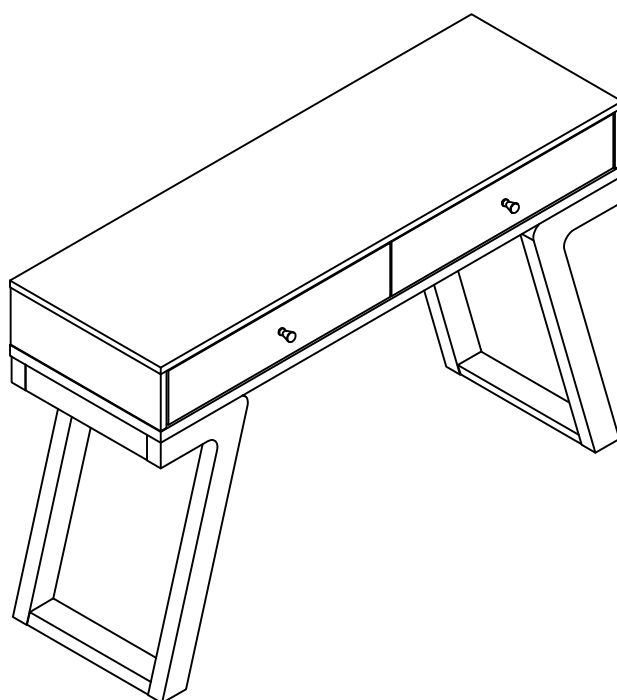

PARTS IDENTIFICATIONS / IDENTIFICATION DES PIECES






ITEM NO/NO ARTICLE: CONSOLE/TABLE
182259

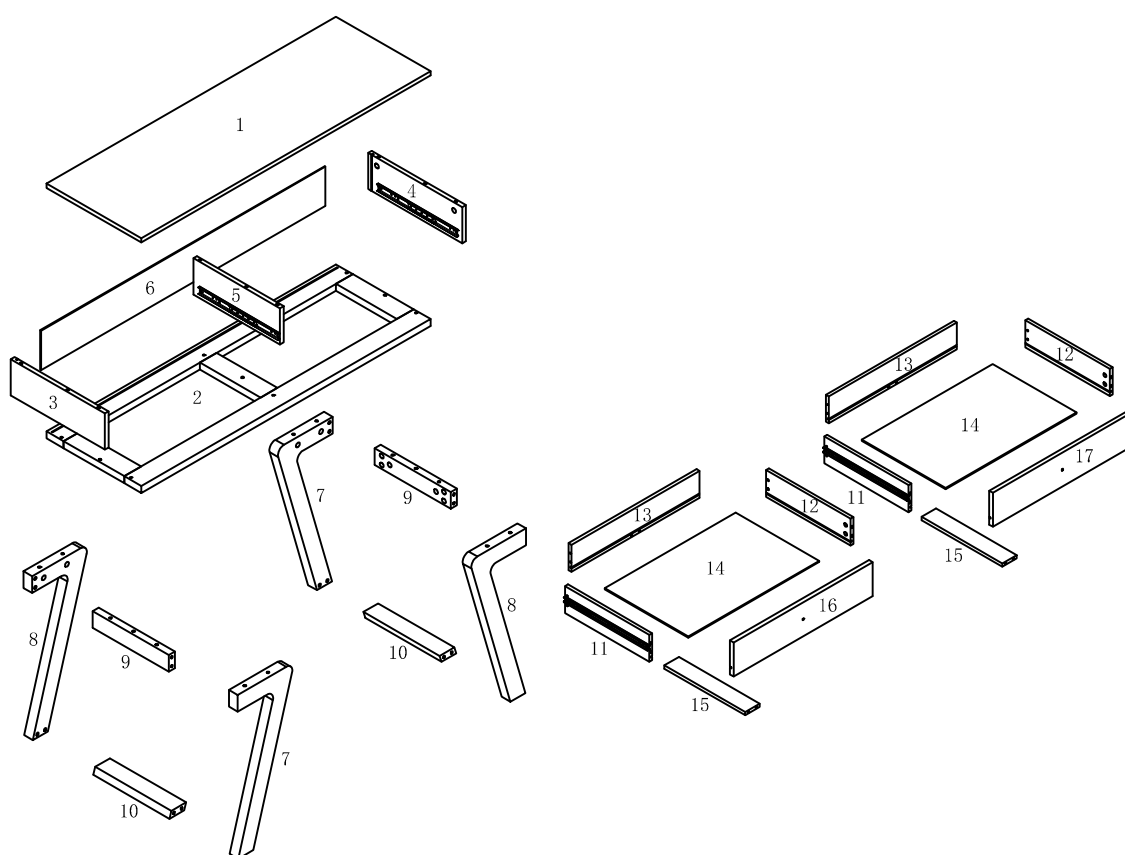


(1)	1pc	(7)	2pcs	(13)	2pcs
(2)	1pc	(8)	2pcs	(14)	2pcs
(3)	1pc	(9)	2pcs	(15)	2pcs
(4)	1pc	(10)	2pcs	(16)	1pc
(5)	1pc	(11)	2pcs	(17)	1pc
(6)	1pc	(12)	2pcs		

HARDWARE IDENTIFICATIONS/ IDENTIFICATION DU KIT D'ASSEMBLAGE

ITEM NO/NO ARTICLE: CONSOLE/TABLE
182259



A		L29	34pcs
B		15	34pcs
C		L20	8pcs
D		12	8pcs
E		8x25	8pcs
F		6x30	4pcs
G		4x30	12pcs
H		4x45	6pcs
I		M4x22	2pcs
J			2pcs
K		16	4pcs
L		22	20pcs
M		197×5×1	1pc
N		4x25	1pc
O		5x40	1pc
P		8 x 40	1pc
Q		12×12×1	2pcs

ITEM NO/NO ARTICLE: CONSOLE/TABLE
182259

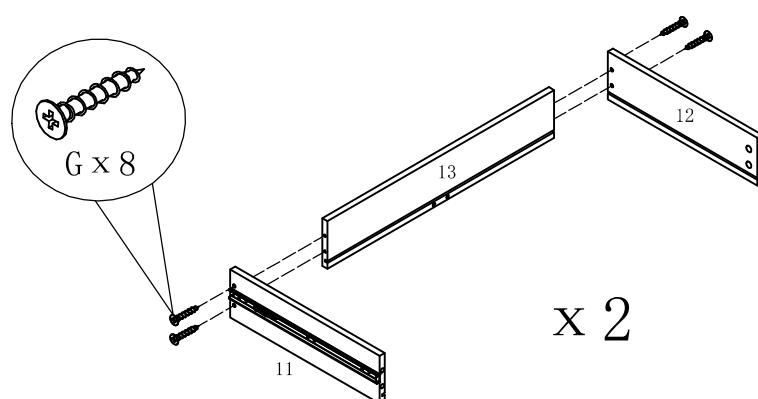


STEP 1 / ETAPE 1

STEP 2 / ETAPE 2

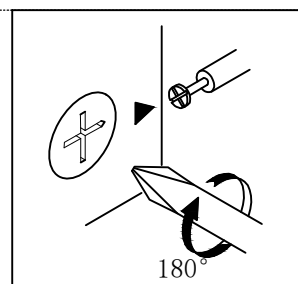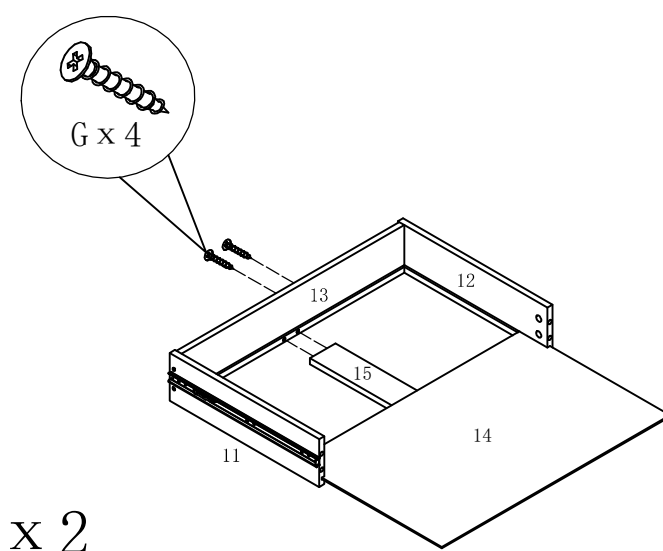


ITEM NO/NO ARTICLE: CONSOLE/TABLE
182259

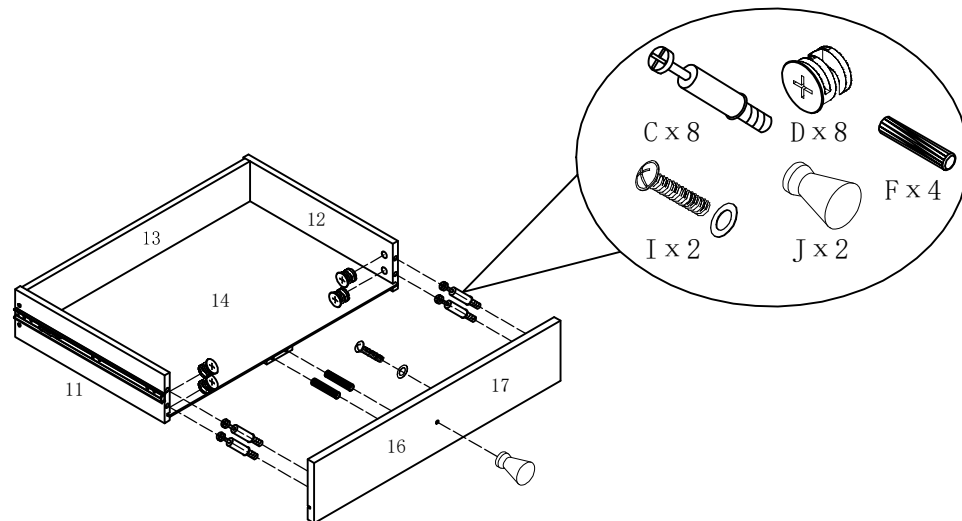


STEP 3 / ETAPE 3

STEP 4 / ETAPE 4

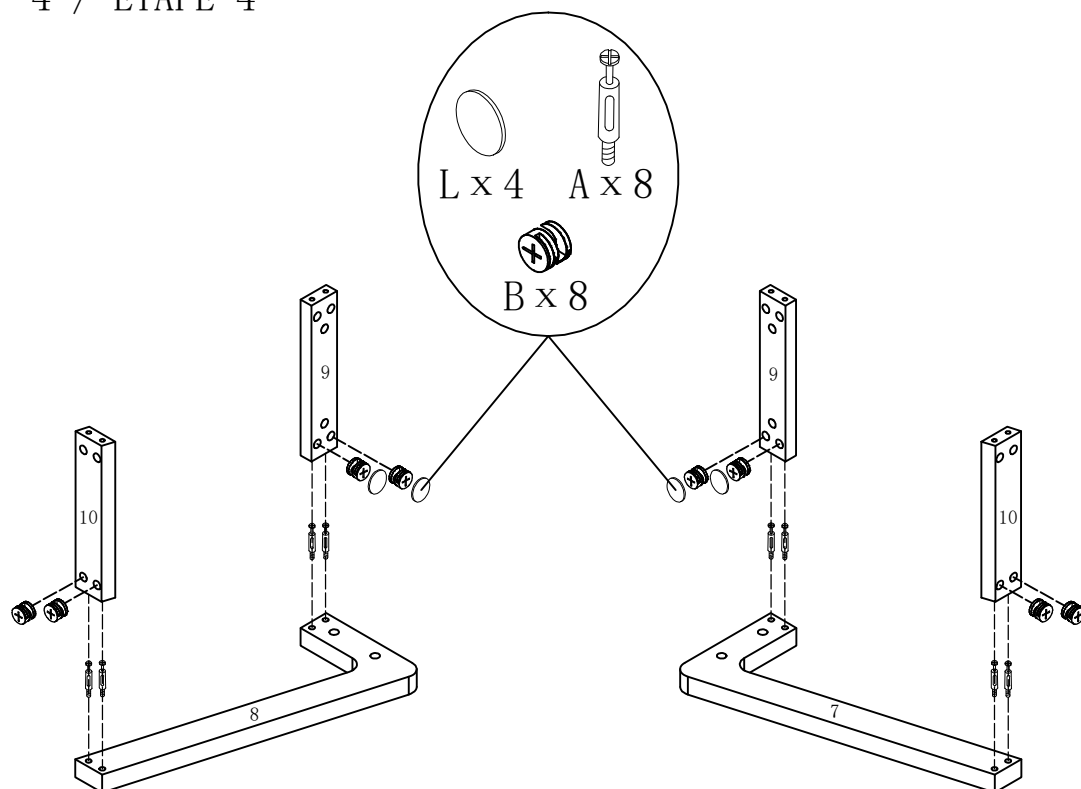


ITEM NO/NO ARTICLE: CONSOLE/TABLE
182259

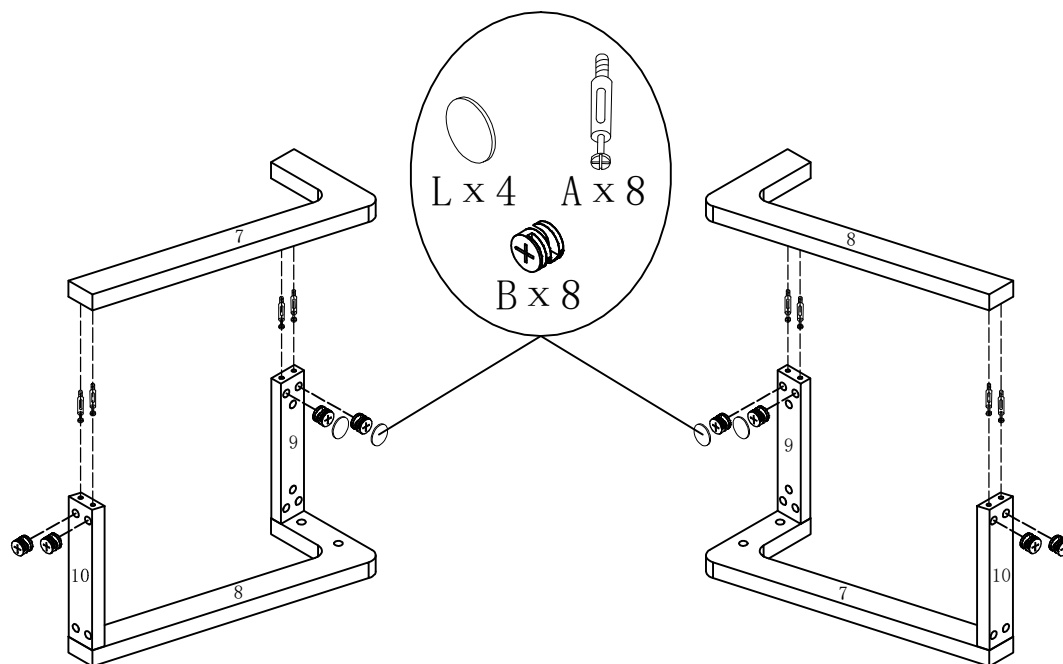


STEP 5 / ETAPE 5

STEP 6 / ETAPE 6

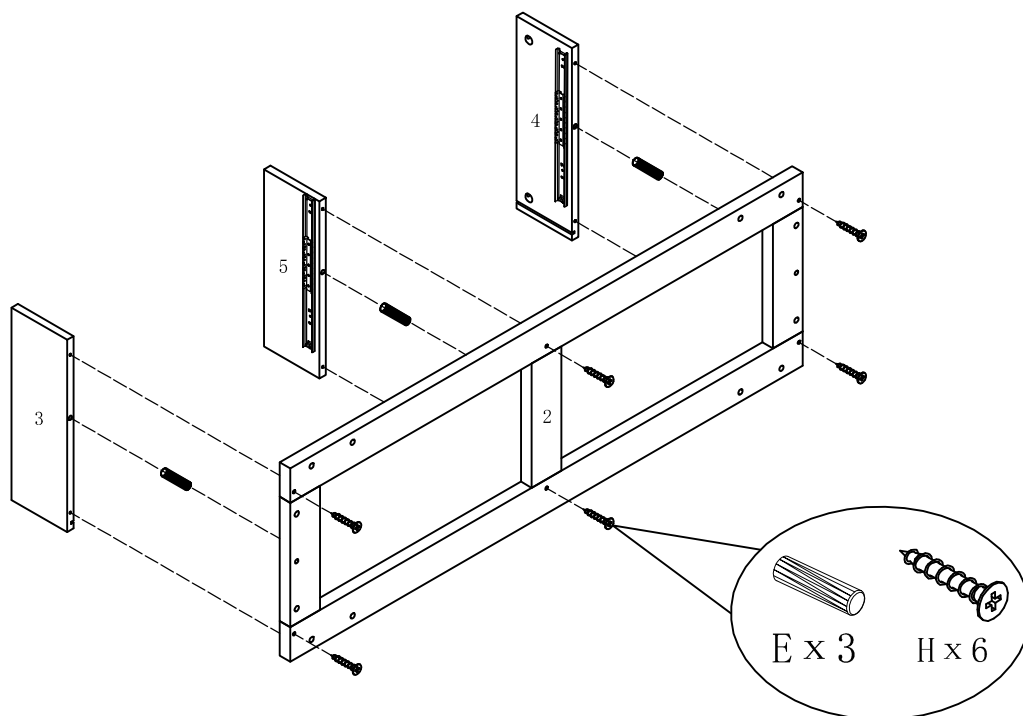


ITEM NO/NO ARTICLE: CONSOLE/TABLE
182259

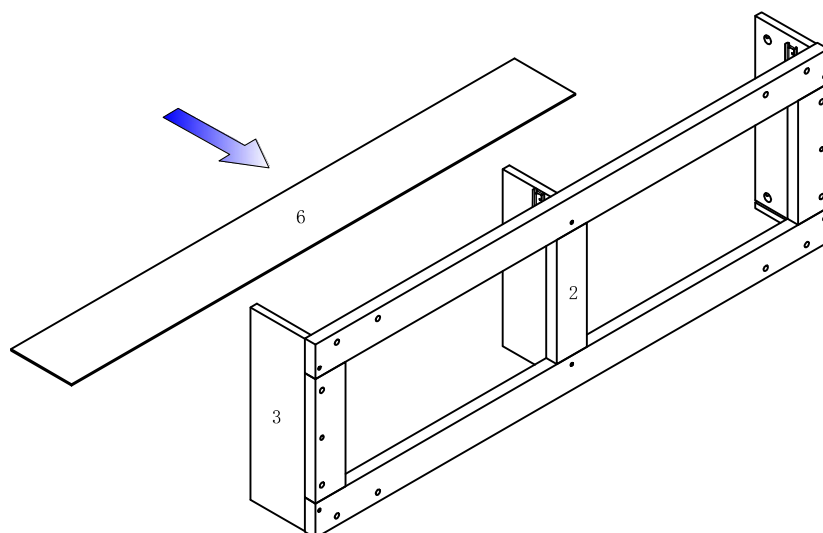


STEP 7 / ETAPE 7

STEP 8 / ETAPE 8

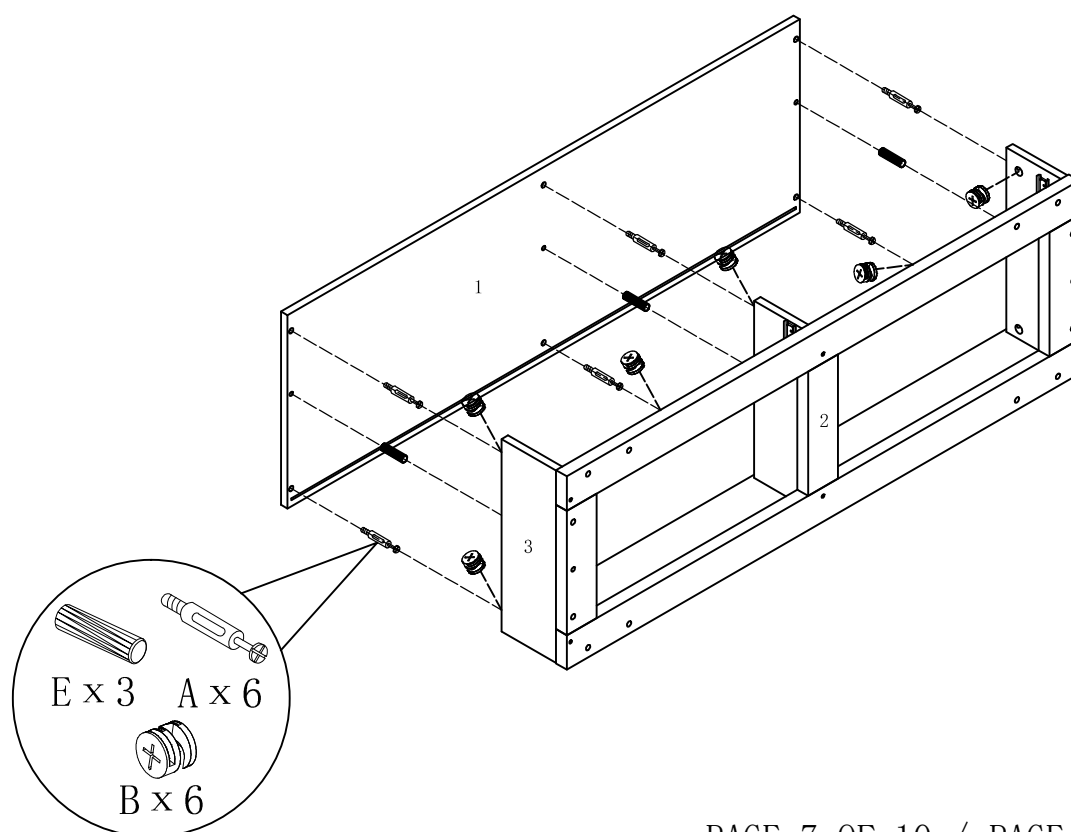


ITEM NO/NO ARTICLE: CONSOLE/TABLE
182259

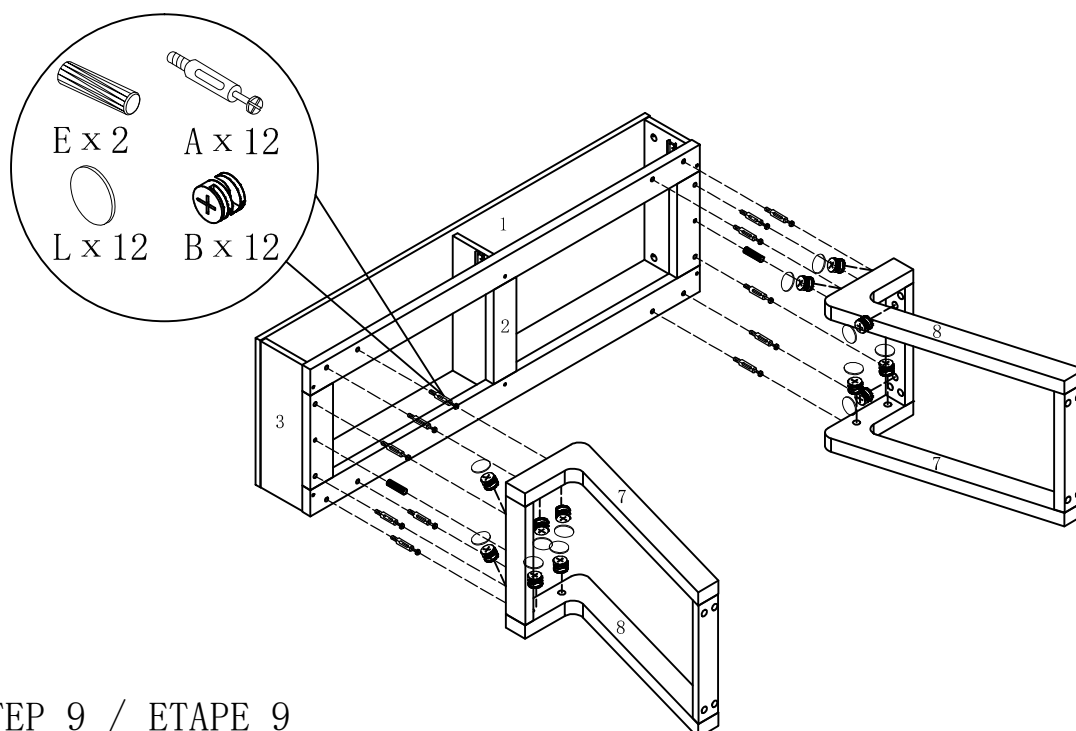


STEP 9 / ETAPE 9


STEP 10 / ETAPE 10

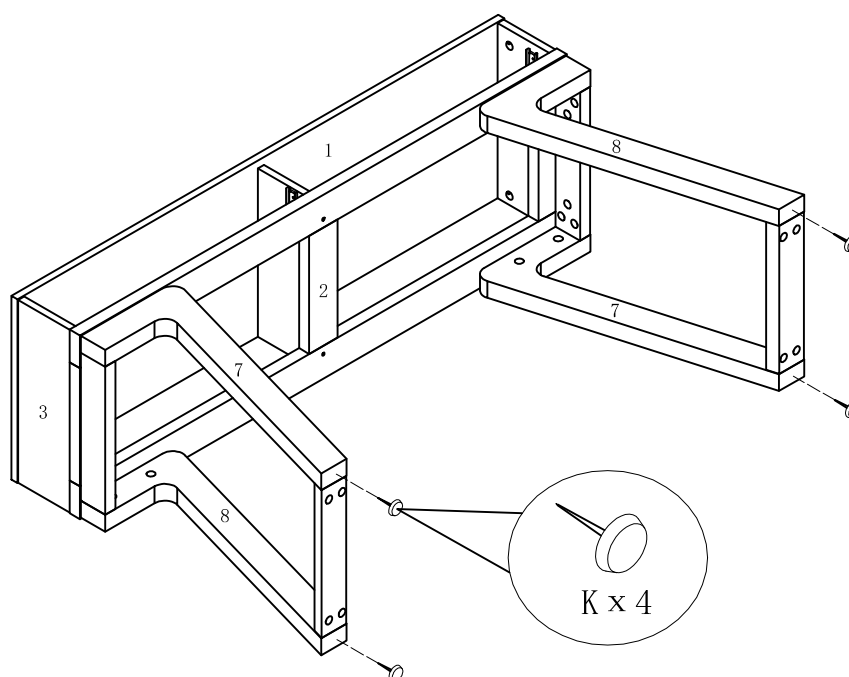


ITEM NO/NO ARTICLE: CONSOLE/TABLE
182259

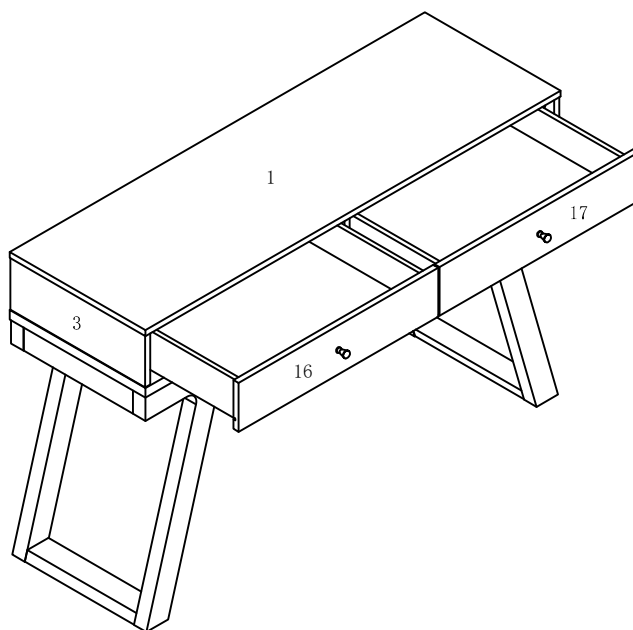

STEP 11 / ETAPE 11

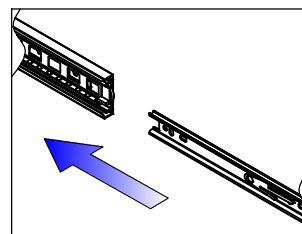


STEP 12 / ETAPE 12

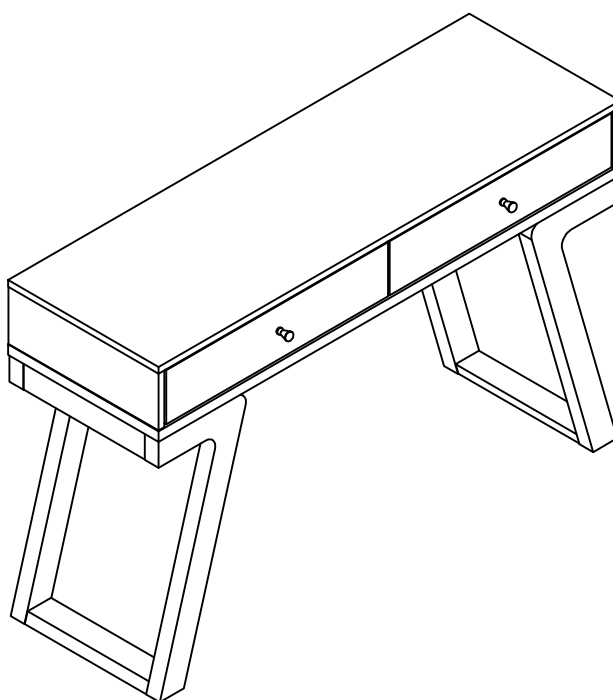


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :


TOOLS NEEDED (NOT INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS




DRYWALL SCREW $\phi 5 \times 40$ X 1PC



STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

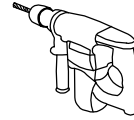


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1 / ETAPE 1

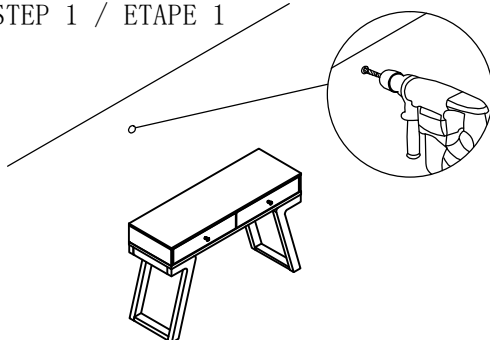


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2 / ETAPE 2

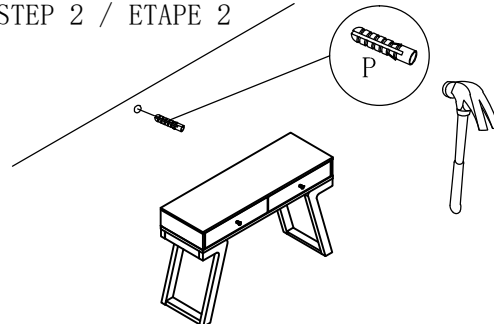


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3 / ETAPE 3

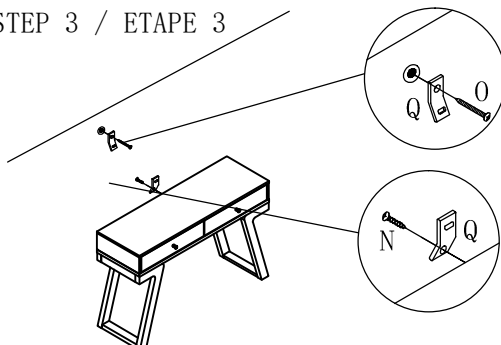

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item, along top edge.

STEP 4 / ETAPE 4

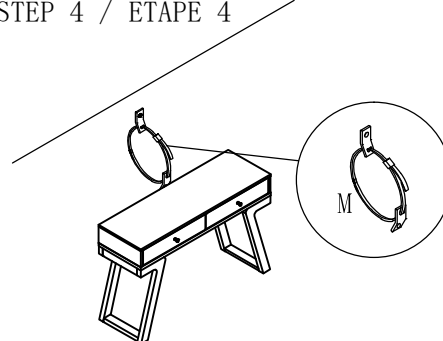

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.