

ASSEMBLING INSTRUCTIONS

CAUTION :

THIS ITEM IS MADE OF LAMINATED PARTICLE BOARD AND MEDIUM DENSITY FIBRE BOARD
TO BE ASSEMBLED ON A DRY, SOFT, SMOOTH AND CLEAN SURFACE . DO NOT USE DETERGENT OR CHEMICAL. AVOID DAMP AND SUNLIGHT.


STEP 1	CHECK YOUR HARDWARE	8188
	SCREW #9 X 1 1/2"	10 PCS
	WOOD DOWEL M6 X 25	11 PCS
	HOUSING D:15/9.5MM	4 PCS
	HOUSING D:12/9.5MM	2 PCS
	EURO BOLT	6 PCS
	METAL RUNNER	1 SET
	SCREW M4 X 12	12 PCS
	CORNER BLOCK	4 PCS
	SCREW M3 X 20	4 PCS
	POLE	4 PCS
	LEG	4 PCS
	STICKER	2 PCS

TOOLS REQUIRED:


	SCREW DRIVER		HAMMER
--	--------------	---	--------

STEP 2


WOOD DOWEL M6 X 25

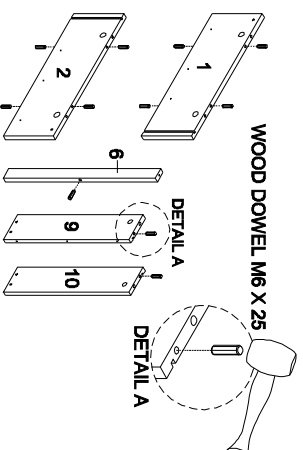

STEP 3

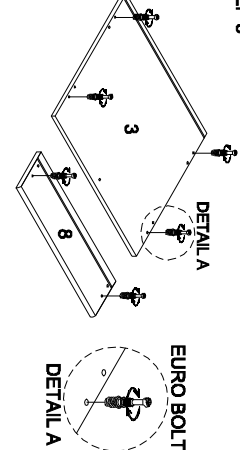


STEP 4

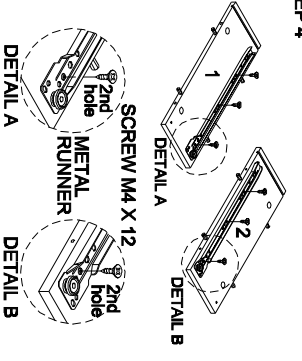


STEP 5

HOUSING D:12/9.5MM

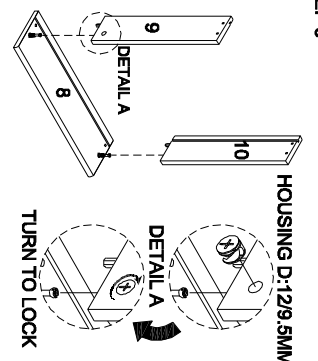


STEP 6

SCREW #9 X 1 1/2"

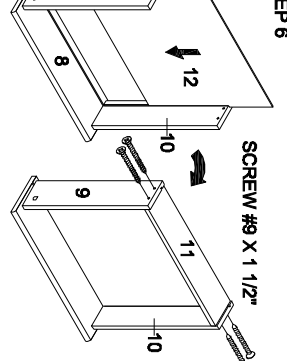


STEP 7

SCREW M4 X 12

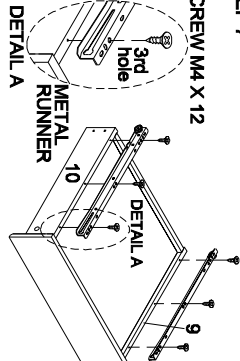


STEP 8

SCREW #9 X 1 1/2"

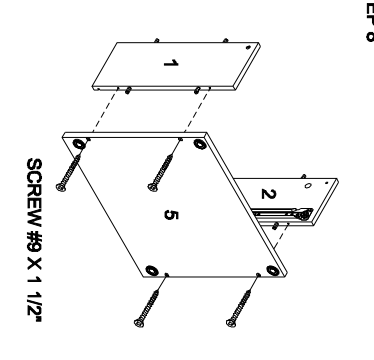


STEP 9

POLE

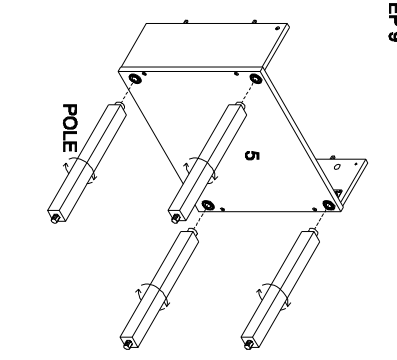


STEP 10

LEG

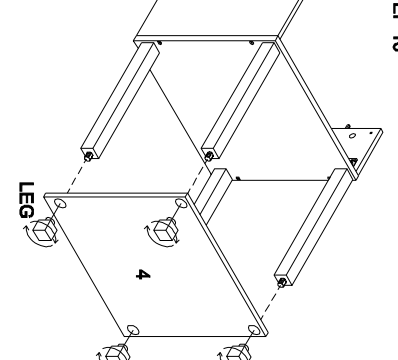


STEP 11

SCREW #9 X 1 1/2"

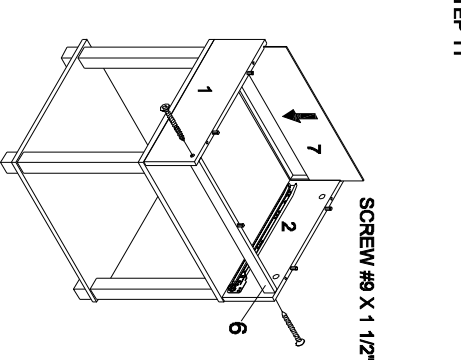


STEP 12

HOUSING D:15/9.5MM

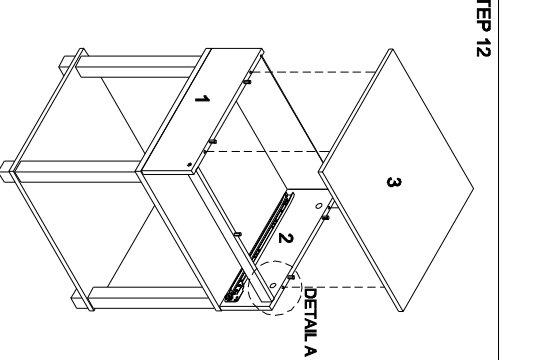


STEP 13

CORNER BLOCK

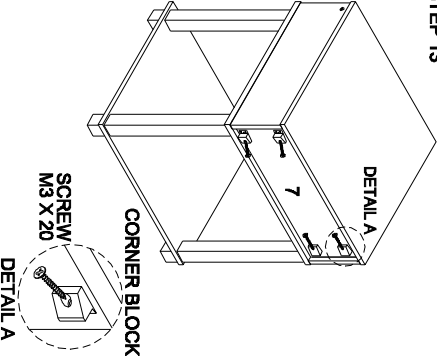

STEP 14

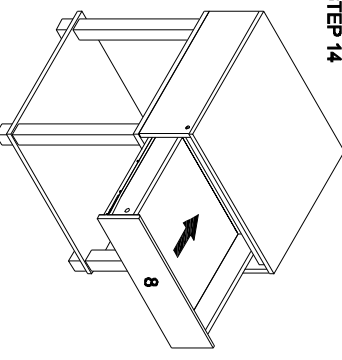

STEP 15

