
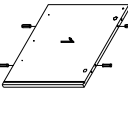
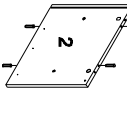



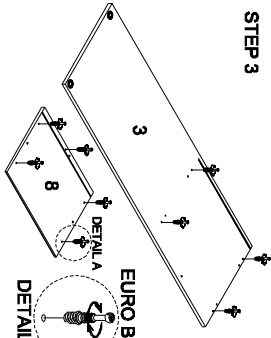
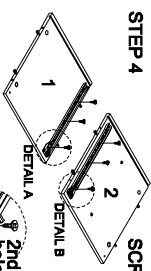
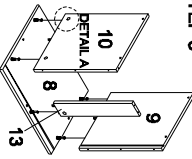
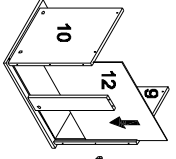
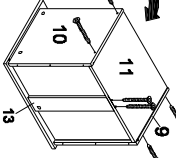
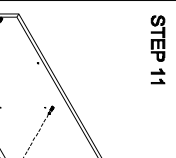
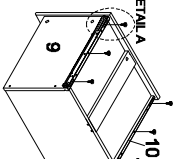
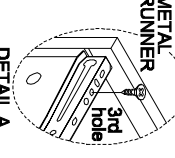
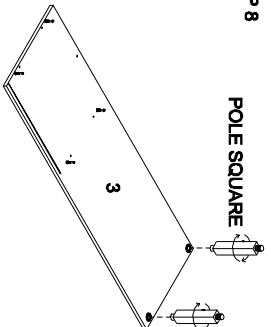
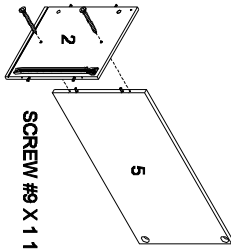
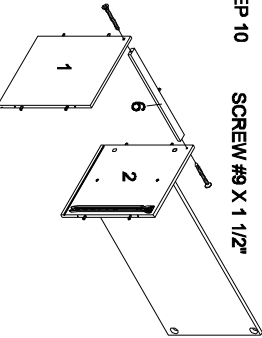
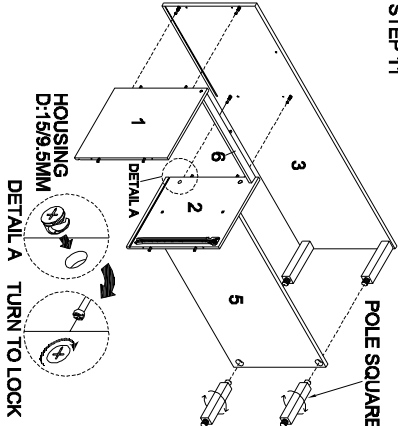
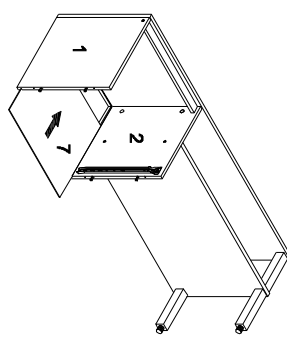
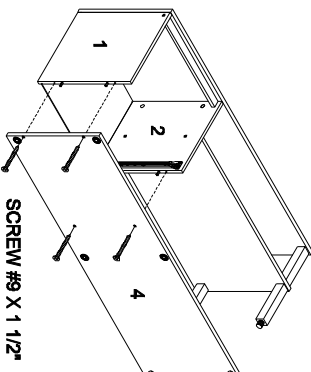
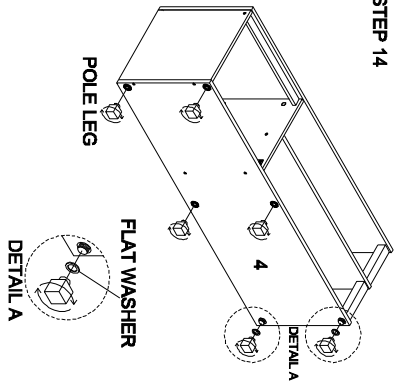
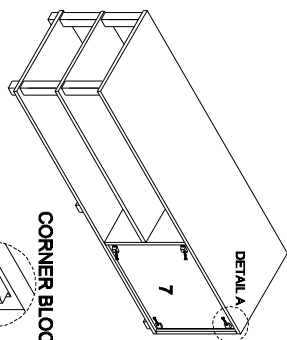
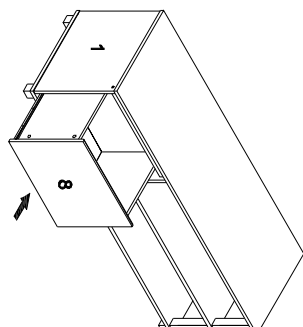


ASSEMBLING INSTRUCTIONS

CAUTION :

THIS ITEM IS MADE OF LAMINATED PARTICLE BOARD AND MEDIUM DENSITY FIBRE BOARD
TO BE ASSEMBLED ON A DRY, SOFT, SMOOTH AND CLEAN SURFACE . DO NOT USE DETERGENT OR CHEMICAL. AVOID DAMP AND SUNLIGHT.

STEP 1	CHECK YOUR HARDWARE	5119A		
	SCREW #9 X 1 1/2"	14 PCS		
	WOOD DOWEL M6 X 25	14 PCS		
	HOUSING D:159.5MM	4 PCS		
	HOUSING D:129.5MM	5 PCS		
	EURO BOLT	9 PCS		
	METAL RUNNER	1 SET		
	SCREW M4 X 12	12 PCS		
	CORNER BLOCK	4 PCS		
	SCREW M3 X 20	4 PCS		
	STICKER	2 PCS		
	POLE SQUARE	4 PCS		
	POLE LEG	6 PCS		
	FLAT WASHER	2 PCS		
TOOLS REQUIRED:				
	SCREW DRIVER			HAMMER
STEP 2				
WOOD DOWEL M6 X 25				
      				
STEP 3				
  				
STEP 4				
    				
STEP 5				
    				
STEP 6				
  				
STEP 7				
   				
STEP 8				
				
STEP 9				
				
STEP 10				
				
STEP 11				
   				
STEP 12				
				
STEP 13				
				
STEP 14				
   				
STEP 15				
 				
STEP 16				
				
STEP 17				
