

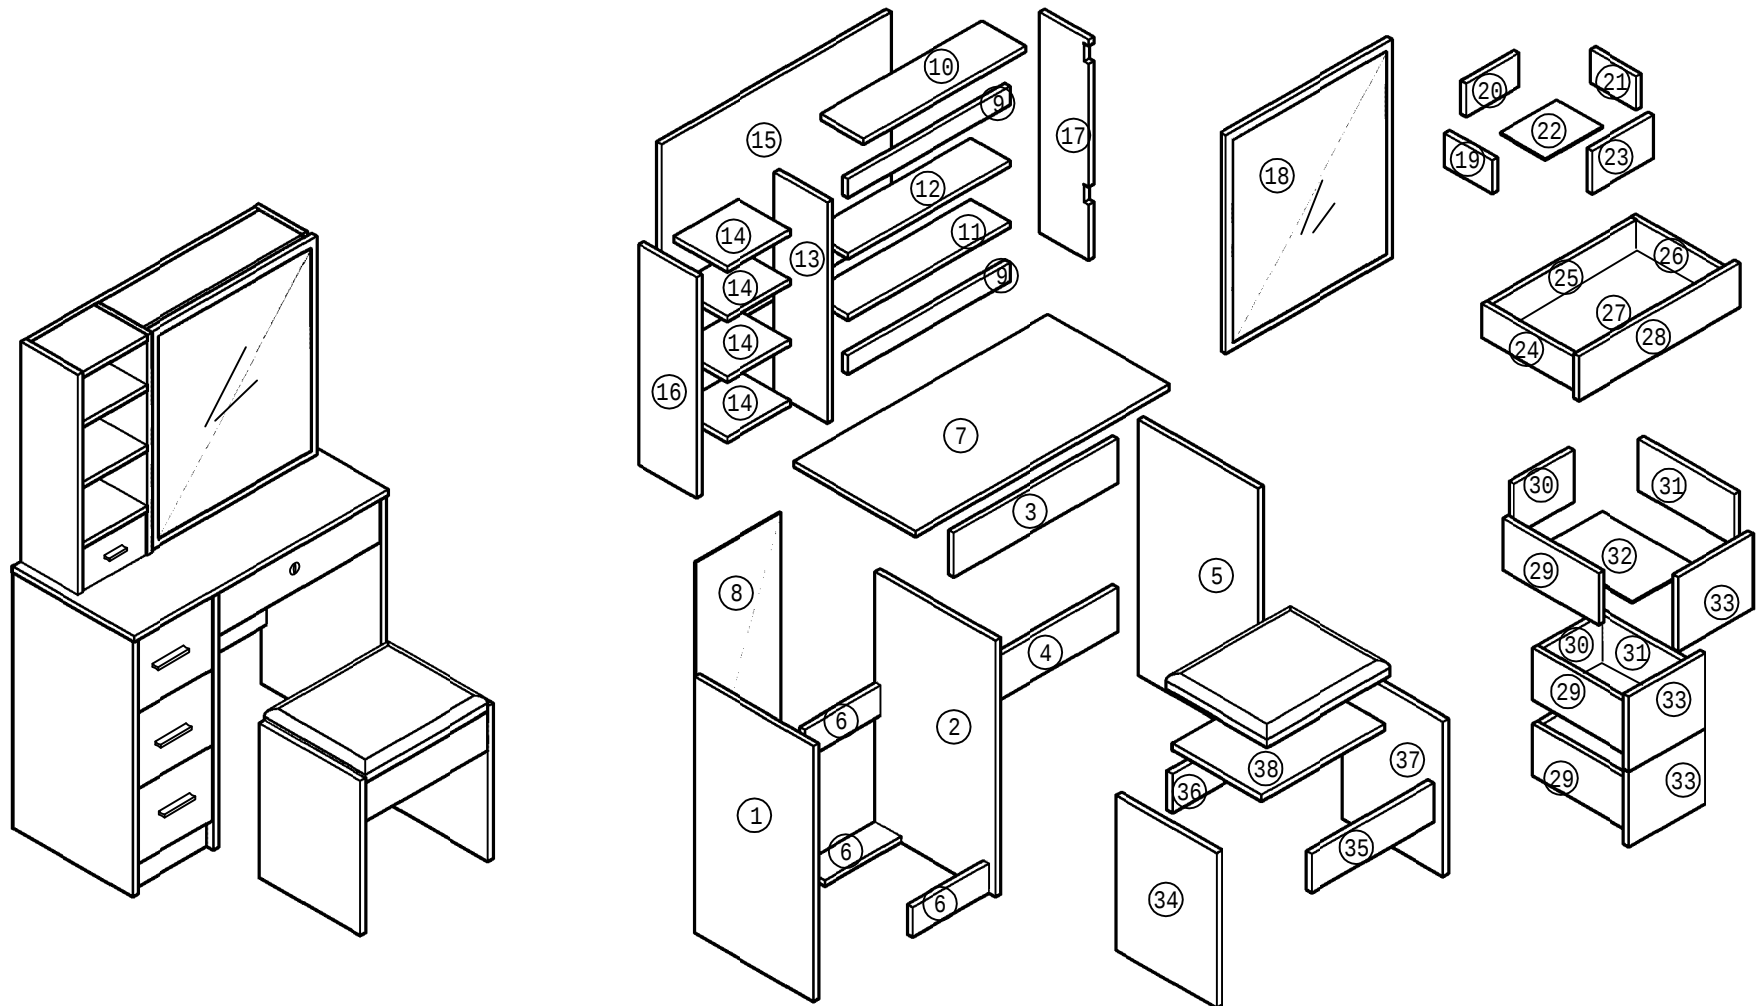









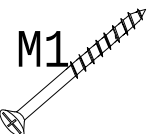


A 101pcs 	B 19pcs 	C 4pcs 	D 44pcs  14*3.5MM	E 20pcs  35*3.5MM	F 10pcs 	G 1pcs  16*3.5MM
H 30pcs 	I 1pcs 	J 1pcs J1  J2 	K 3pcs 	L 2pcs L1  L2  L3  L4  14*3.5mm L5 	M 6pcs M1  M2 	

1





Remove C2 from C1
by sliding it out and
pressing on the
catch as indicated.

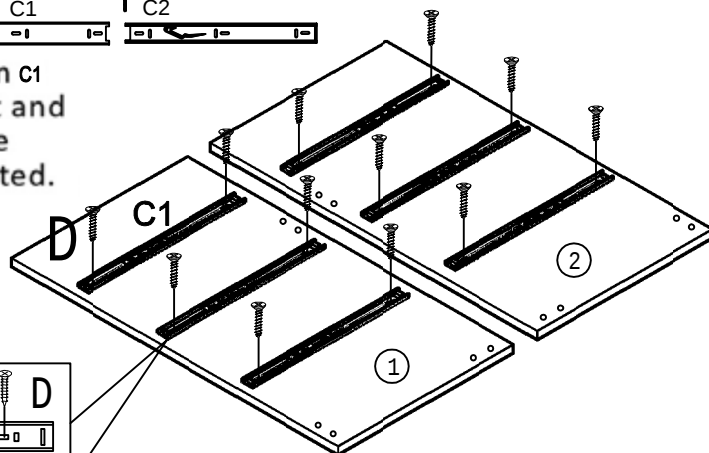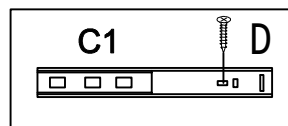


C1*6 D*12

2

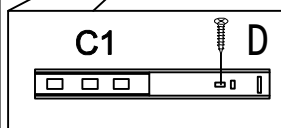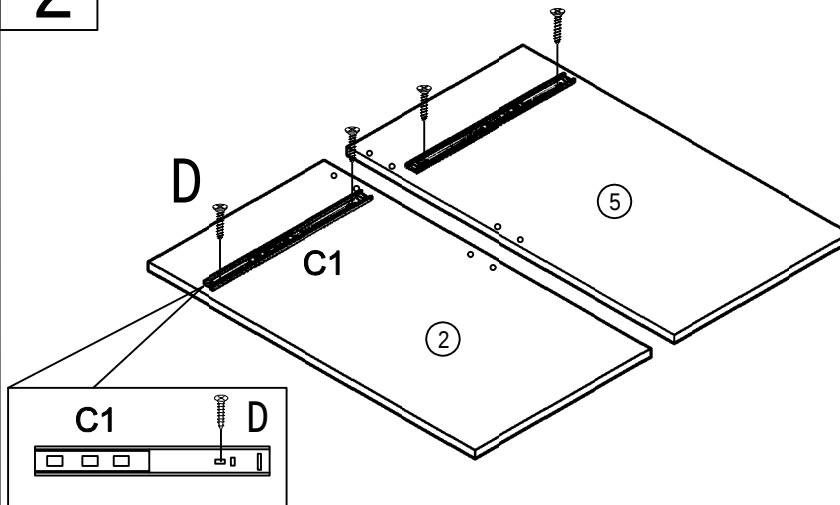

C1*2 D*4


3

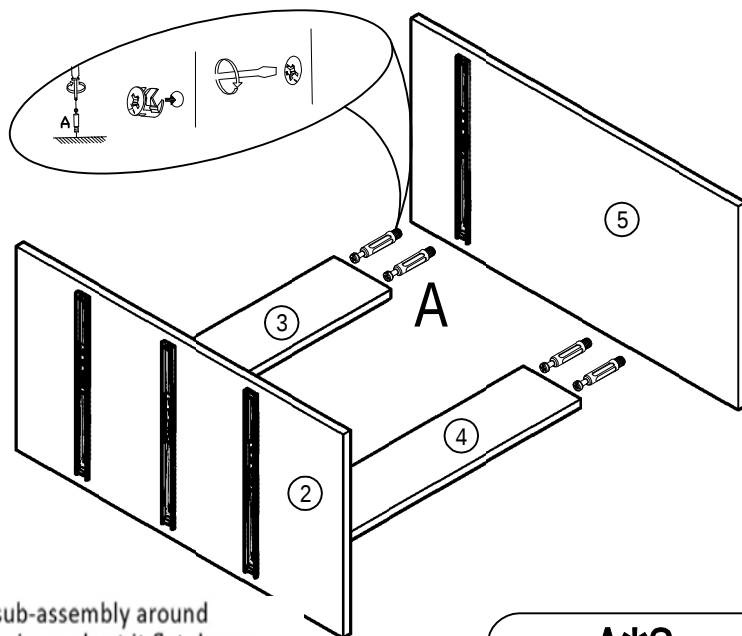

Turn the sub-assembly around
anti-clockwise and set it flat down
with the shelf opening facing the front


A*8

4

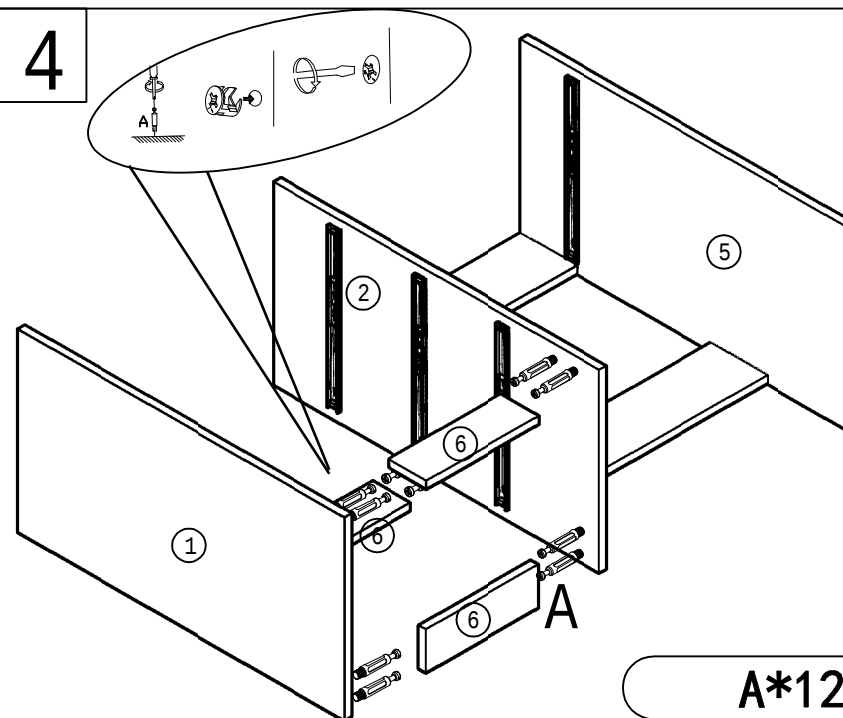


A*12

5

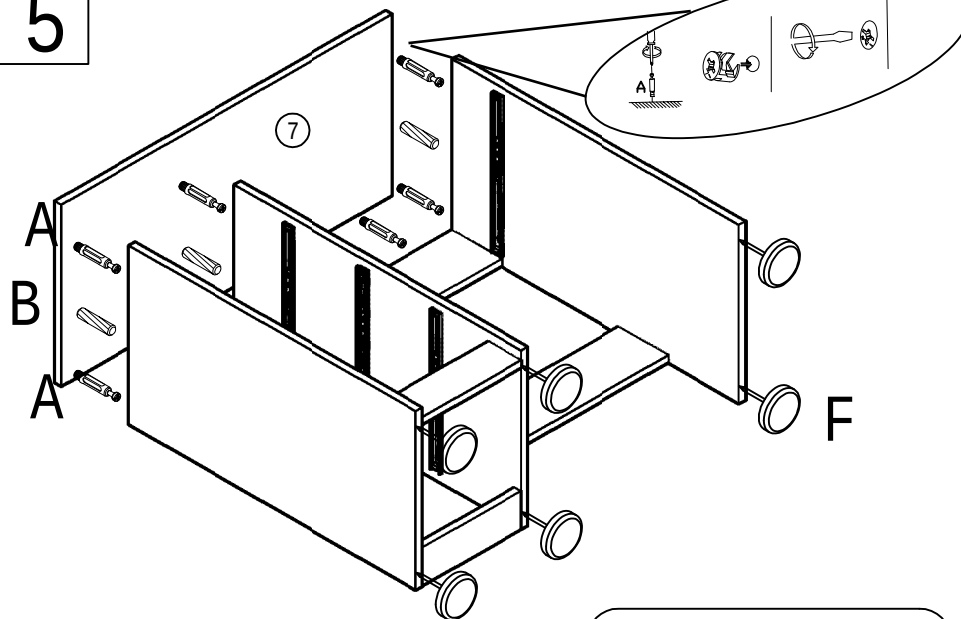


A*8 B*3 F*6

6

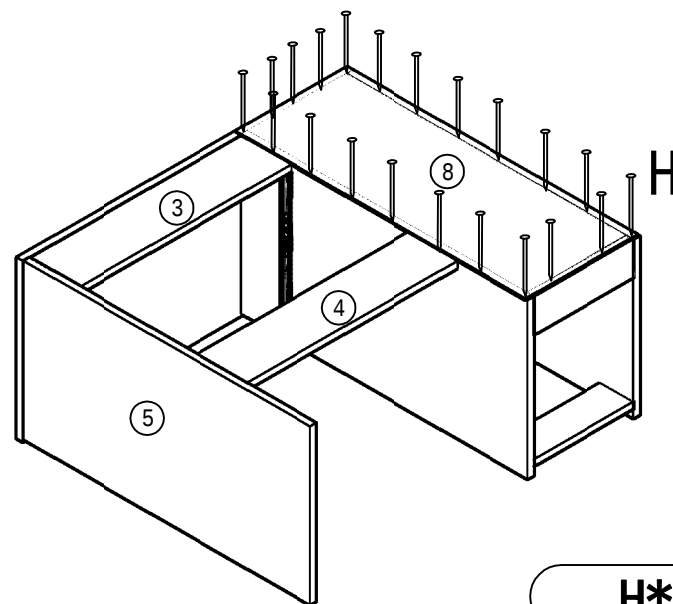


H*30

7

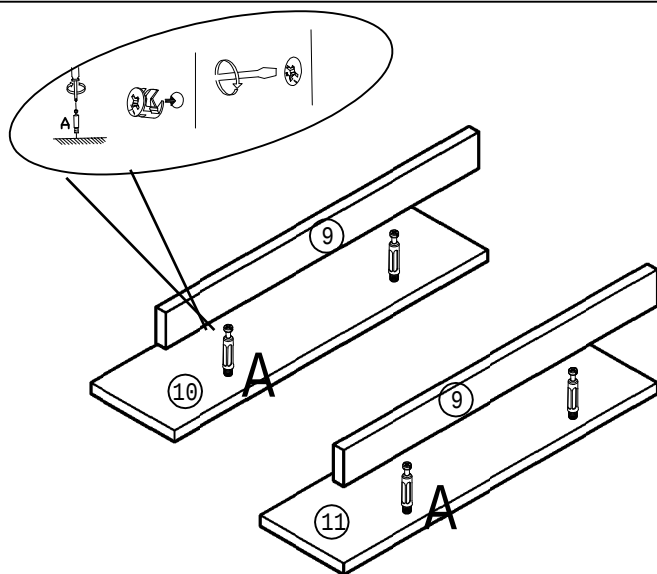


A*4

8

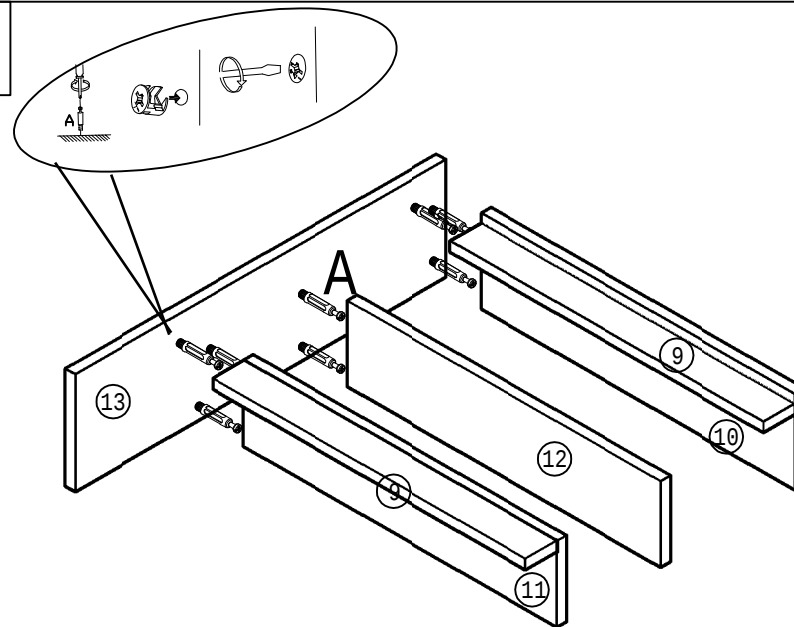


A*8

9

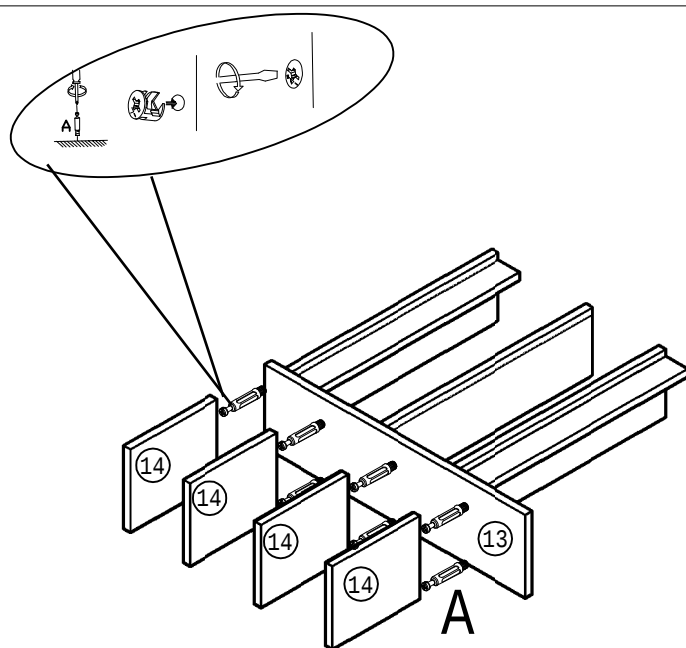


A*8

10

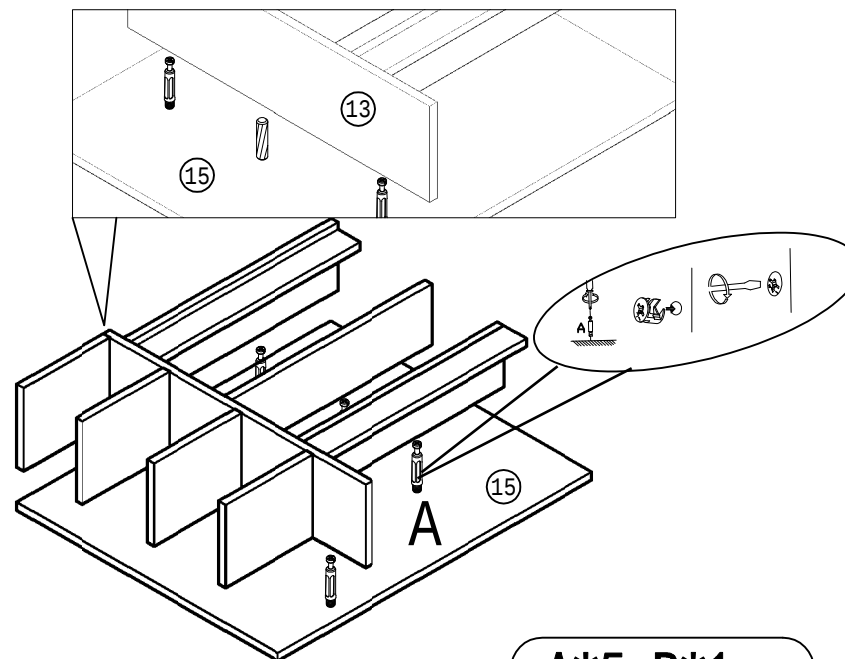


A*5 B*1

11

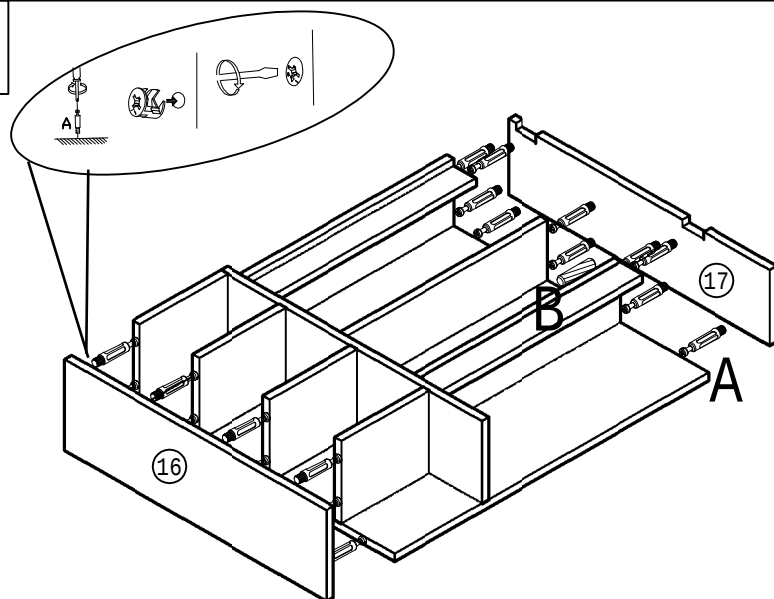


A*20 B*2

12

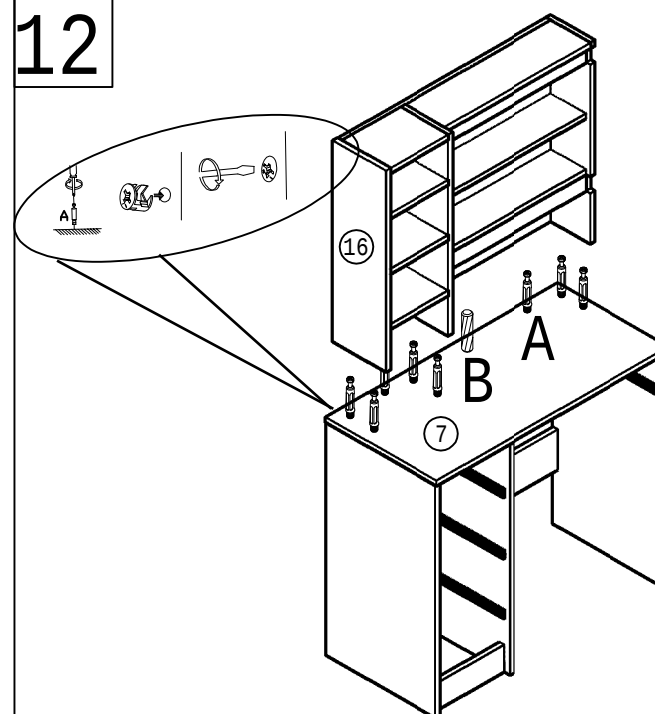


A*8 B*1


13

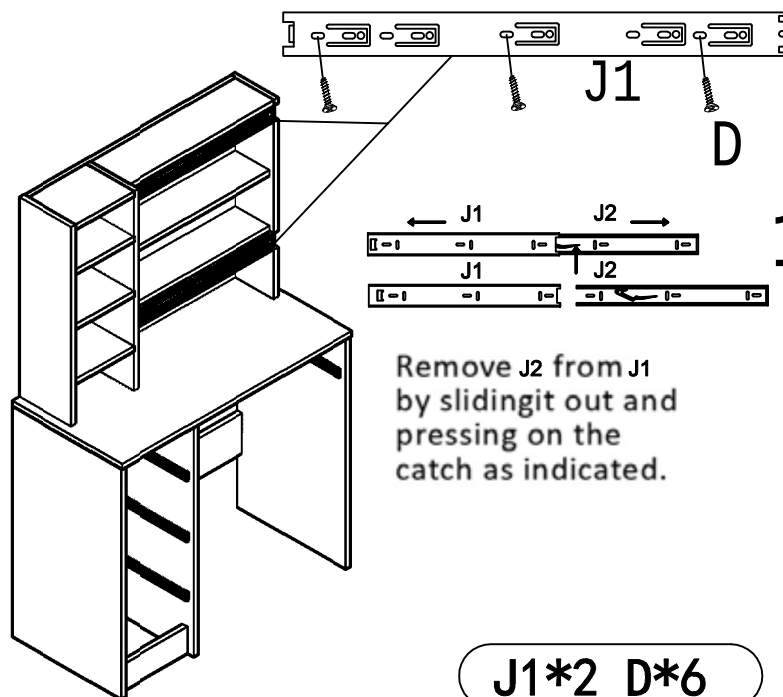


14

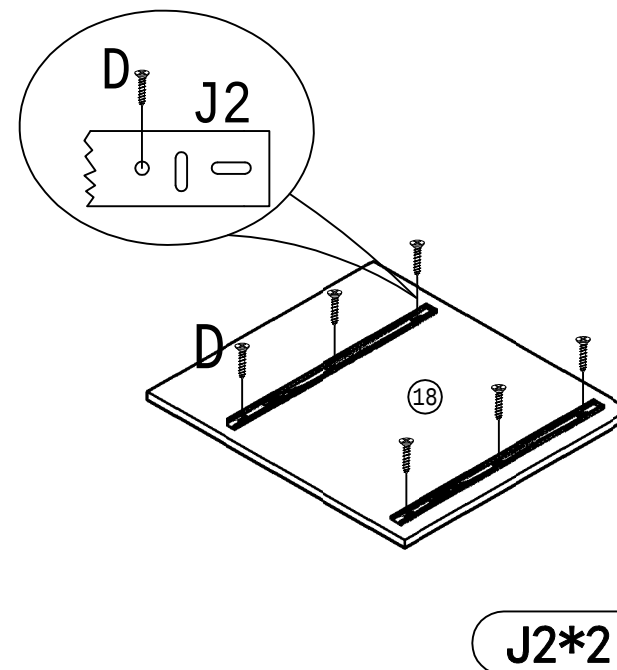


15

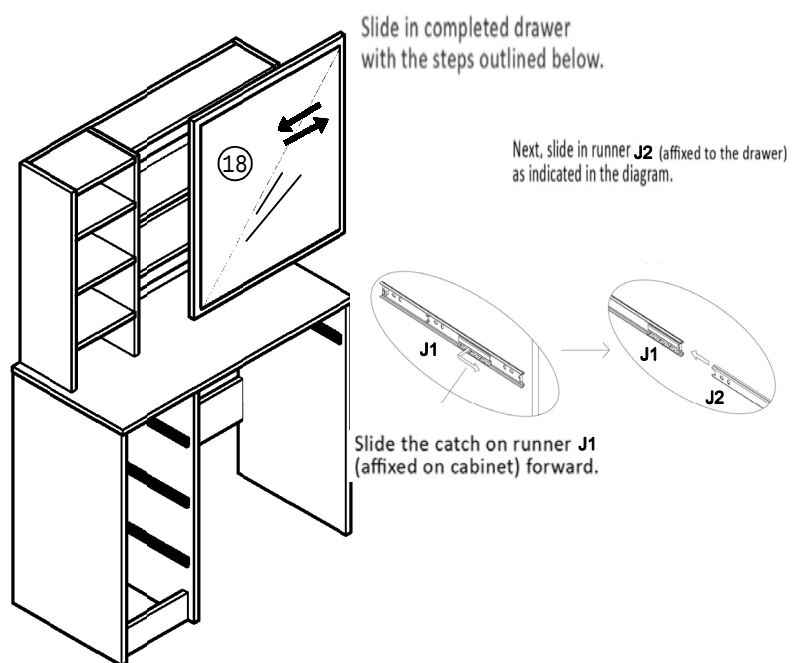


16

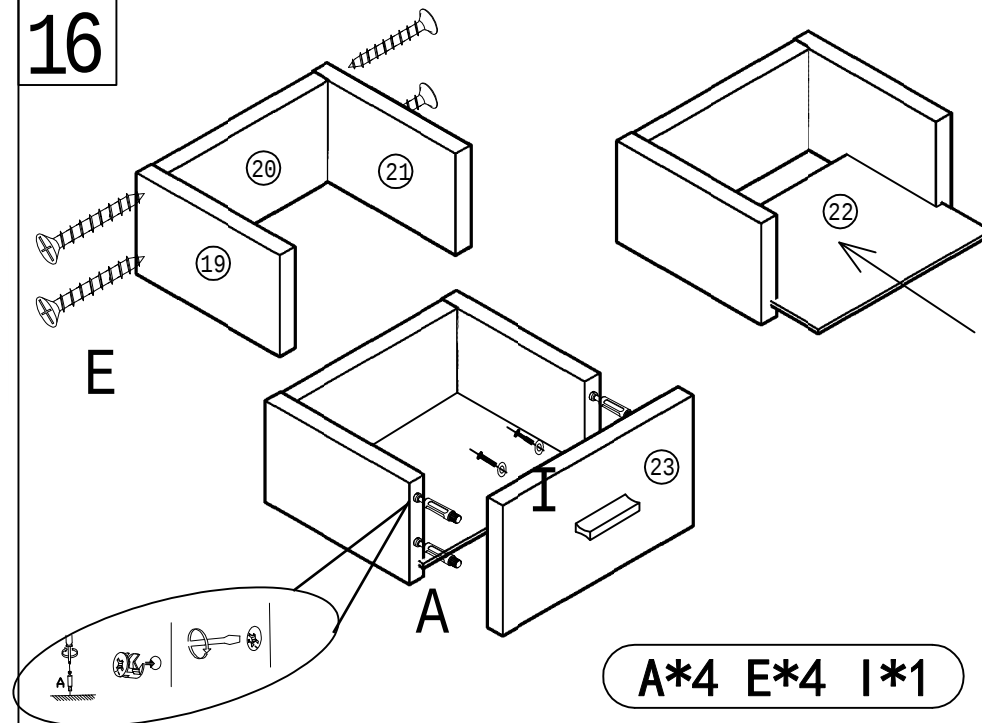

17

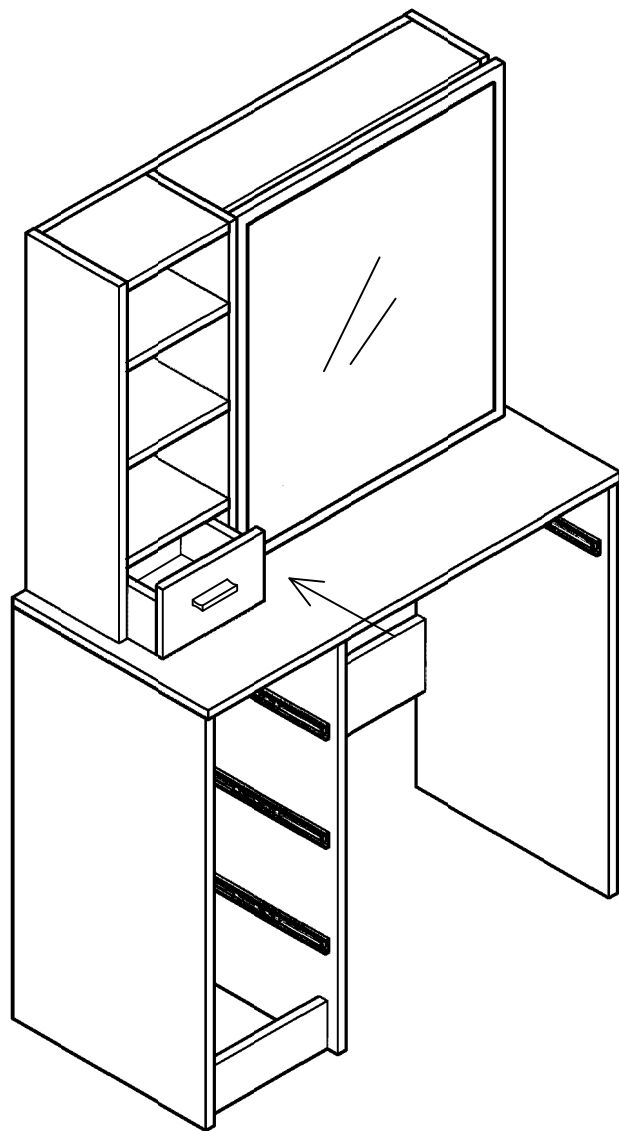




18

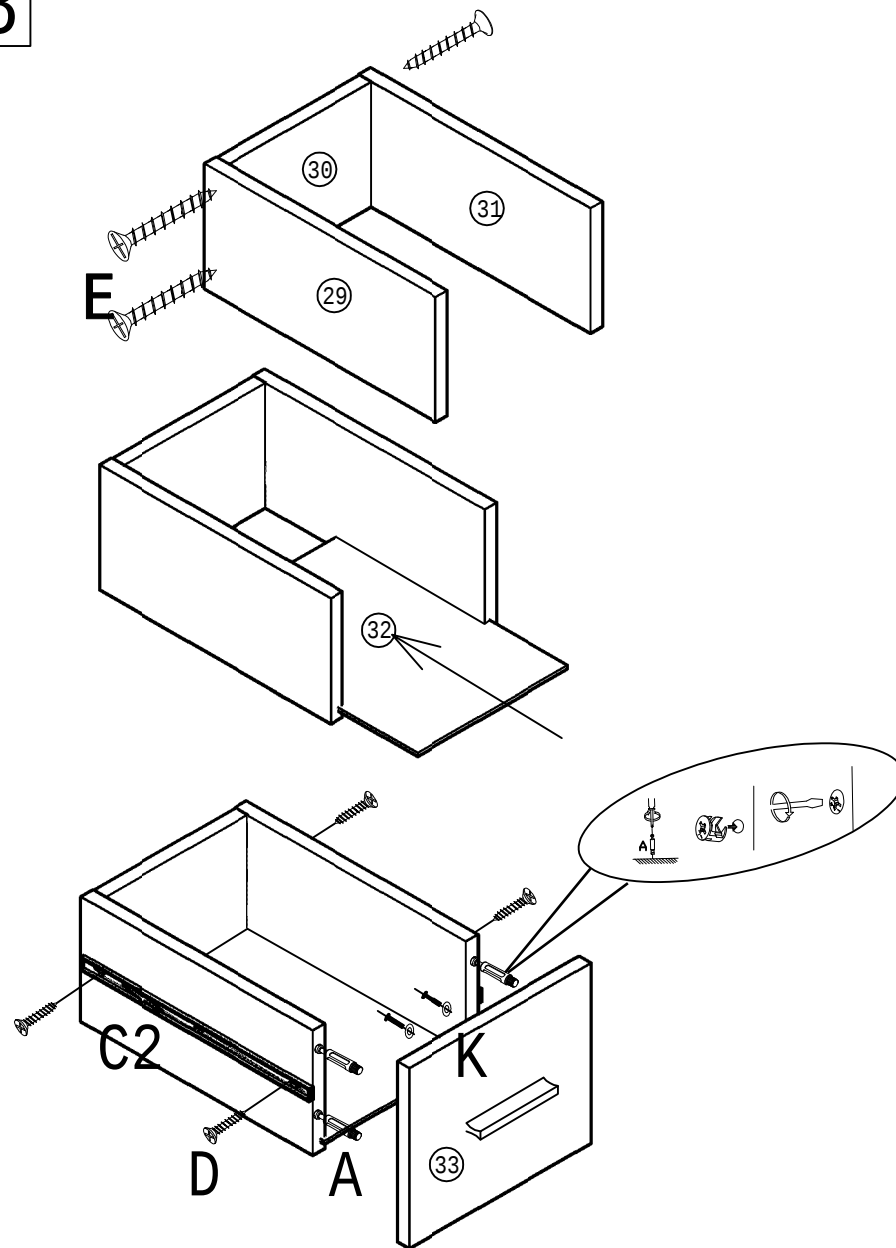

X3


A*4 C2*2 D*4 E*4 K*1

19

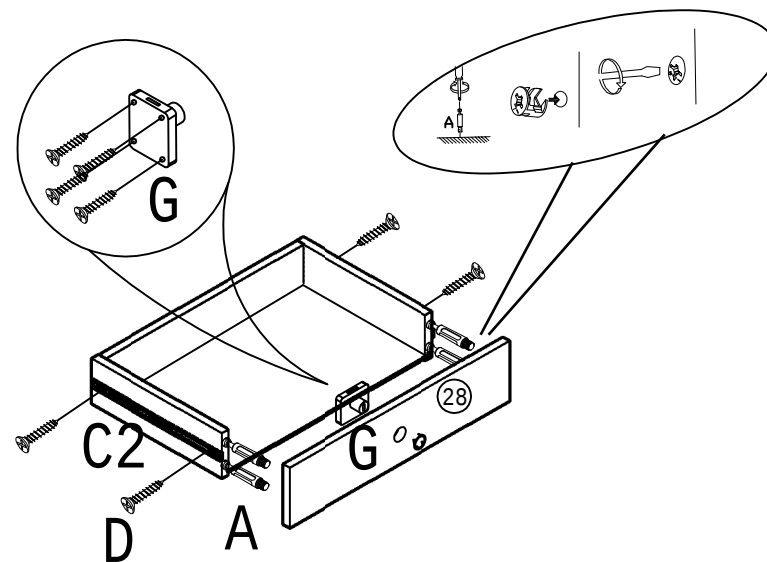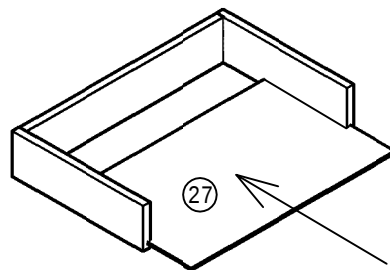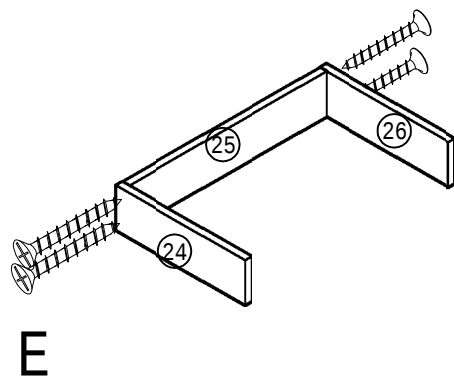


A*4 C2*2 D*4 E*4 G*1



20

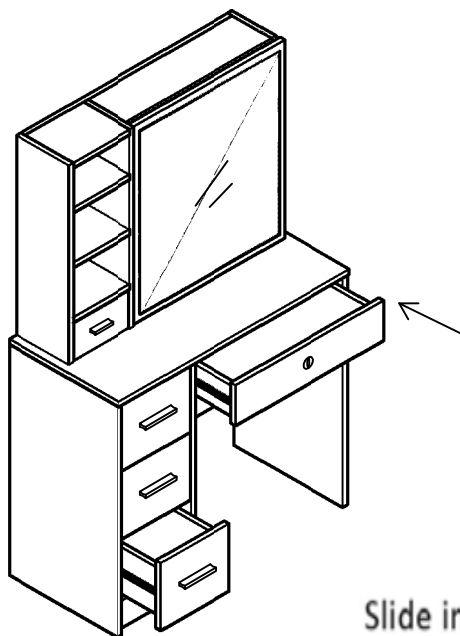

Slide in completed drawer
with the steps outlined below.

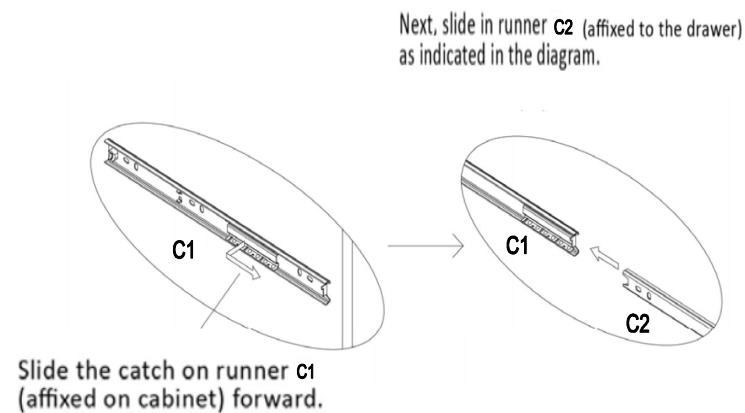


21

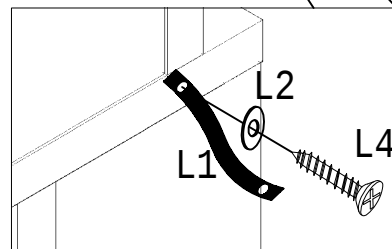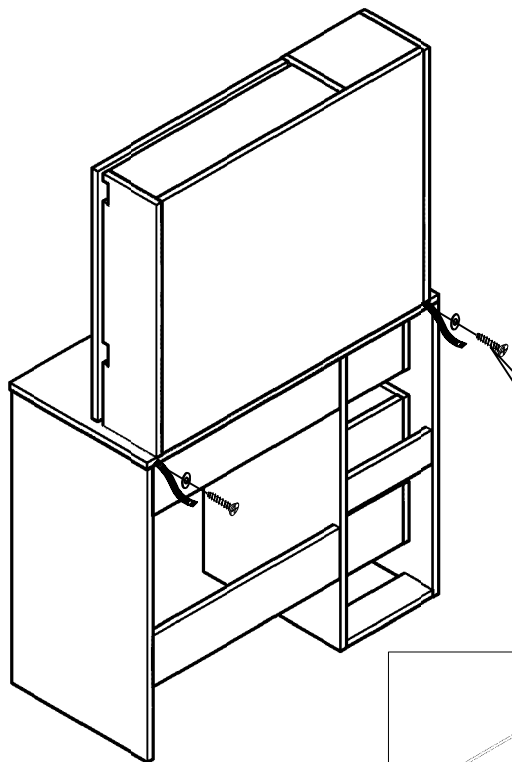


Attach L1 to back of cabinet
with screw L4 and washer L2

L*2

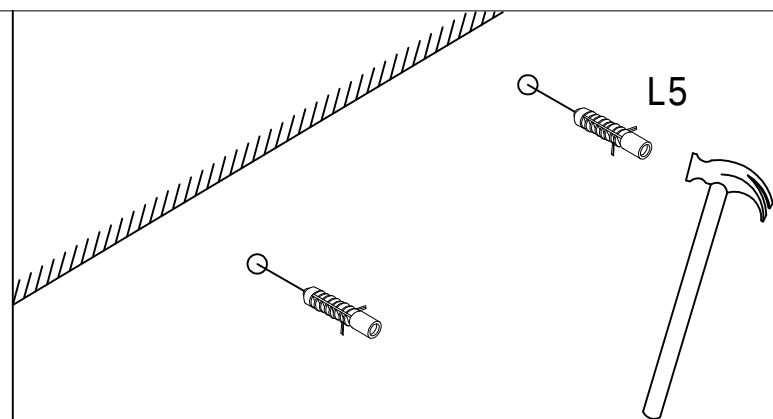


Pre-drilled holes in wall.

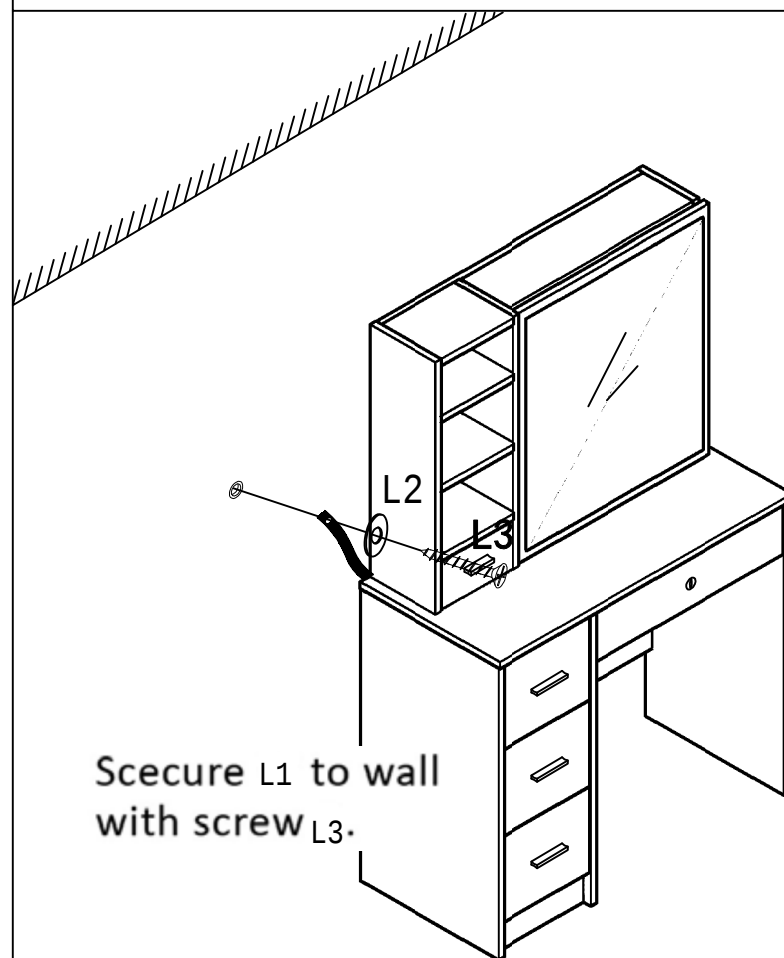

Secure L1 to wall
with screw L3.

22

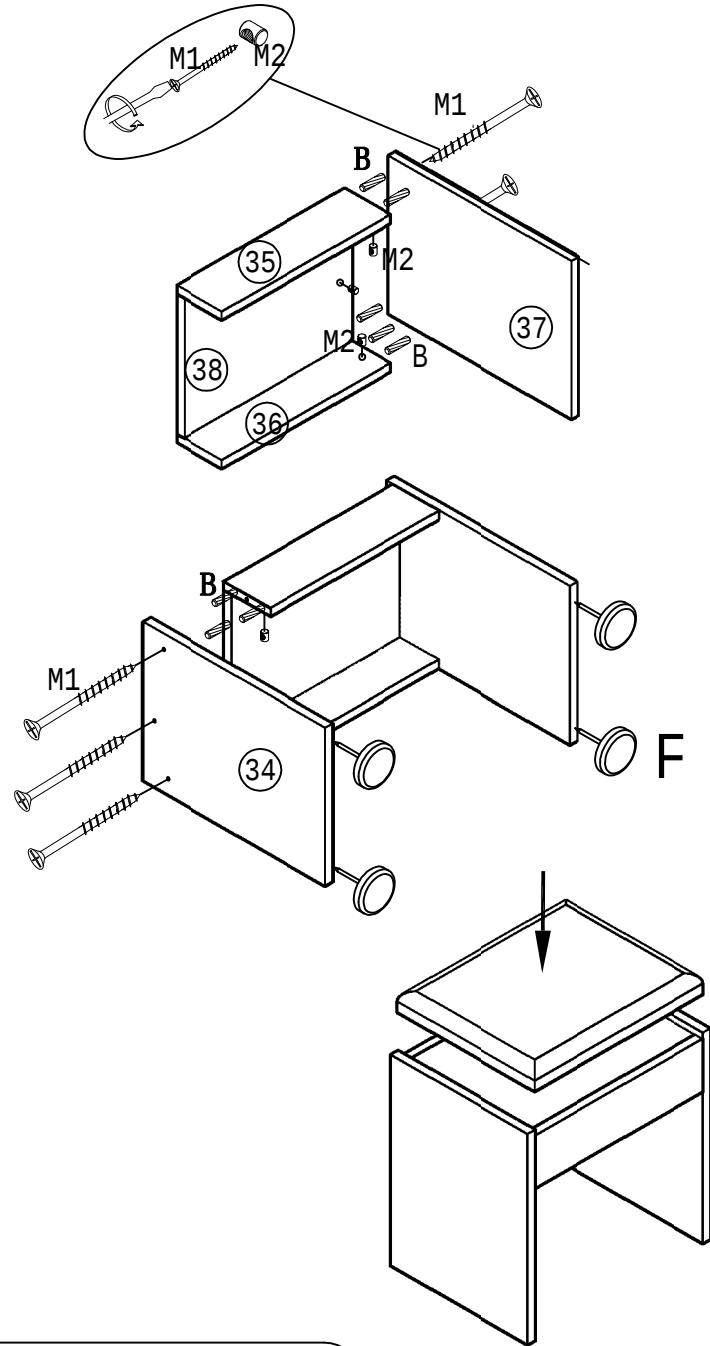

B*12 M*6 F*4

23

