






BLISSWOOD













We Make Your Beautiful Home

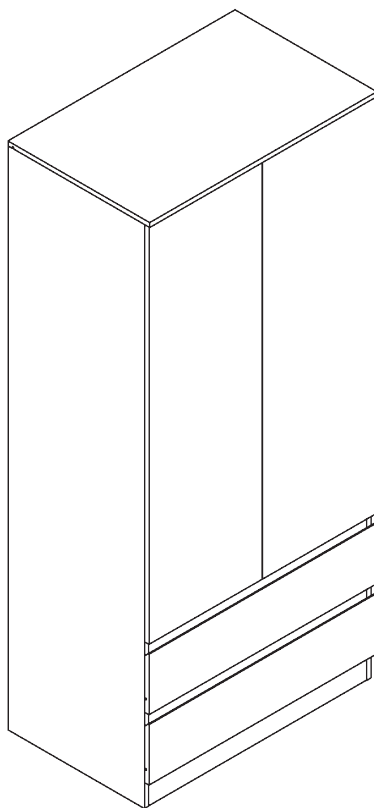


Notice:
1/Need at least three person together to assemble this product to avoid damage board.

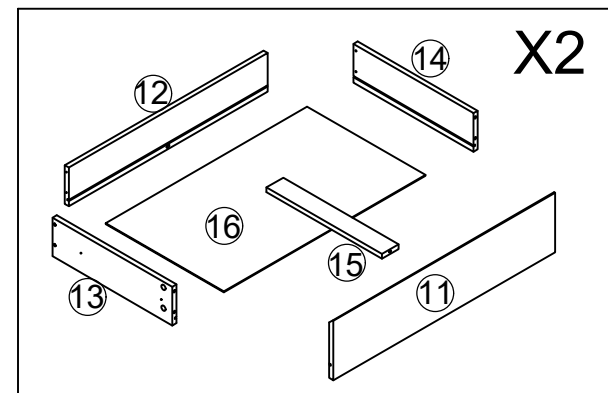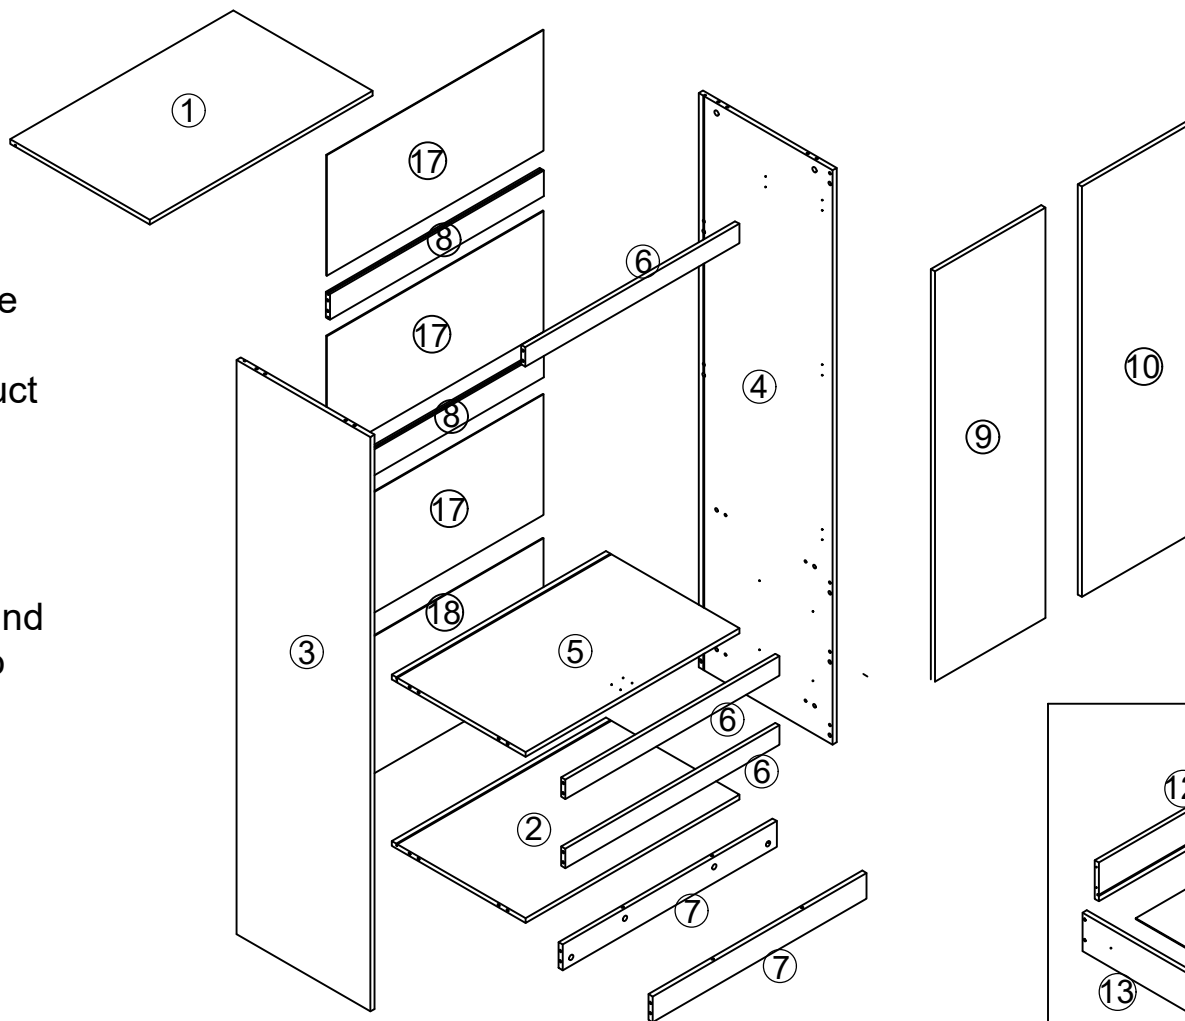
2/Please put a big cushion on the ground when assembling to avoid abrasion.

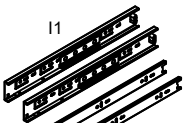

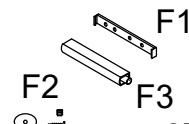
I	400mm	J		K	3*12	L	
Slide rail		Fix hardware		Screw		Anti-falling accessory	
							
I1 I2 2PCS		16PCS		16PCS		2PCS	
A	CAM lock set	B	8*40	C	3.5*14	D	3.5*35
A1		Wood dowel		Screw		Screw	
							
A2 42PCS		26PCS		60PCS		8PCS	
						E	Hinge
							
						6PCS	
						F	Push Open Hardware
							
						F1 F2 F3 2PCS	
						G	760mm
						Closet Rod	
							
						1PCS	
						H	Hanging Hardware
							
						2PCS	

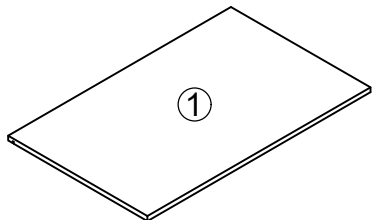


800*500*15*1

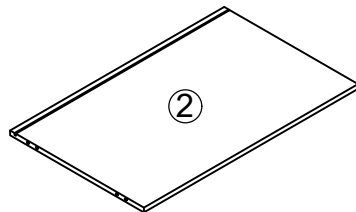


768*480*15*1

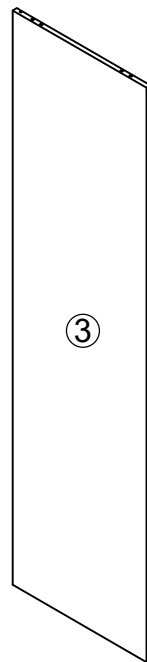


1785*480*15*1

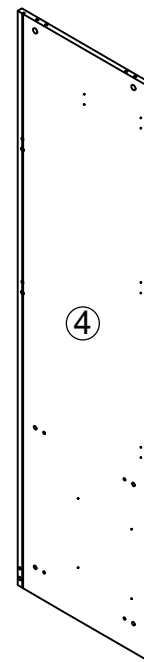


1785*480*15*1

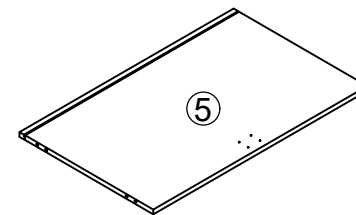


768*480*15*1

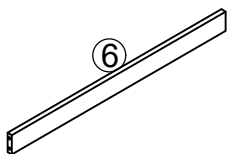


768*60*15*3

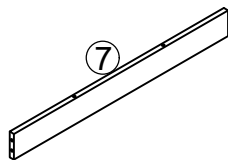


768*80*15*2

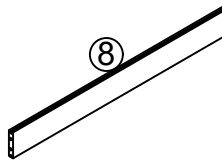


768*80*15*2

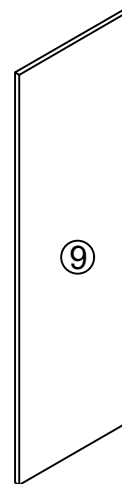


1275*397*15*1

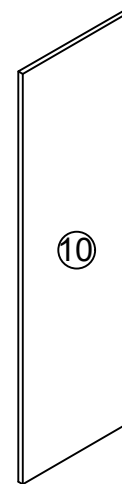


1275*397*15*1

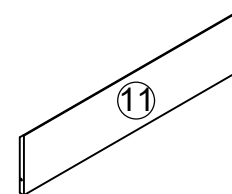


796*185*15*2

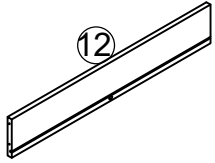


713*120*15*2




430*120*15*2




430*120*15*2




414*60*15*2

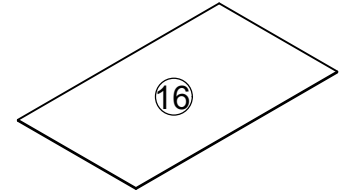

723*424*3*2

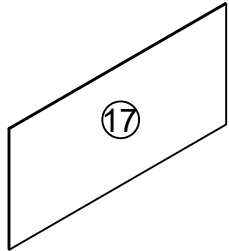

778*375*3*3

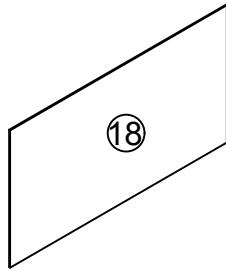

778*427*3*1

Package 1/2

No.	Size	Qty
①	800x500x15mm	1
②	768x480x15mm	1
③	1785x480x15mm	1
④	1785x480x15mm	1
⑤	768x480x15mm	1


Package 2/2

No.	Size	Qty
⑥	768x60x15mm	3
⑦	768x80x15mm	2
⑧	768x80x15mm	2
⑨	1275x397x15mm	1
⑩	1275x397x15mm	1
⑪	796x185x15mm	2
⑫	713x120x15mm	2
⑬	430x120x15mm	2
⑭	430x120x15mm	2
⑮	414x60x15mm	2
⑯	723x424x3mm	2
⑰	778x375x3mm	3
⑱	778x427x3mm	1

Hardware


"A" Hardware installation example

I

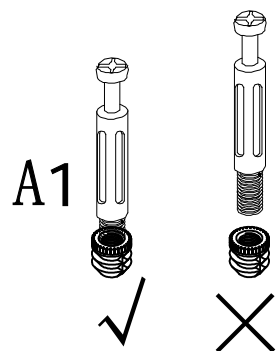


This part cannot be separated,
please install in strict
accordance with the assembly
requirements


II

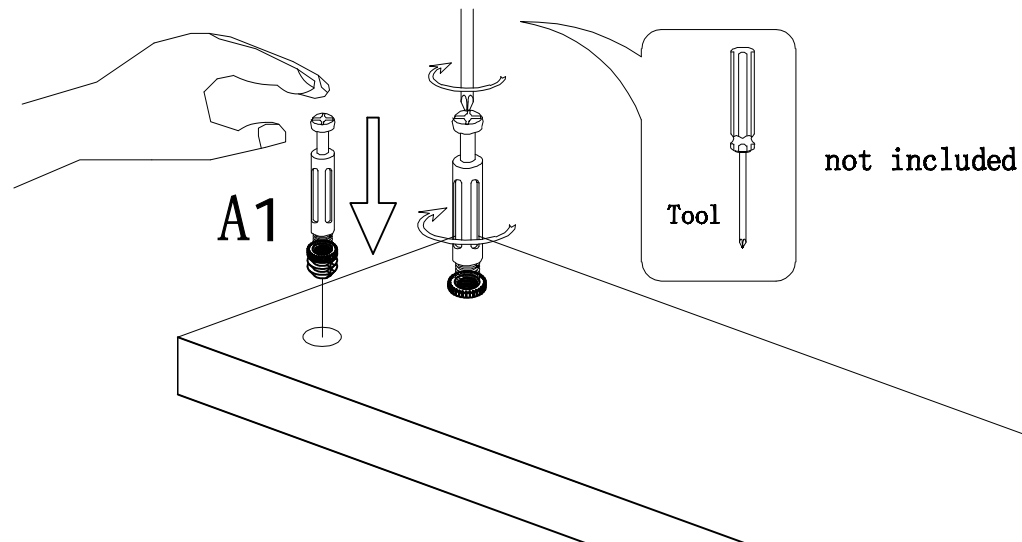

III

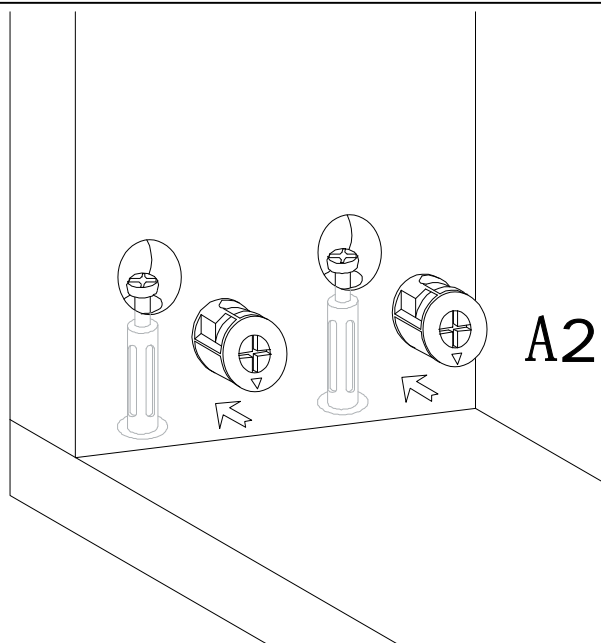


IV

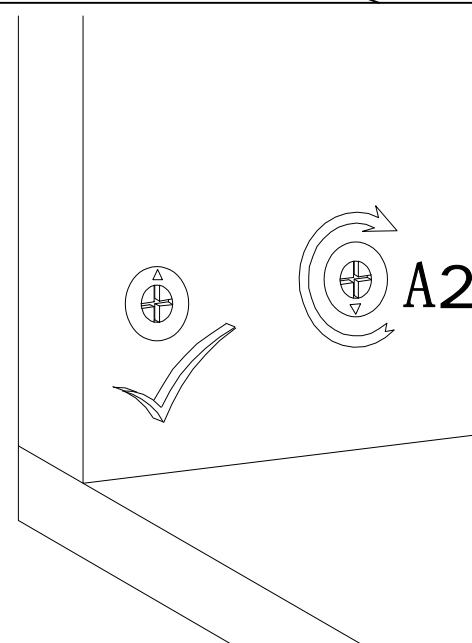

1

- 1、Insert "A1" to board
- 2、Connect ②⑦ board
- 3、Insert "A2" to the hole and screw it to lock them

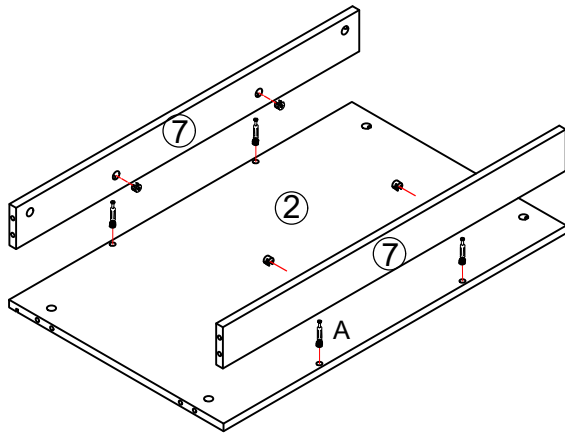


A*4

2

Notice: This step need at least three person to avoid breaking off the board.

- 1、Screw "A1" into boards
- 2、Insert "B" into the holes
- 3、Connect them as picture show
- 4、Insert "A2" into the hole, screw it to lock them

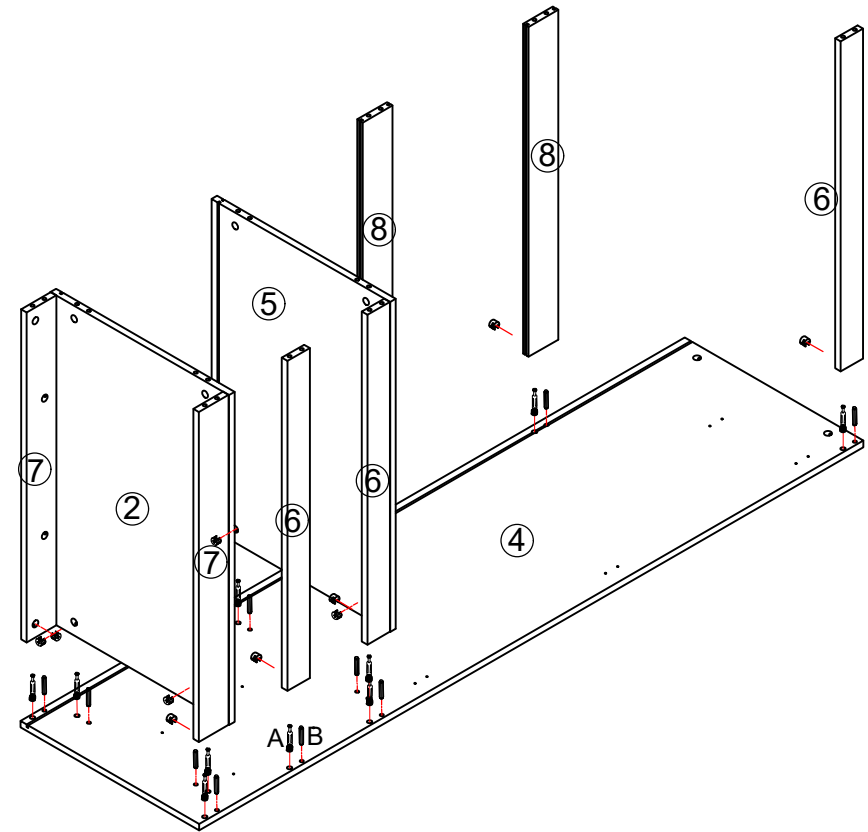


A*11 B*11

3

Notice: This step need at least three person to avoid breaking off the board.


- 1、Insert ⑪⑫ by the groove

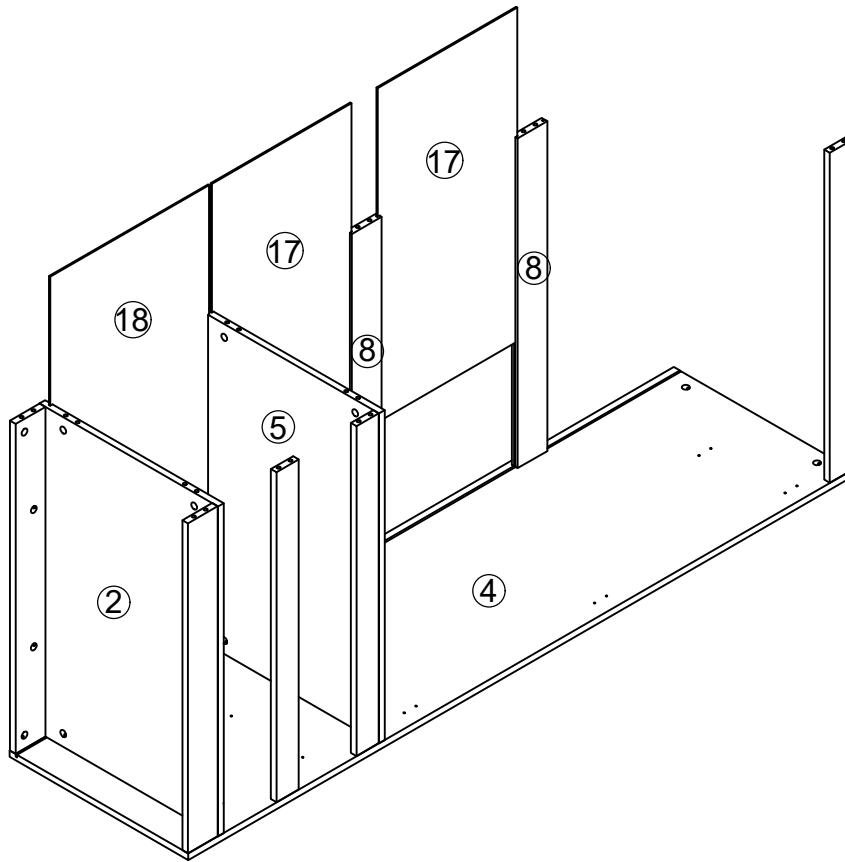

4

Notice: This step need at least three person to avoid breaking off the board.


- 1、Screw "A1" into the boards
- 2、Insert "B" into the holes
- 3、Connect board③ as picture show
- 4、Insert "A2" into holes, screw it to lock them.

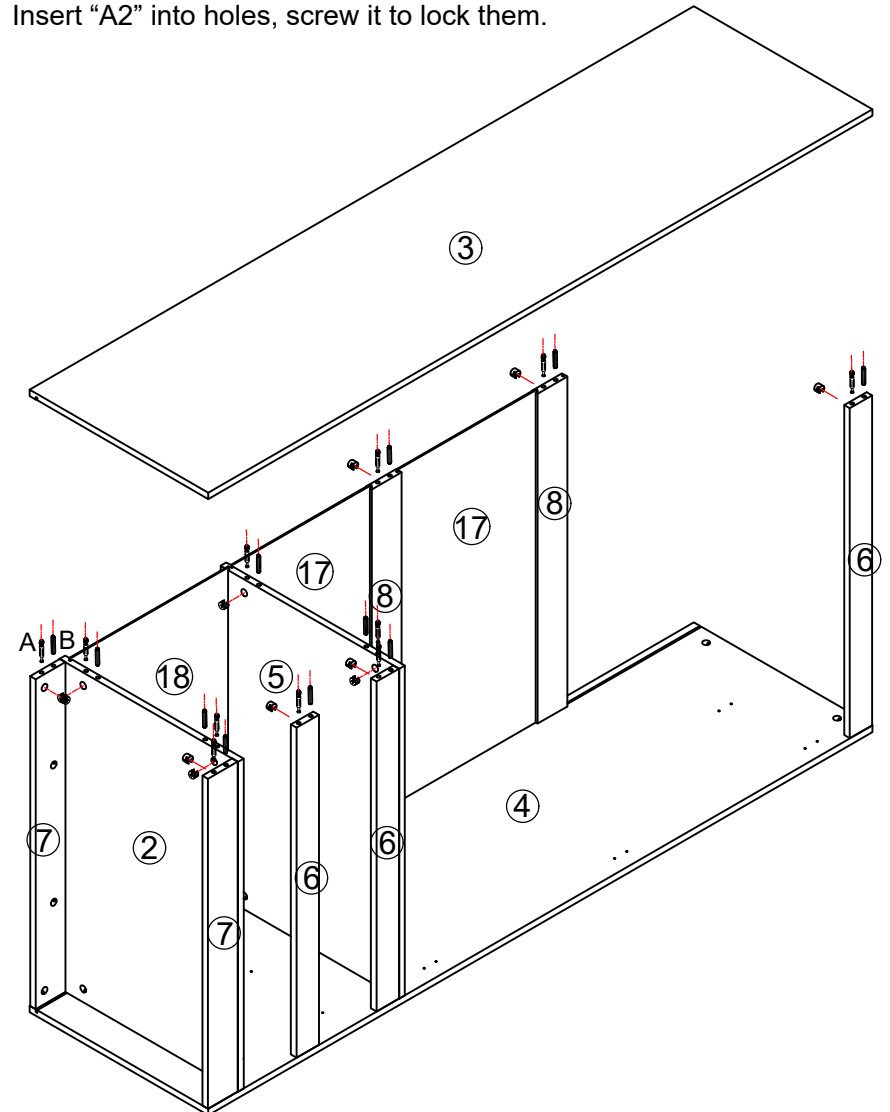

A*11 B*11

5



1、Insert ⑰ by groove

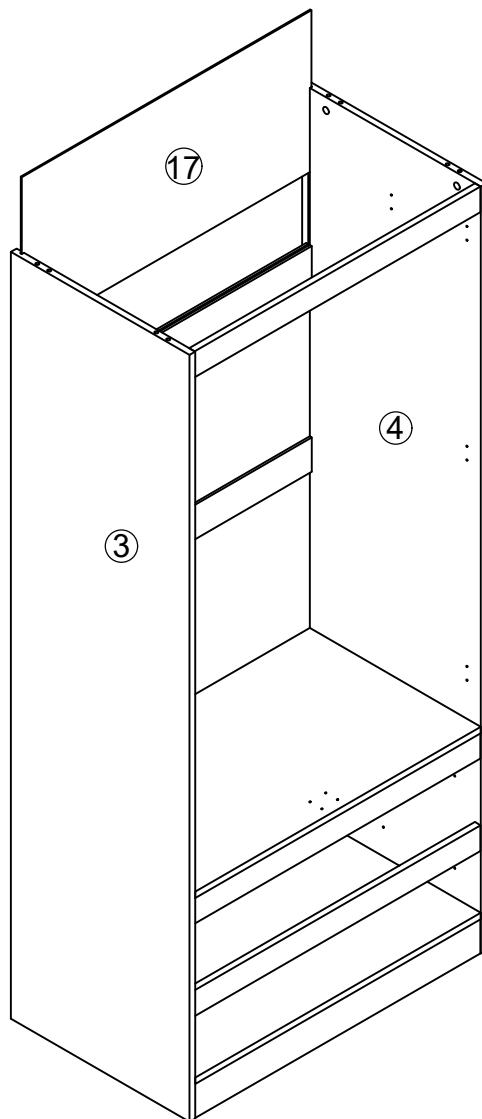



6

Press the plastic shim as shown in the picture and separate "I1" and "I2".

During the installation of the slides in the following steps, please install them according to the front and rear orientation as indicated in the diagram.

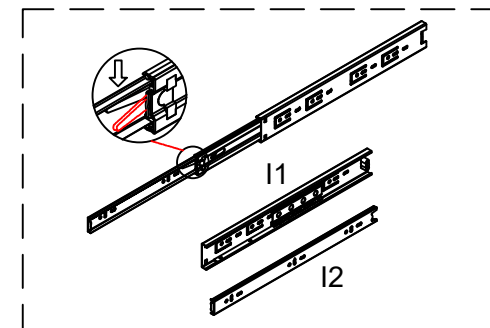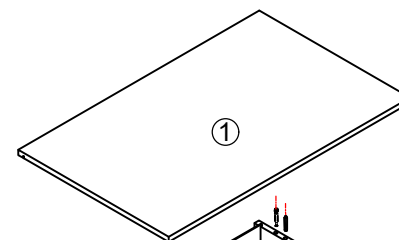


- 1、Screw "C" to install "I1" to board ③④ as picture show
- 2、Screw "A1" into the boards
- 3、Insert "B" into the holes
- 4、Connect board ① as picture show

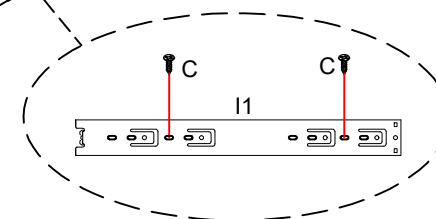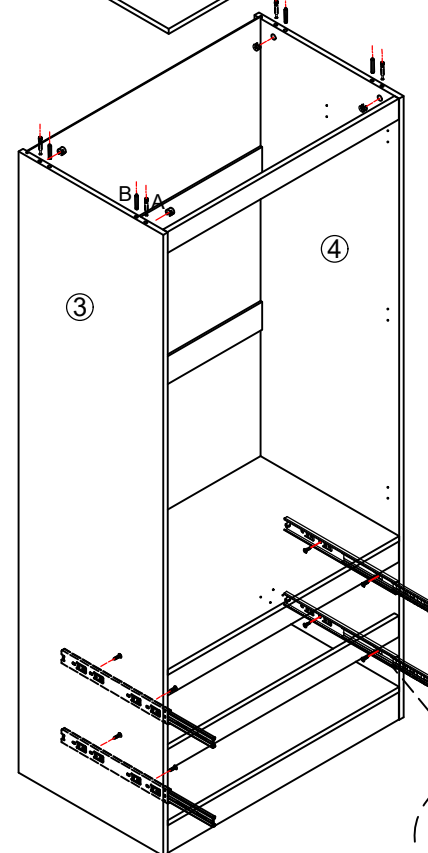

A*4 B*4 C*8 I1*2

7

- 1、Screw “D” to install ⑫⑬⑭ together
- 2、Insert ⑮ by the groove
- 3、Screw “A1” into the boards
- 4、Connect ⑪⑮ board to other boards
- 5、Insert “A2” into the hole, screw it to lock them
- 6、Screw “C” to install “I2” on board ⑬⑭
- 7、Two drawer same installation

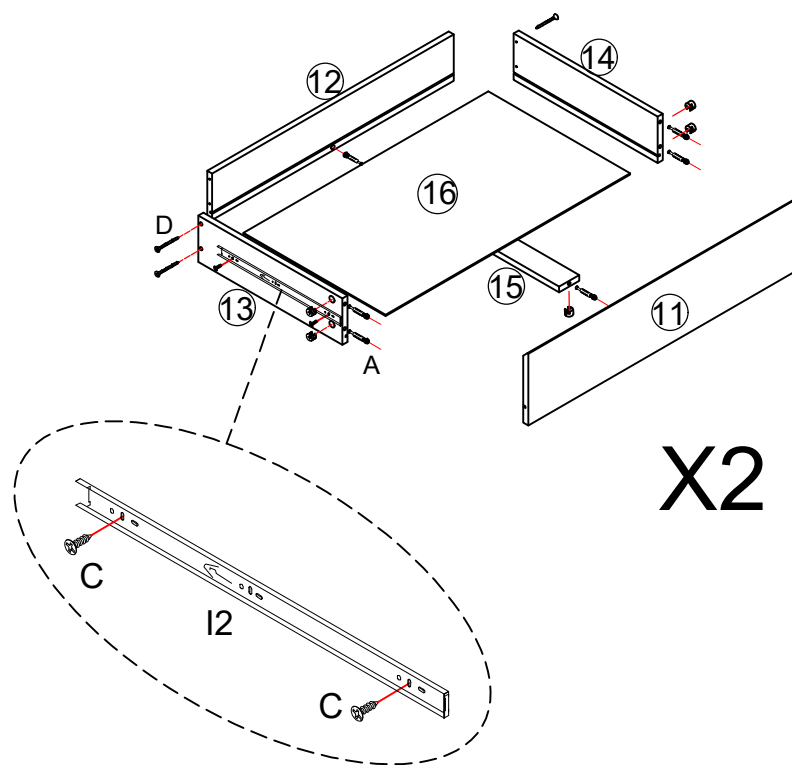


A*12 C*8 D*8 I2*2

8

Notice: When you assemble “F3” to “F1”, It is tight, don't push too hard to avoid cutting hand. Be careful.


- 1、Screw “C” to install “H” to board ③④
- 2、Put “G” on “H”
- 3、Screw “C” to install “F1” to the board
- 4、Assemble “F3” to “F1”
- 5、Install drawer

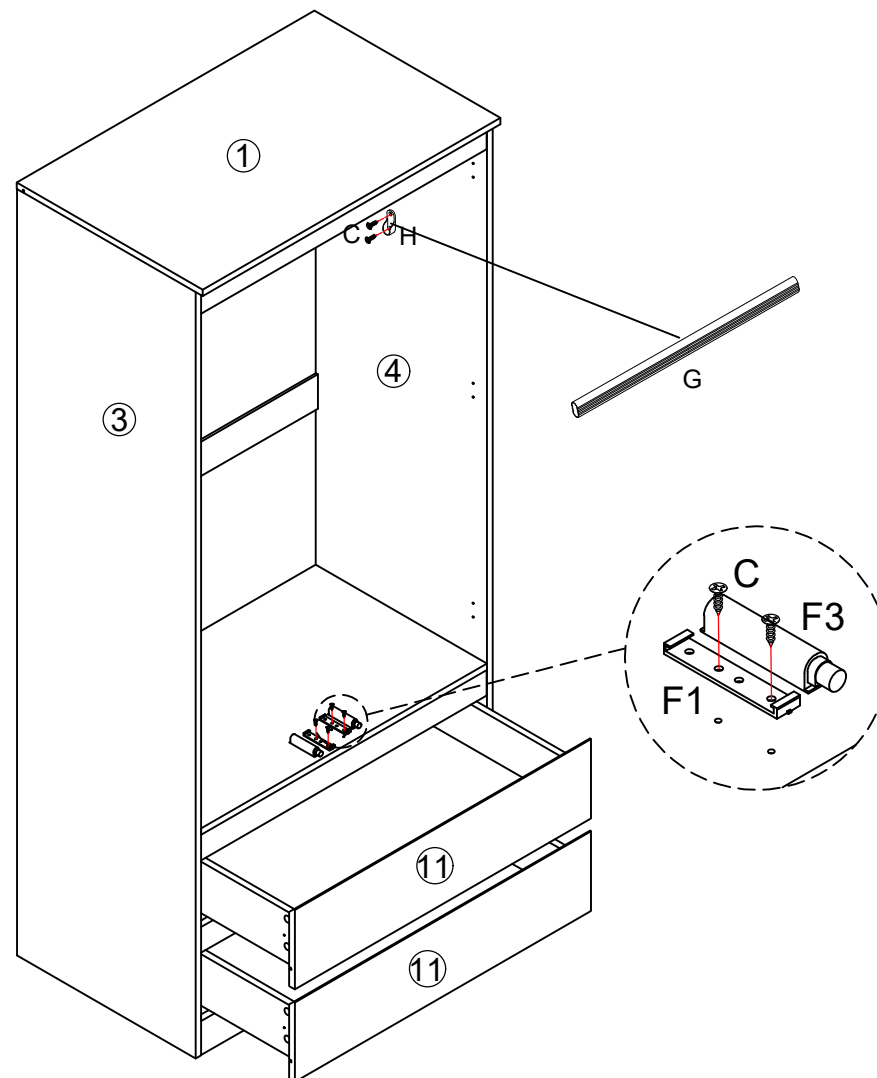

C*8 F1*2 F3*2 G*1 H*2

9


- 1、Screw "C" to install "E" on board ③④ as picture show
- 2、Assemble "F2" to the board ⑨、⑩

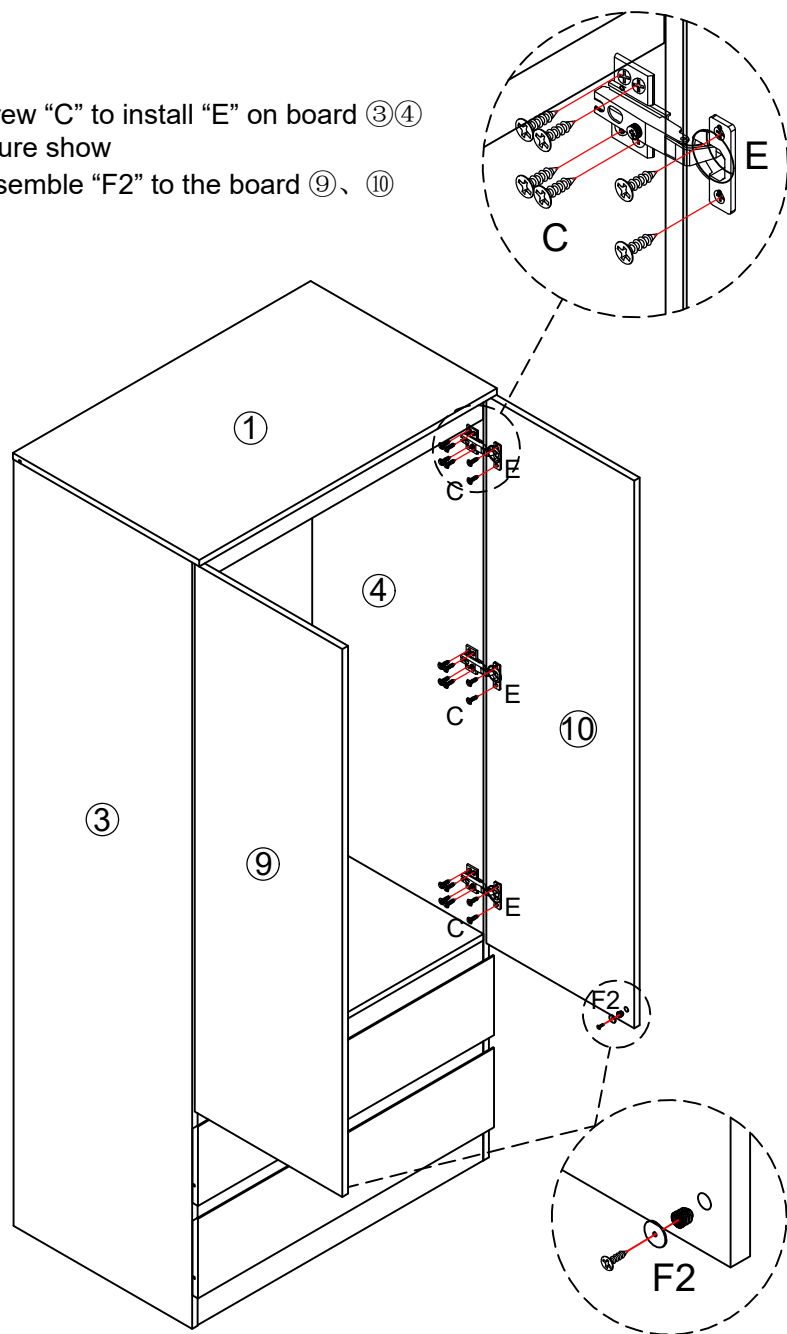

C*36 E*6 F2*2






10

- 1、Screw "K" to install "J" as picture show

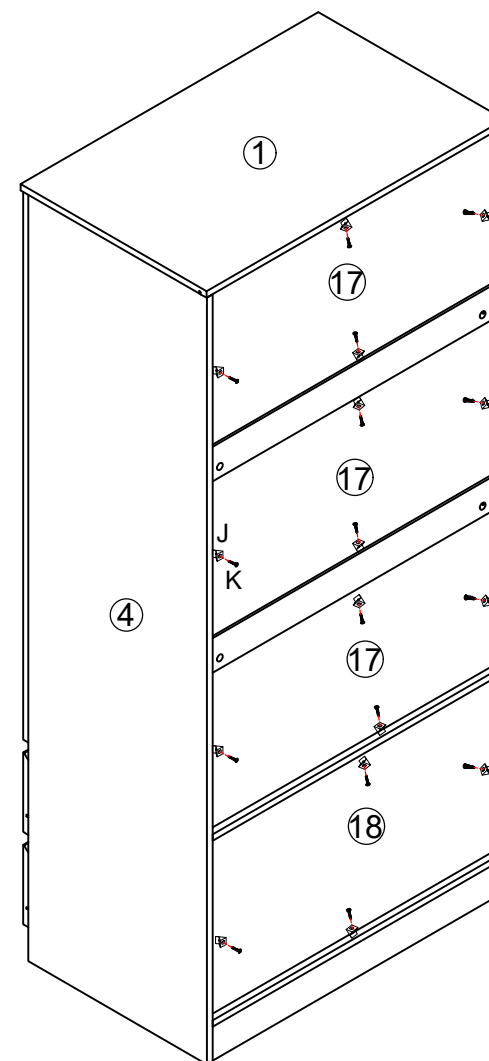

J*16 K*16

1、Install the “L” to fix the wardrobe on the wall as picture show

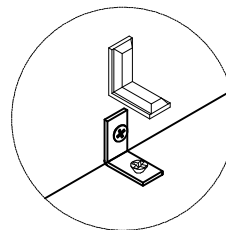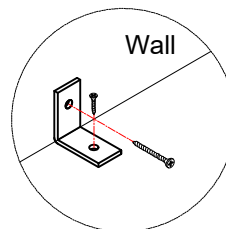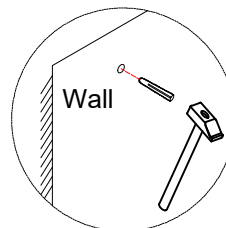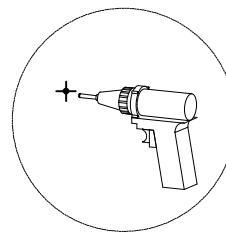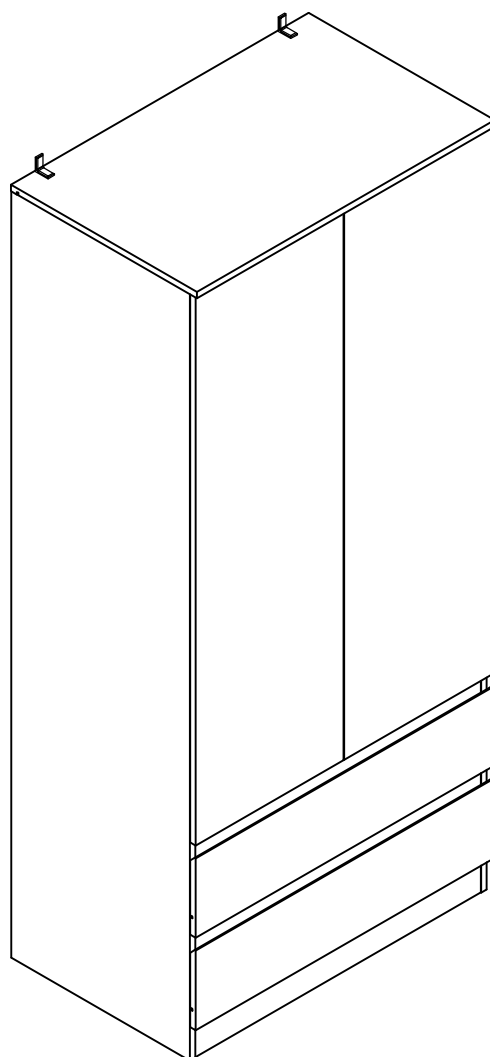

Please install tip-proof fitting.