

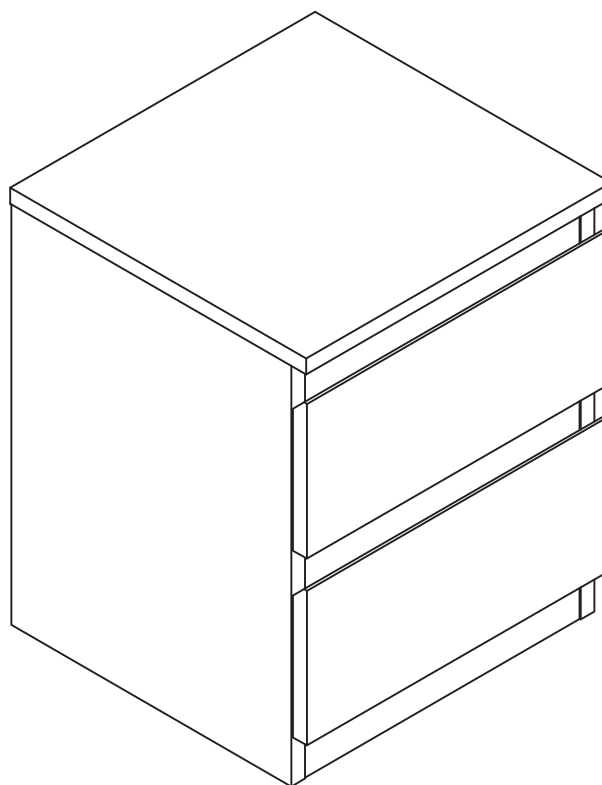


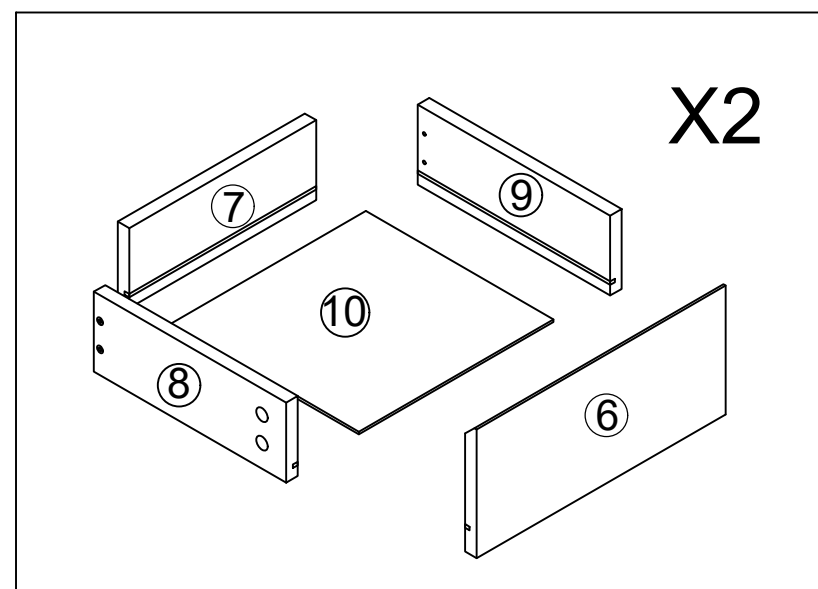









**BLISSWOOD**


We Make Your Beautiful Home

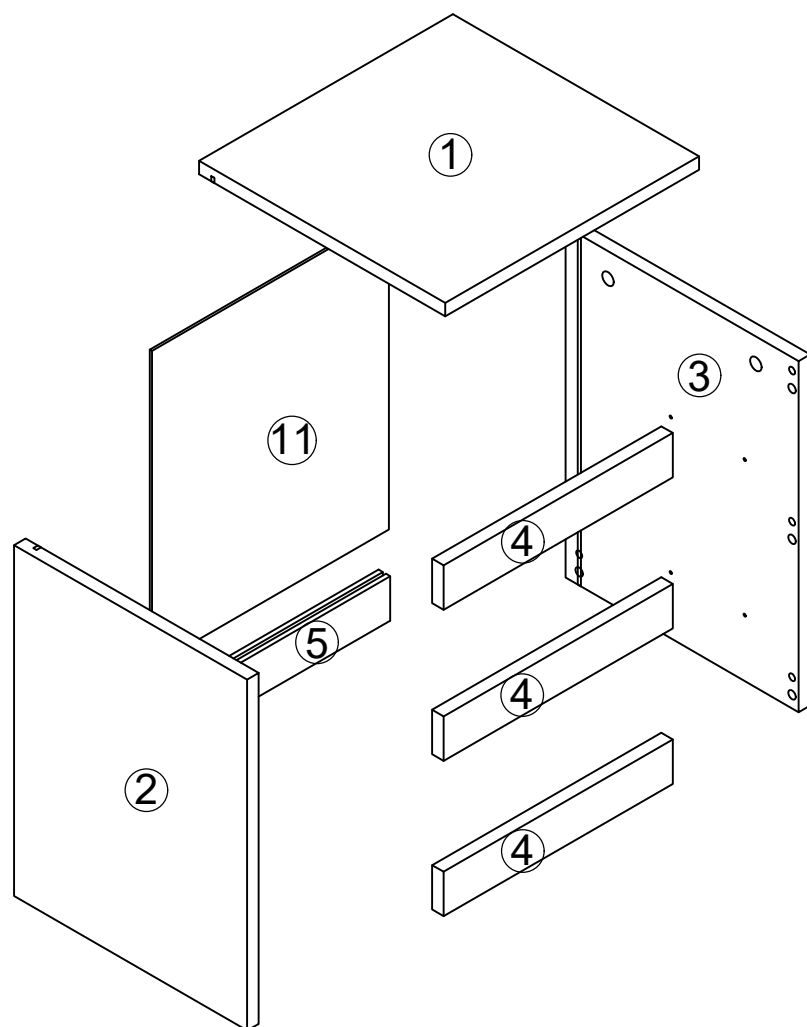




X2


<b>A</b> CAM lock set  20PCS	<b>B</b> 8*40 Wood dowel  10PCS	<b>C</b> 3.5*14 Screw  16PCS	<b>D</b> 3.5*35 Screw  8PCS	<b>E</b> 250mm Drawer rail  2PCS	<b>F</b> Fix hardware  4PCS	<b>G</b> 3*12 Screw  4PCS	<b>H</b> Anti-falling accessory  1PCS
--	---	--	--	--	---	---	---

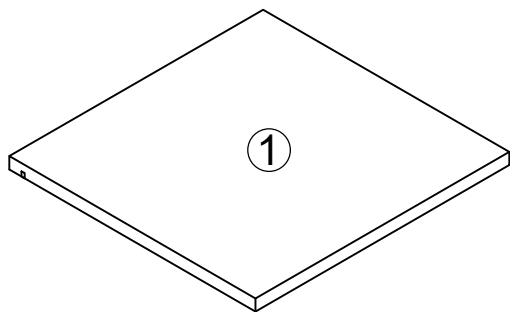


330\*320\*15\*1

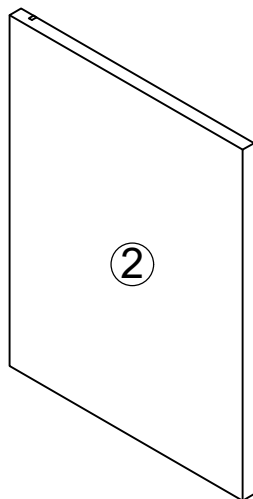


395\*303\*15\*1

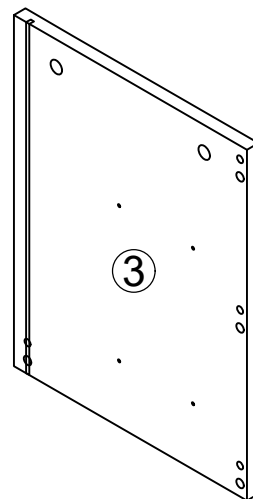


395\*303\*15\*1

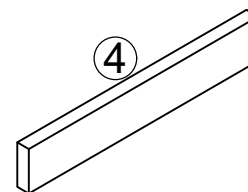


298\*50\*15\*3

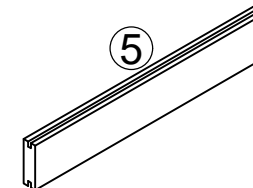


298\*50\*15\*1

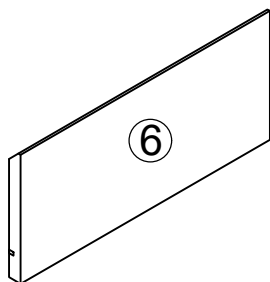


324\*145\*15\*2

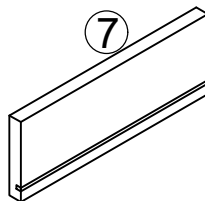


243\*90\*15\*2

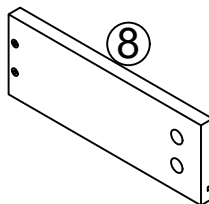


250\*90\*15\*2

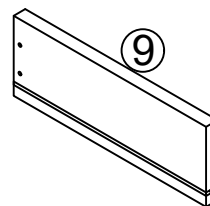

250\*90\*15\*2

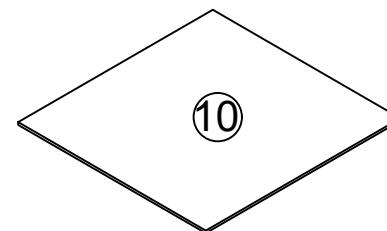


253\*244\*3\*2

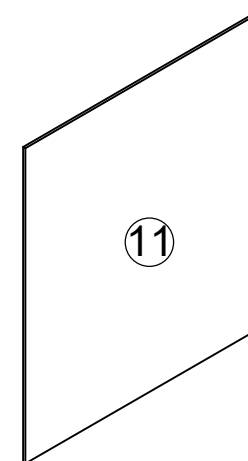

355\*308\*3\*1


# "A" Hardware installation example

I

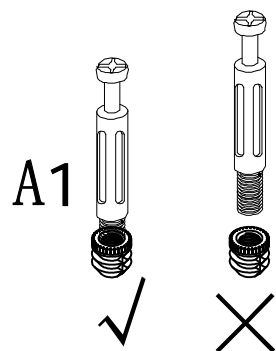


This part cannot be separated,  
please install in strict  
accordance with the assembly  
requirements

II

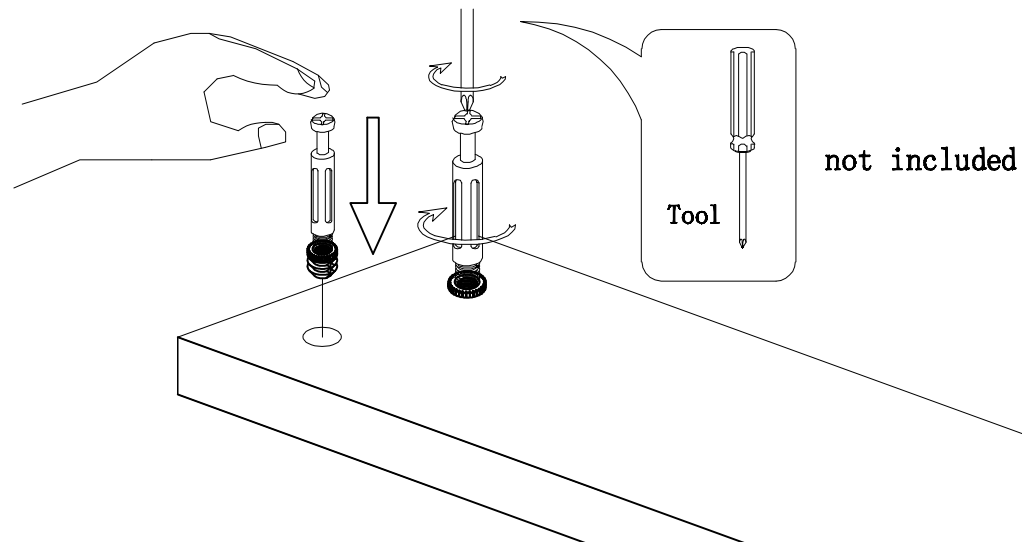


III

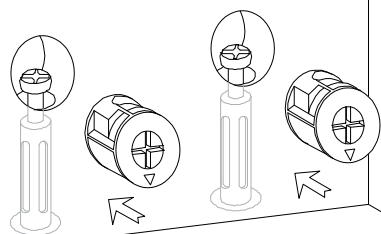



A2

IV

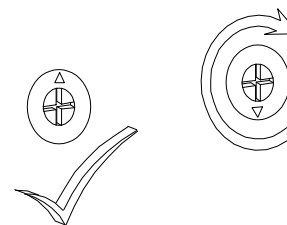


1

Screw "C" to install the drawer rail "E1" on board ②③。

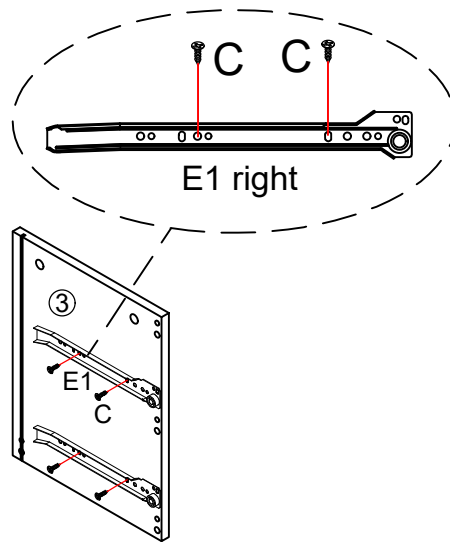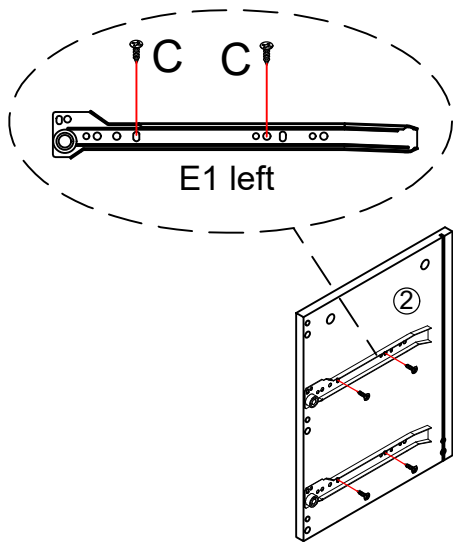

C\*8 E1\*2


2

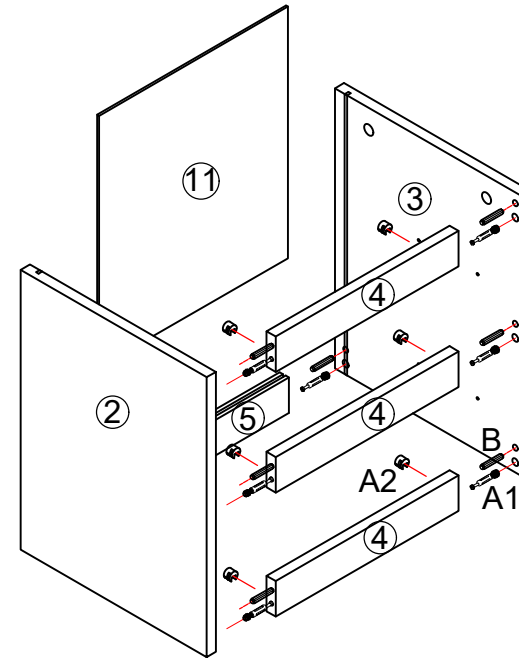

- 1、Screw "A1" into the boards
- 2、Insert "B" into the holes
- 3、Connect ②③④⑤ board
- 4、Insert "A2" into the hole, screw it to lock them
- 5、Insert "11" by the groove

A\*8 B\*8


3

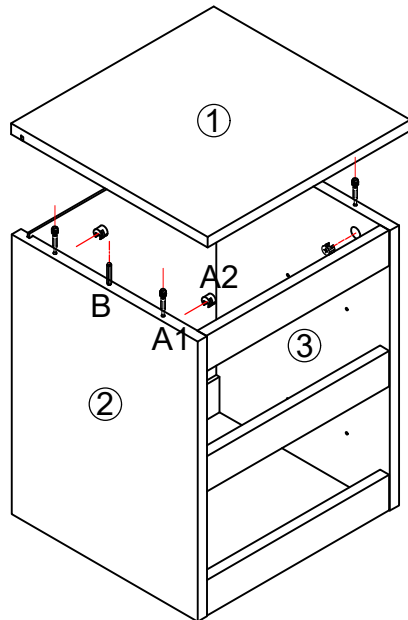

- 1、Screw "A1" into the boards
- 2、Insert "B" into the holes
- 3、Install ① board with body
- 4、Insert "A2" into the hole, screw it to lock them

A\*4 B\*2


4

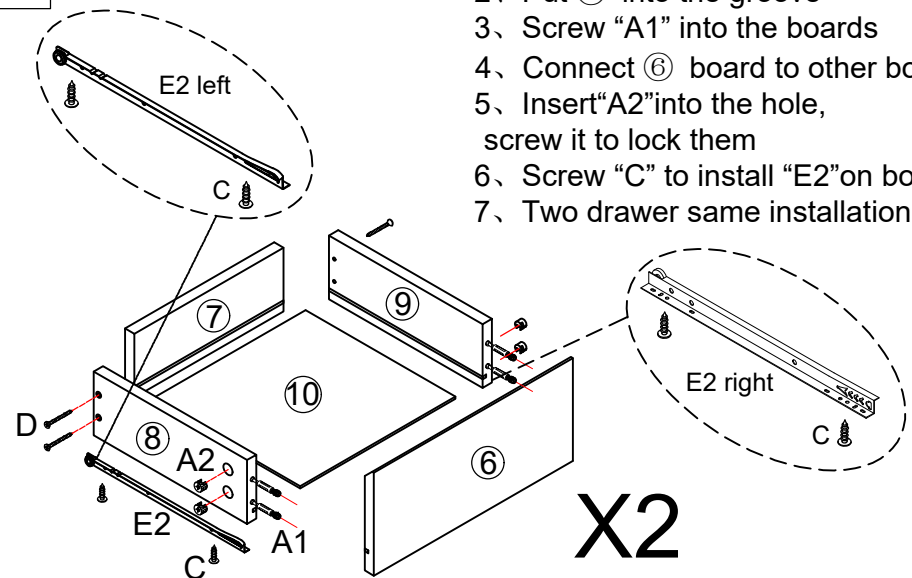

- 1、Screw "D" to install ⑦⑧⑨ together
- 2、Put ⑩ into the groove
- 3、Screw "A1" into the boards
- 4、Connect ⑥ board to other board
- 5、Insert "A2" into the hole, screw it to lock them
- 6、Screw "C" to install "E2" on board
- 7、Two drawer same installation

A\*8 C\*8 D\*8 E2\*2


5

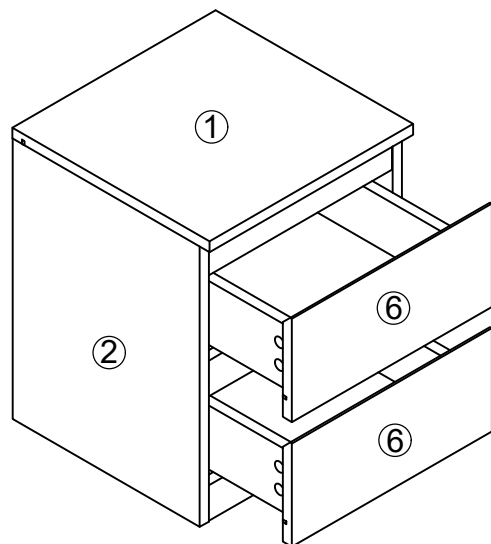

Install the drawer

6






Screw the "G" to fix the "F" to the board

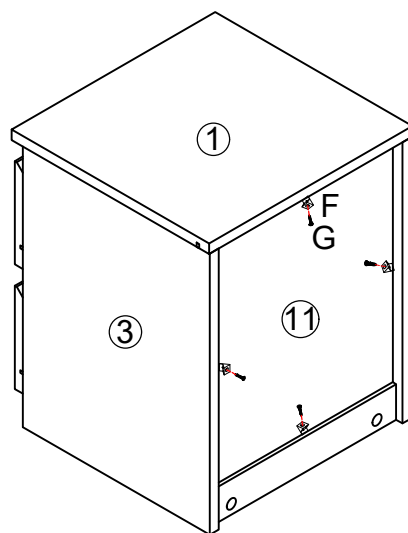

F\*4 G\*4

7

Use "H" to fix the cabinet on the wall

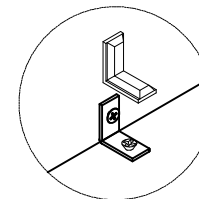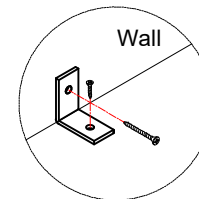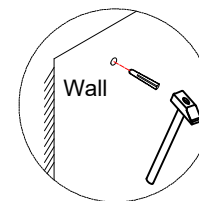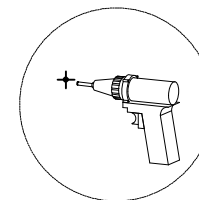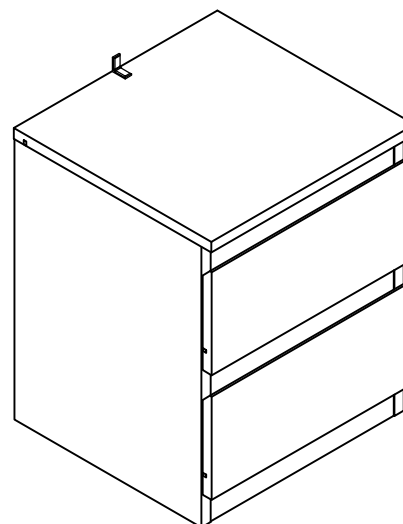

Please install tip-proof fitting.

H\*1