

# ASSEMBLY INSTRUCTIONS












PAGE: 1/5



MODEL : HMZ-FN-CT-1396-WT

Before you begin, please follow assembly instructions carefully, then follow them step by step.

Read instruction carefully . See Furniture Parts list and Hardware List for guidance . Be sure you have all parts before you start assembling .  
Place and assemble furniture on a clean flat soft surface , such as carpet or rug to prevent being scratched .

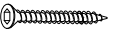PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL	1 PC
6	MIDDLE PANEL	1 PC
7	BONE PANEL	1 PC
8	APRON FRONT	1 PC
9	APRON BACK	1 PC
10	APRON BONE	2 PCS
11	DRAWER FRONT (L)	1 PC
12	DRAWER FRONT (R)	1 PC
13	DRAWER BACK	2 PCS
14	DRAWER SIDE	4 PCS
15	DRAWER BOTTOM	2 PCS

HARDWARE					
A	MINI FIX	A1  A2  A3 		14 SETS	
B	M8 X 30MM WOOD DOWEL			22 PCS	
C	M6 X 50MM CSK CAP WOOD SCREW			8 PCS	
D	ALLEN KEY M4			1 PC	
E	M3.5 X 16MM C.B SCREW			24 PCS	
F	M4 X 38MM C.B SCREW			26 PCS	
G	5/8 NAIL			16 PCS	
H	5/8 PVC NAIL LEG			4 PCS	
I	14" DRAWER SLIDE		I1 (L/R) I2 (L/R)	2 SETS	

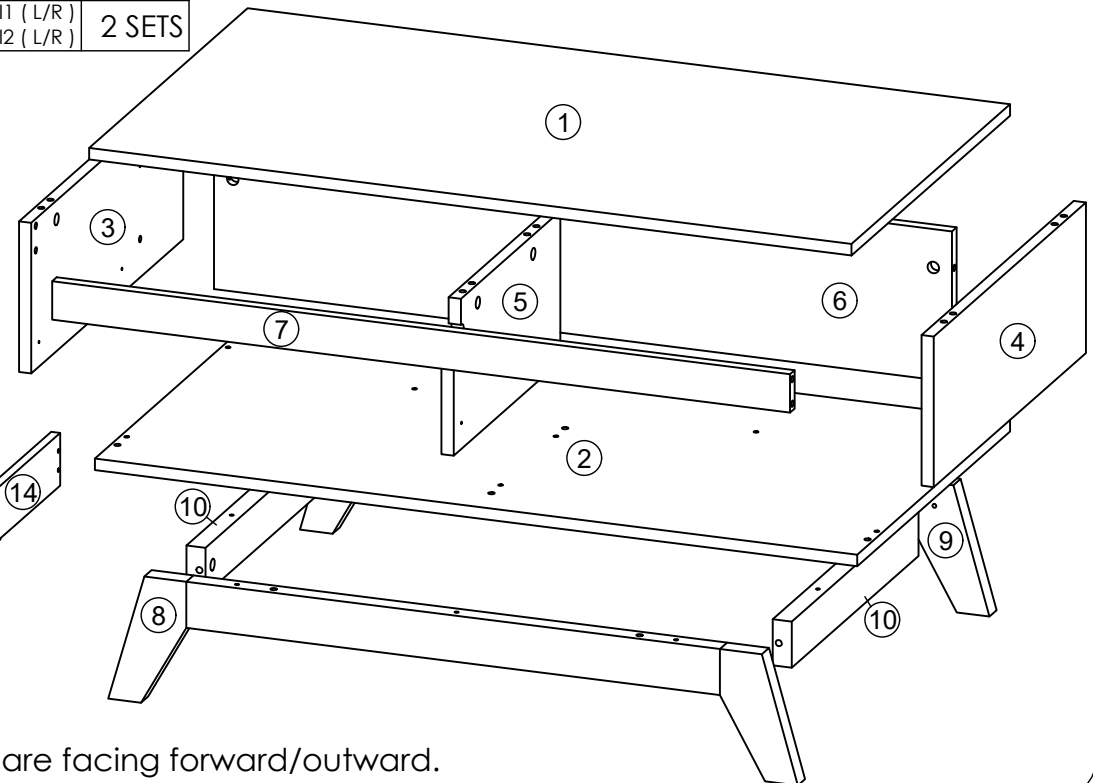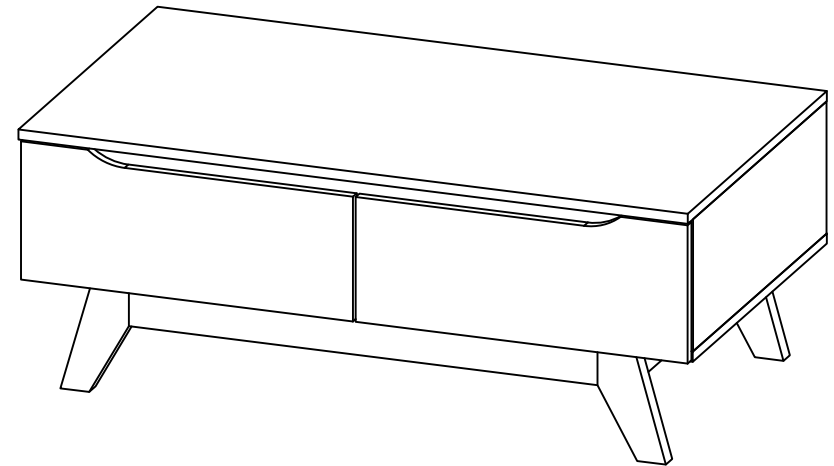



**SELF-PREPARED TOOLS:** Tools below are NOT included in package.



SCREWDRIVER



HAMMER

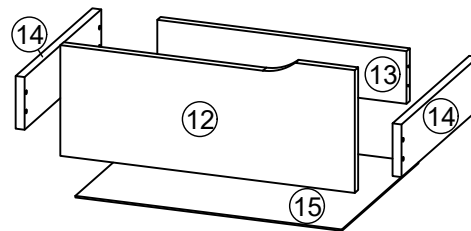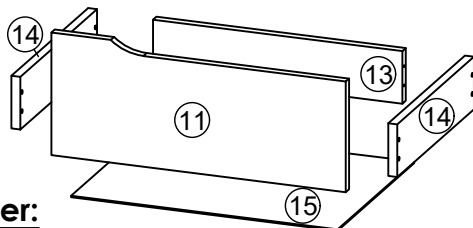

## Reminder:


Please ensure that all surfaces and edges with colours/laminations are facing forward/outward.

# ASSEMBLY INSTRUCTIONS

PAGE: 2/5

## STEP 1


- Insert hardware **A1** onto panel (3), (4), (5) and (6).  
(Repeat 10 times.)
- Insert hardware **A2** onto panel (1), (3) and (4).  
(Repeat 10 times.)
- Insert hardware **B** onto panel (3), (4), (5) and (6).  
(Repeat 8 times.)

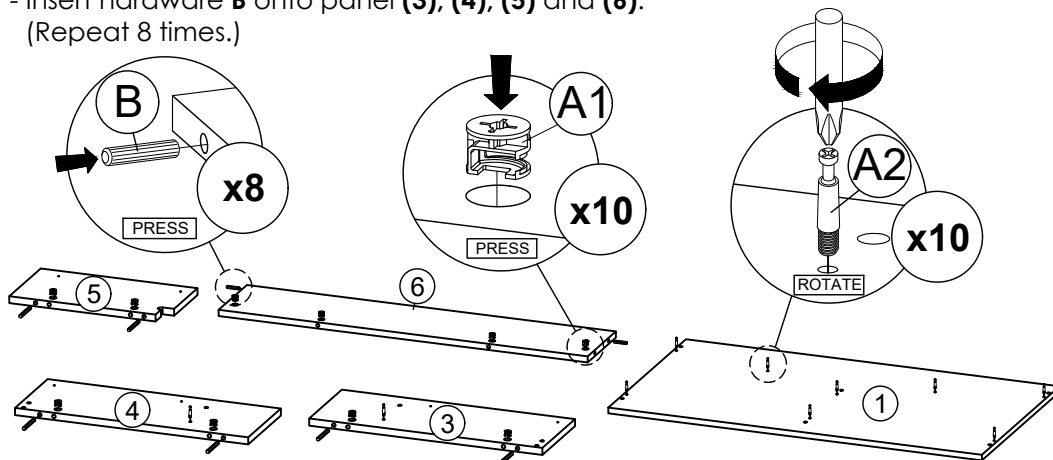

\* Ensure the arrows on hardware **A1** point towards mounting positions.

## STEP 3

Fix hardware **I1 (L/R)** into panel (3), (4) and (5) with hardware **E**.  
(Repeat 3 times for each hardware.)

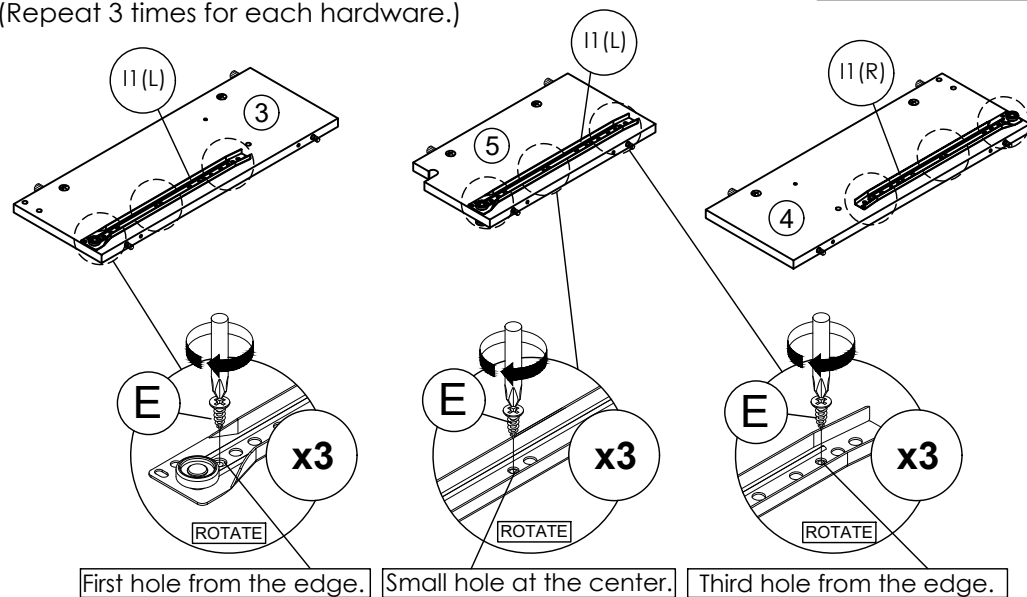

First hole from the edge.


Small hole at the center.

Third hole from the edge.

# MODEL : HMZ-FN-CT-1396-WT

## STEP 2


- Insert hardware **A1** onto panel (10).  
(Repeat 4 times.)
- Insert hardware **A2** onto panel (8) and (9).  
(Repeat 4 times.)
- Insert hardware **B** onto panel (7), (8) and (9).  
(Repeat 8 times.)

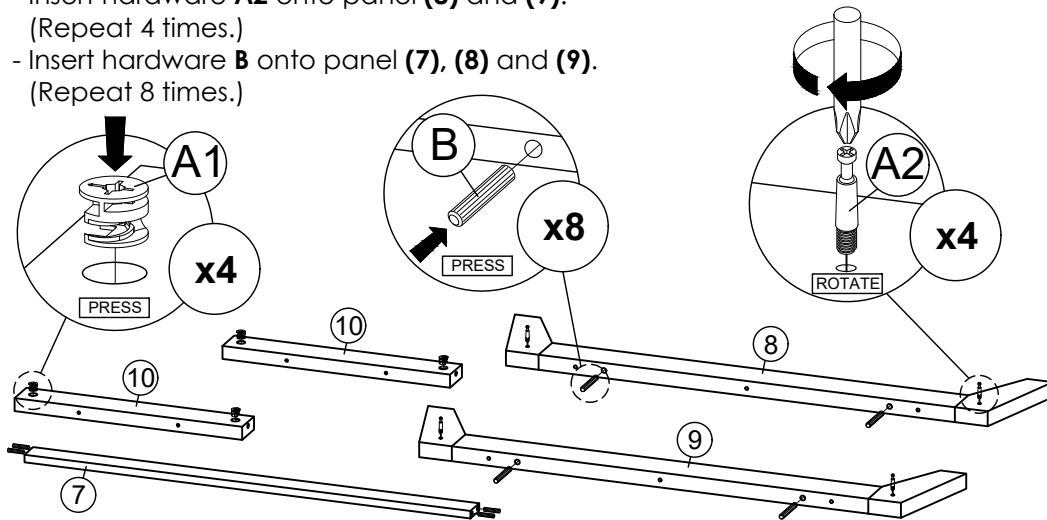

\* Ensure the arrows on hardware **A1** point towards mounting positions.

## STEP 4

Fix hardware **I1 (R)** into panel (5) with hardware **E**.  
(Repeat 3 times for each hardware.)

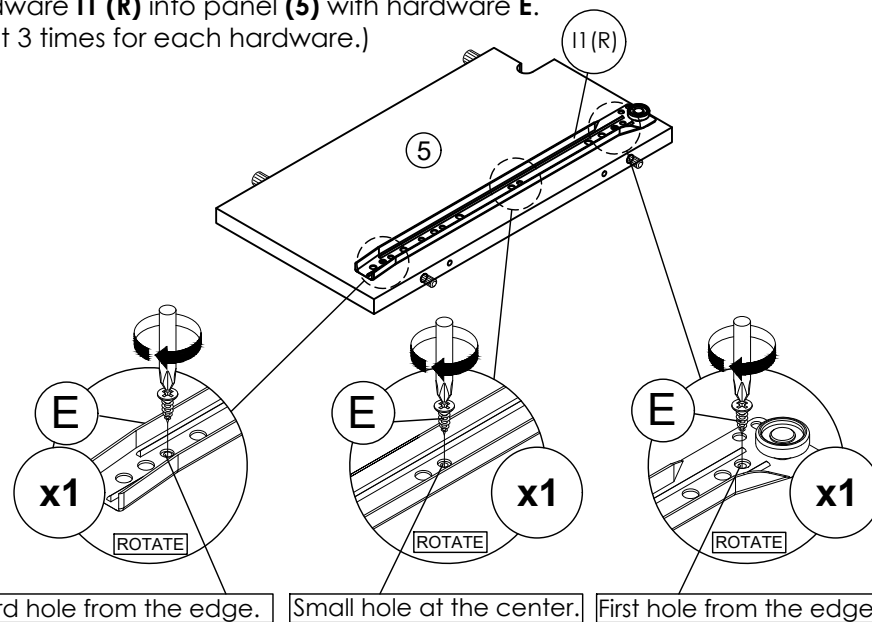

Third hole from the edge.

Small hole at the center.



First hole from the edge.

# ASSEMBLY INSTRUCTIONS

PAGE: 3/5

## STEP 5



- Attach panel **(3)** and **(4)** to panel **(6)** and **(7)**.
  - Insert all hardware **A2** into **A1**.
  - Rotate all **A1** until tight.
  - Apply **A3** onto all **A1**.
- (Repeat 2 times.)

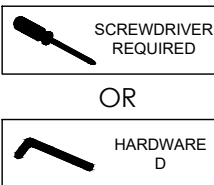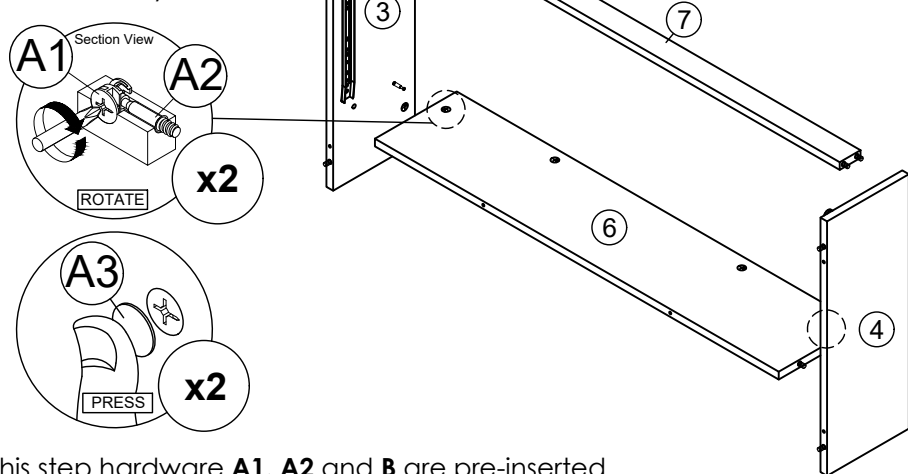

\* In this step hardware **A1**, **A2** and **B** are pre-inserted.

## STEP 7

- Connect panel **(2)** to panel **(3)**, **(4)**, **(5)** and **(6)** by using hardware **C** and **D**.
- (Repeat 8 times.)


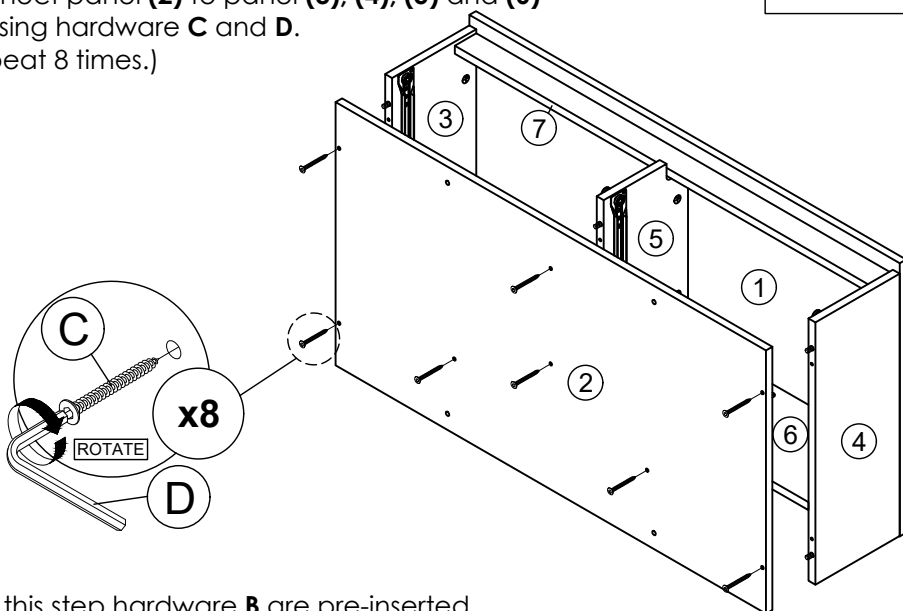


\* In this step hardware **B** are pre-inserted.

# MODEL : HMZ-FN-CT-1396-WT

## STEP 6



- Attach panel **(1)** to panel **(3)**, **(4)**, **(5)** and **(6)**.
  - Insert all hardware **A2** into **A1**.
  - Rotate all **A1** until tight.
  - Apply **A3** onto all **A1**.
- (Repeat 8 times.)

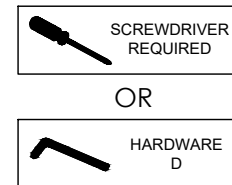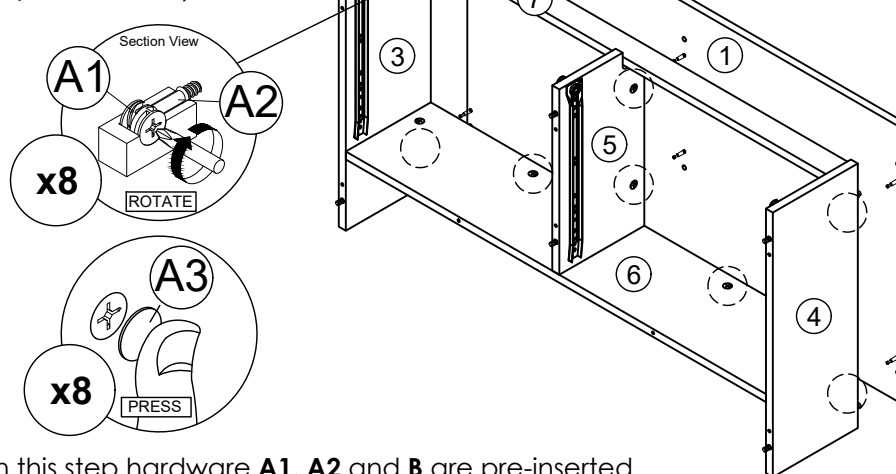

\* In this step hardware **A1**, **A2** and **B** are pre-inserted.

## STEP 8

- Attach panel **(8)** and **(9)** to panel **(10)**.
  - Insert all hardware **A2** into **A1**.
  - Rotate all **A1** until tight.
  - Apply **A3** onto all **A1**.
- (Repeat 4 times.)

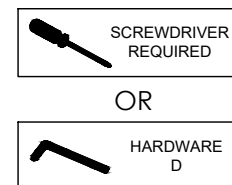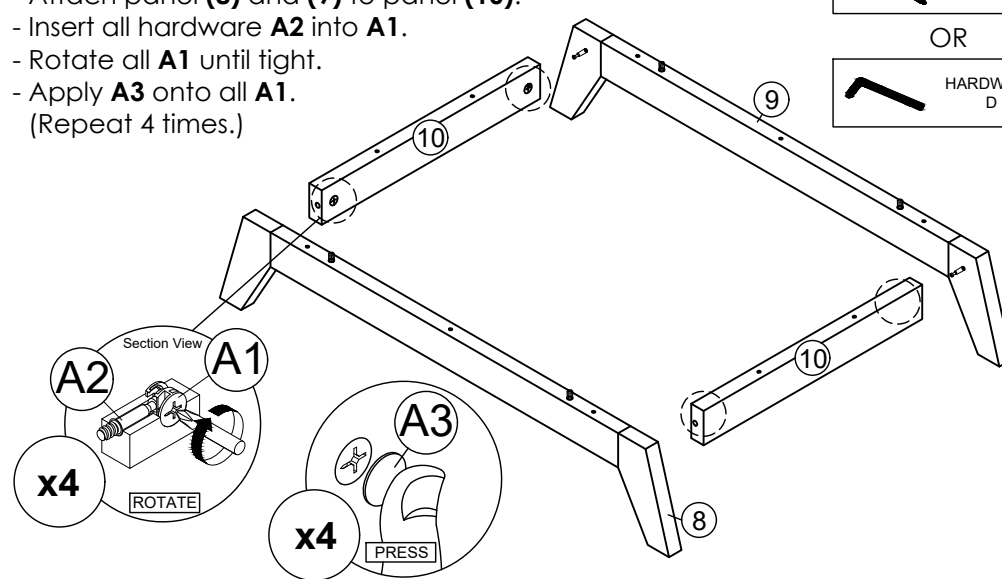

\* In this step hardware **A1**, **A2** and **B** are pre-inserted.


# ASSEMBLY INSTRUCTIONS

PAGE: 4/5

MODEL : HMZ-FN-CT-1396-WT


## STEP 9

Assemble panel **(8)**, **(9)** and **(10)** with panel **(2)** by using hardware **F**.  
(Repeat 10 times.)

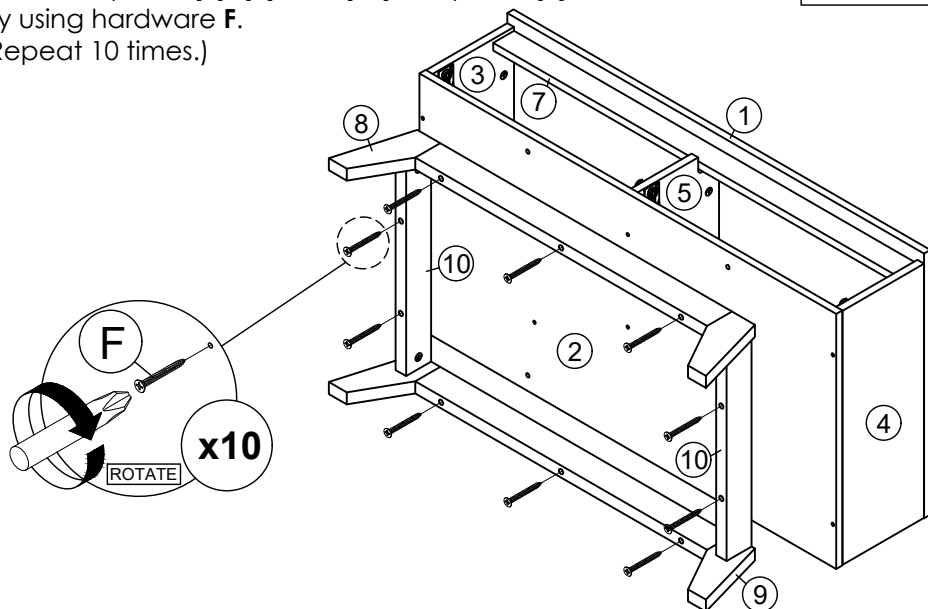


## STEP 10

Hit hardware **H** into bottom of panel **(8)** and **(9)**.  
(Repeat 4 times.)

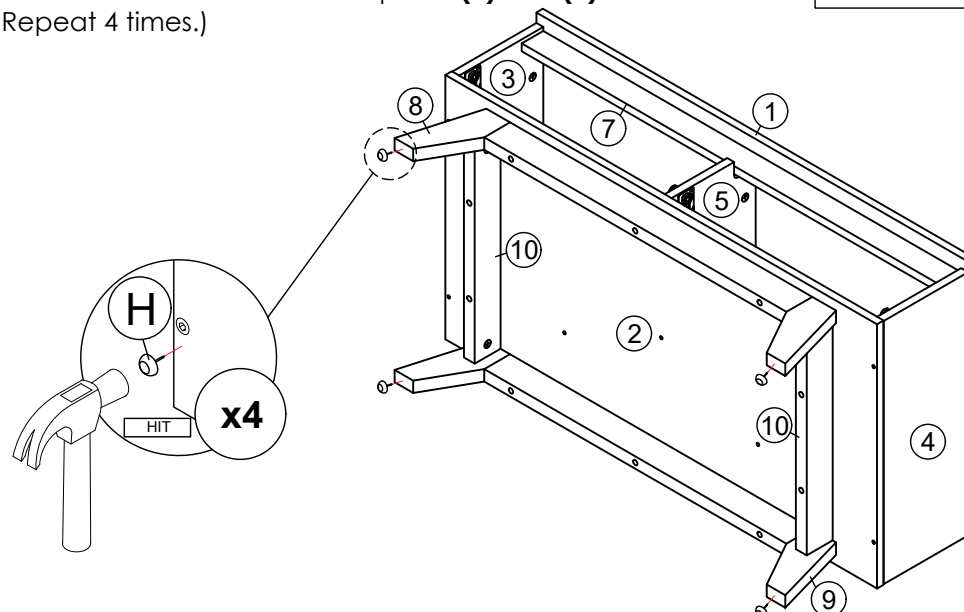


## STEP 11

Assemble panel **(14)** to panel **(11)** or **(12)** and **(13)** by using hardware **F**.  
(Repeat 16 times.)

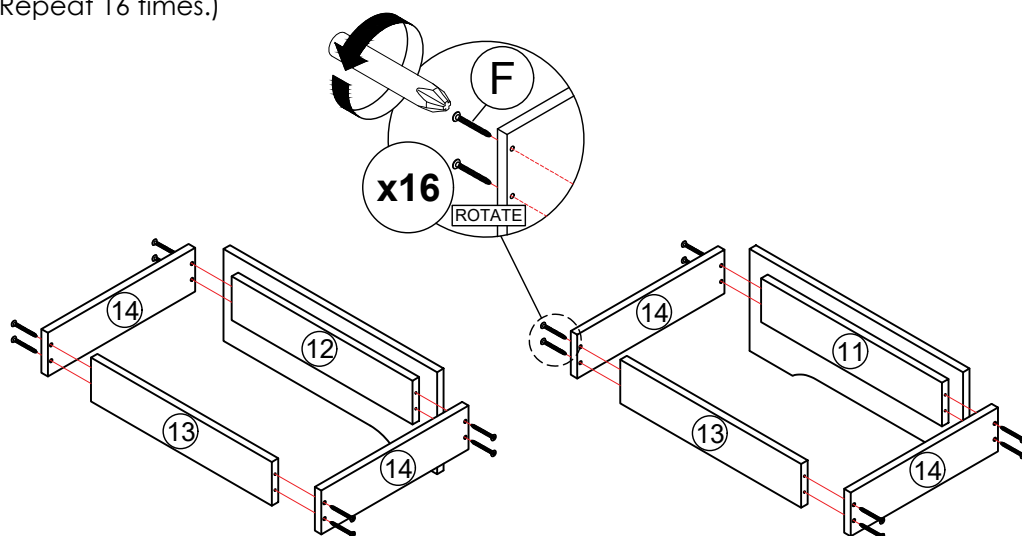

## STEP 12

Assemble panel **(15)** to entire body with hardware **G**.  
(Repeat 16 times.)

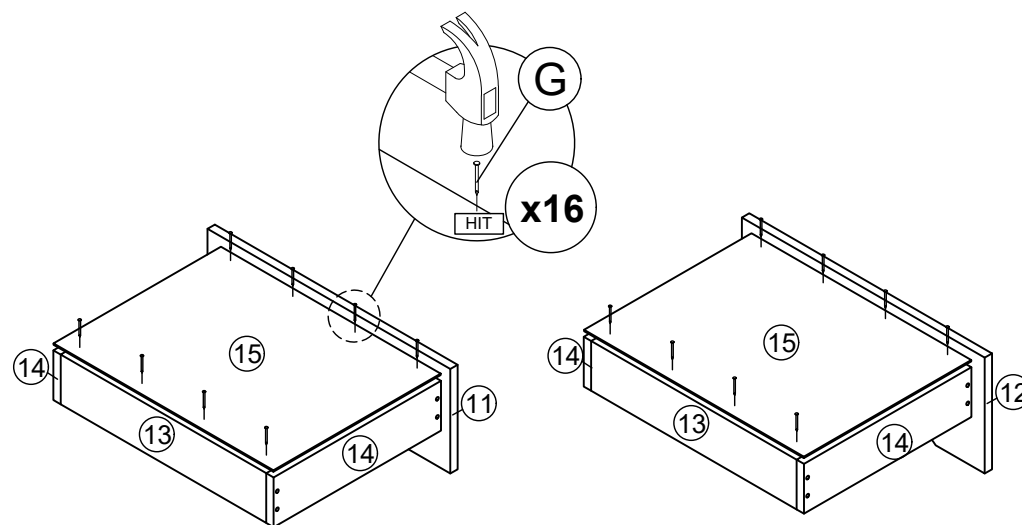


# ASSEMBLY INSTRUCTIONS

PAGE: 5/5

## STEP 13

Assemble hardware **I2 (L/R)** to panel **(15)** by using hardware **E**.  
(Repeat 3 times for each hardware.)

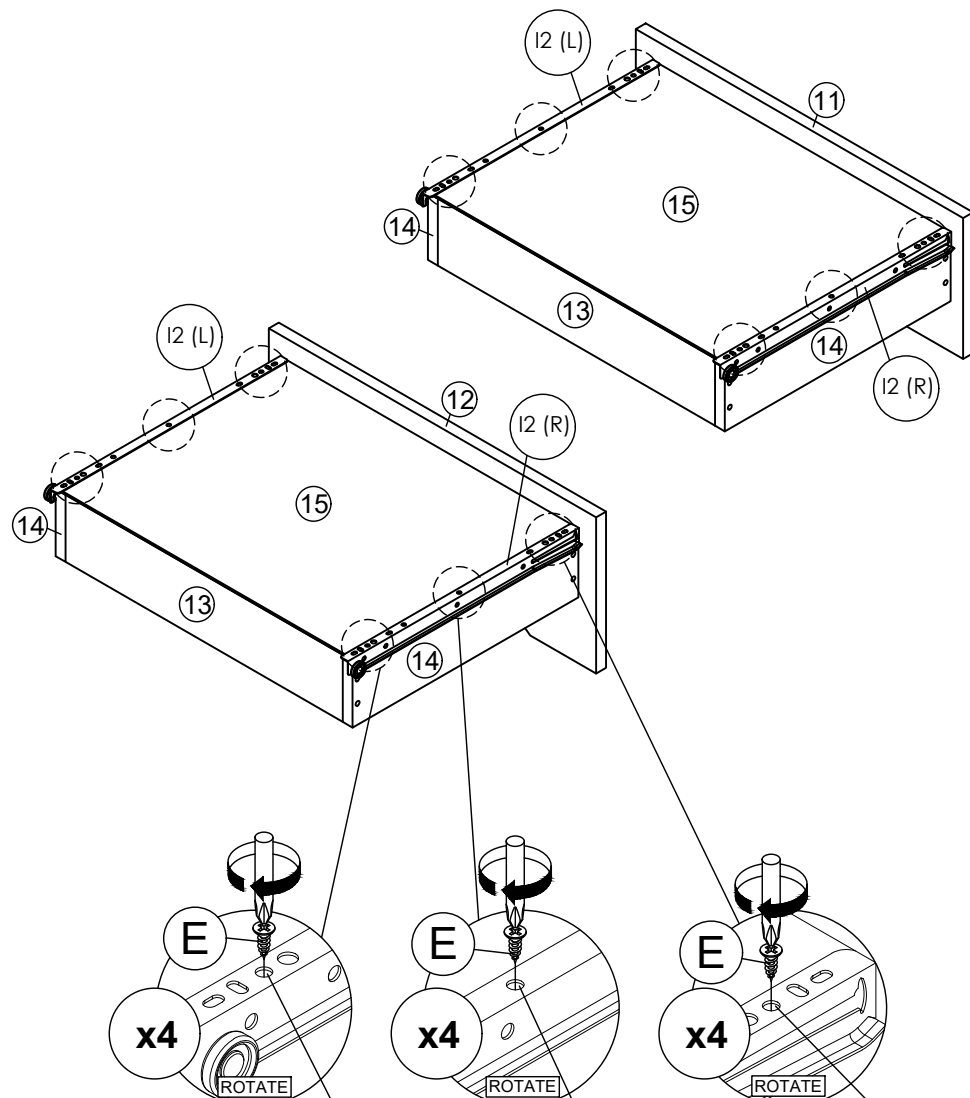

Third hole from the edge. Hole at the center. Third hole from the edge.

\*Hardware **I2 (L/R)** shall be leaning against panel **(11)** or **(12)** when assembling.

# MODEL : HMZ-FN-CT-1396-WT

## STEP 14

Put all the drawer in place along the drawer slides.

