


ASSEMBLY INSTRUCTION

- 1) DO NOT FULLY TIGHTEN THE NUT OR BOLT UNTIL THE PRODUCT IS ASSEMBLED.
(TO AVOID CAUSING DAMAGE TO THE THREAD DO NOT OVER TIGHTEN THE NUT OR BOLTS)
- 2) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN

MODEL:
TIKO TALL BOY
1027COD44



PART LIST

CODE	QTY
A	1
B	1
C	1
D	1
E	1
F	2
G	1
H	1
I	1
J	1
K	1
L	1
M	1
N	1
O	3
P	5
Q	2
R	2
S	3
T	3
U	3
V	5
W	1

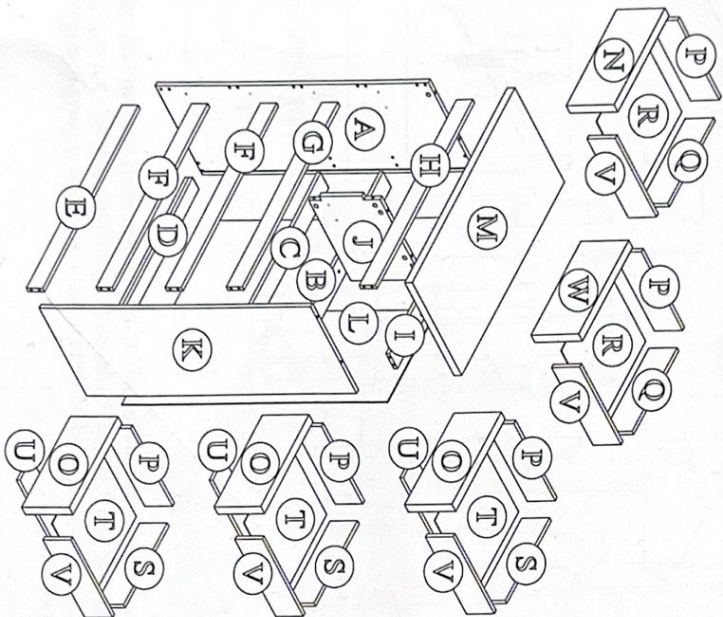

HARDWARE LIST


I	Wood Dowel	II	Minifix Minifix Cam Pin	III	3x12mm Screw	IV	3x12mm Screw	V	Nail	VI	Guide	VII	3.5x16mm Screw
22	Pcs	22	Sets	12	Pcs	1	Pc	54	Pcs	4	Pcs	4	Pcs
VIII	4x32mm Screw	IX	Full Extension Drawer Slide 10"	X	3x12mm 41x32mm Screw	XI	41x32mm Screw	XII	Allen Key M4				
2	Pcs	5	Sets	60	Pcs	40	Pcs	1	Pc				

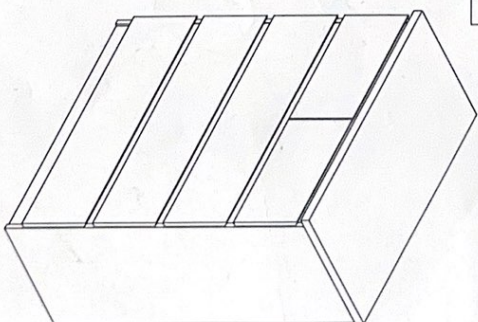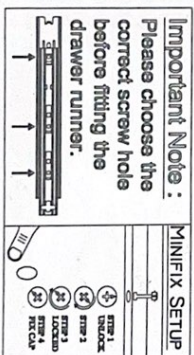

COMPLETE


STEP 1

Insert 3x pin (11 pin) into panel [A] and 3x dowels (1) into corresponding holes in panels [B] [C] [D]. Slot together with side panel [A]. Place 3x locking nuts (11 nut) into holes in connecting parts and tighten with screwdriver.

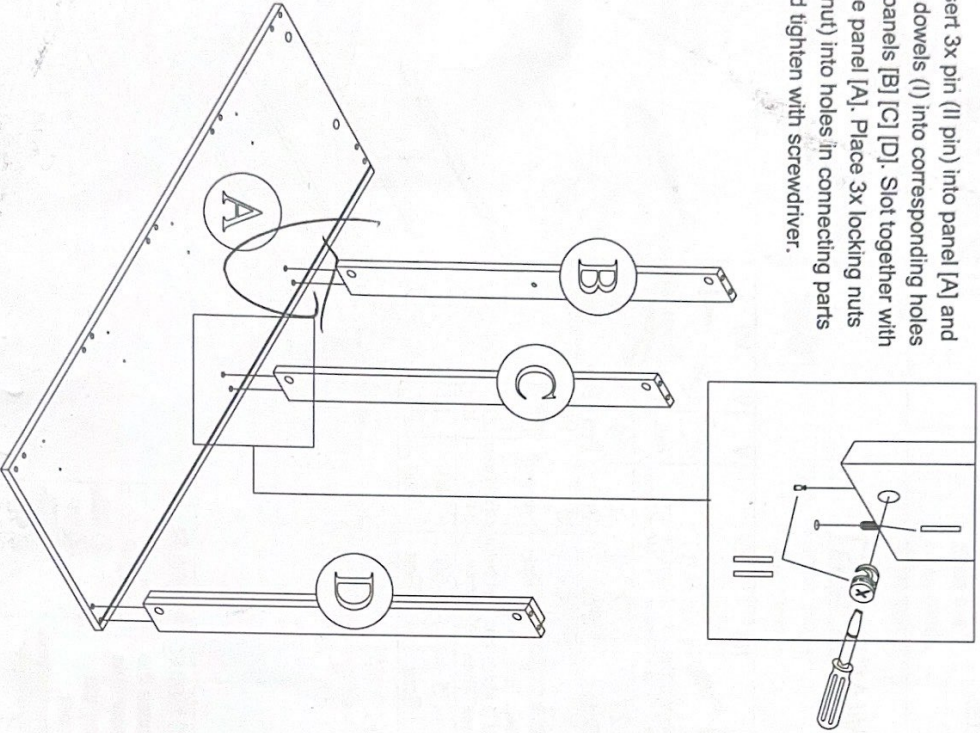


STEP 2

Insert 4x pin (11 pin) into panel [A] and 8x dowels (1) into corresponding holes in panels [E] [F]x2 [G] [H] [I]. Slot together with side panel [A]. Place 4x locking nuts (11 nut) into holes in connecting parts and tighten with screwdriver.

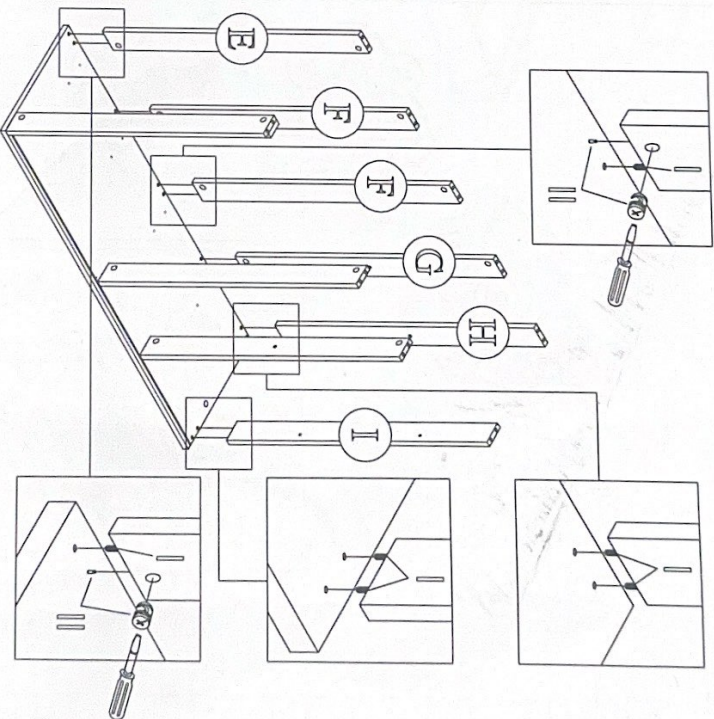


STEP 3

Insert 2x pin (II pin) into corresponding holes in panels [G] [H]. Place 2x locking nuts (II nut) into holes in connecting parts and tighten with screwdriver.

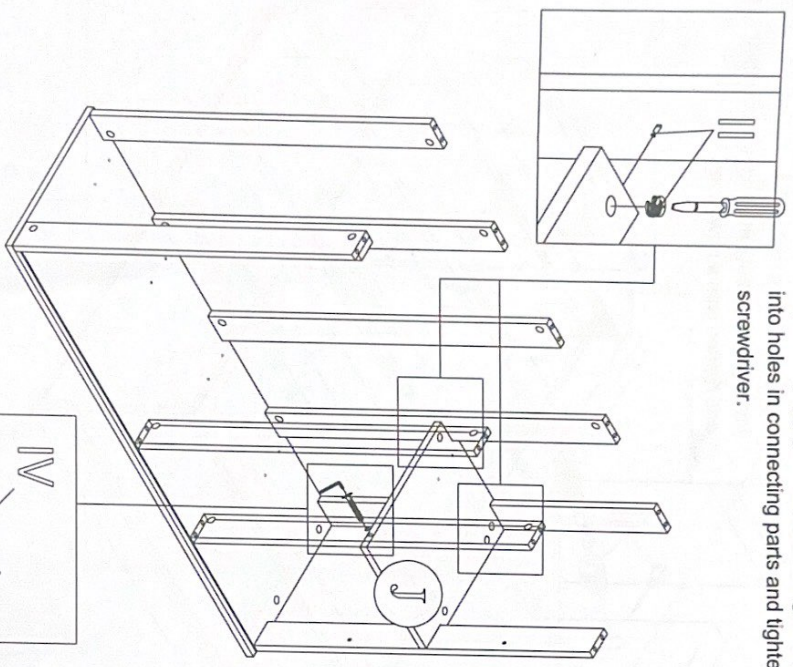


Join panel [J] to panel [B] by screw in 1x screws (IV) into corresponding holes and tighten with allen key (XII).

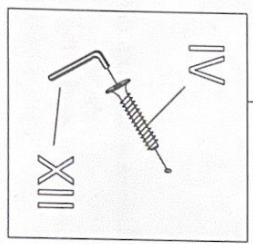


STEP 4

Insert 7x pin (II pin) into panel [K] and 11x dowels (I) into corresponding holes in panels [B] [C] [D] [E] [F]x2 [G] [H] [I]. Slot together with side panel [K]. Place 7x locking nuts (II nut) into holes in connecting parts and tighten with screwdriver.

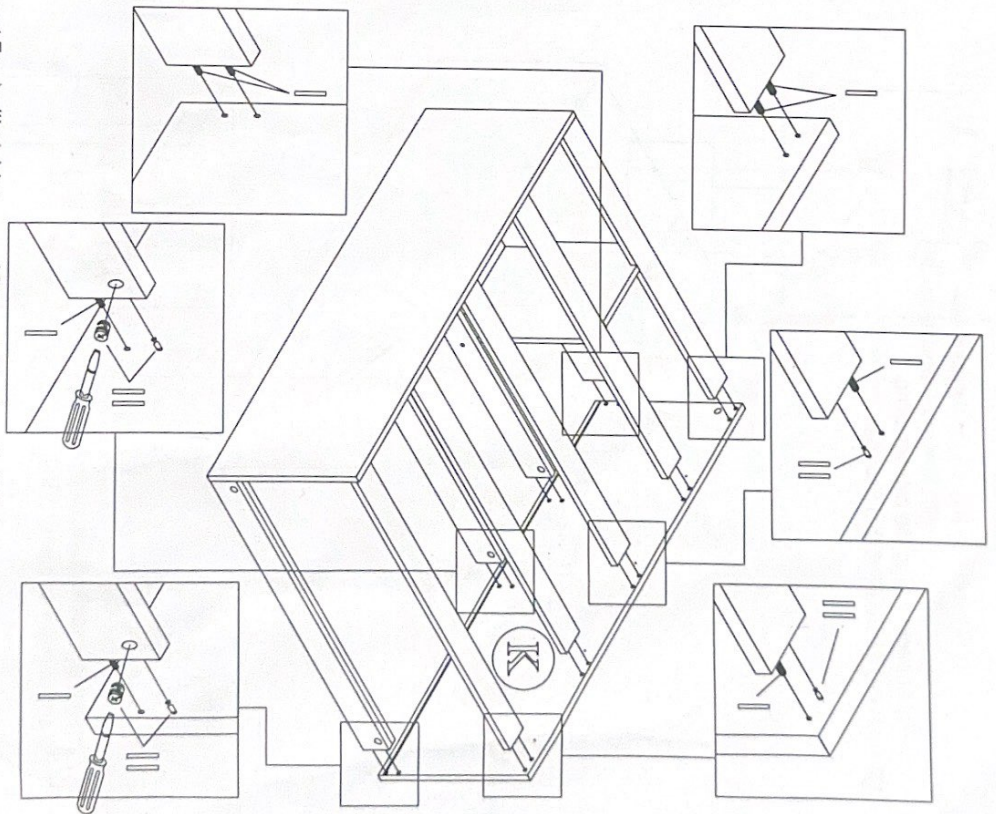

STEP 5


Attach back panels [L] to the cabinet using 18x nails (V) as shown with a hammer.

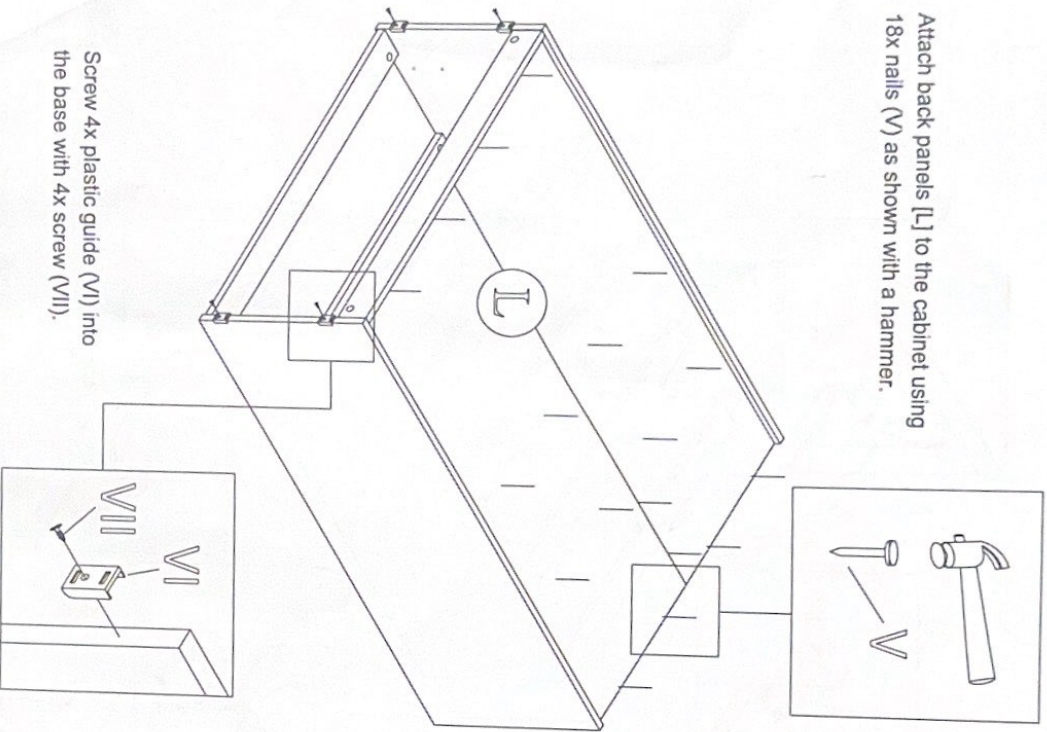

Screw 4x plastic guide (VI) into the base with 4x screw (VII).



STEP 6

Insert 6x pin (II pin) into top panel [M]. Slot together with the rest of the cabinet. Place 6x locking nuts (II nut) into holes in connecting part and tighten with screwdriver.

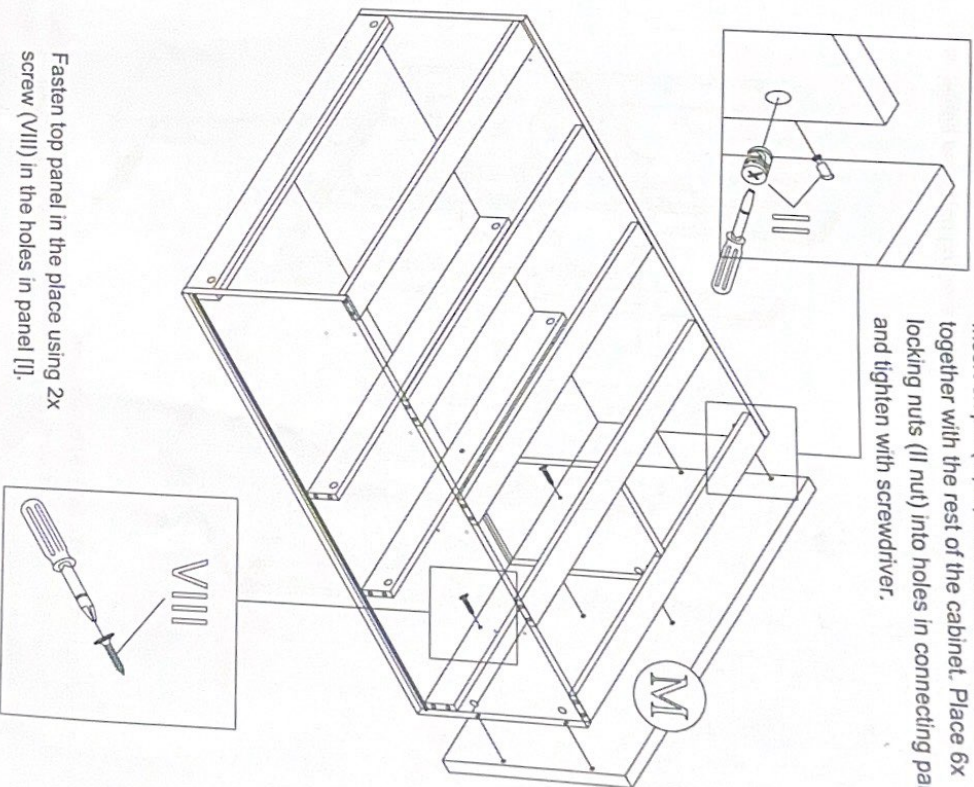

Fasten top panel in the place using 2x screw (VIII) in the holes in panel [I].

STEP 7

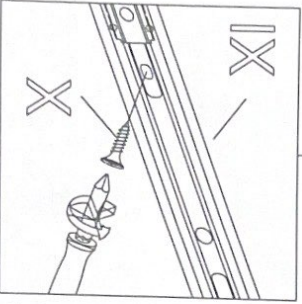
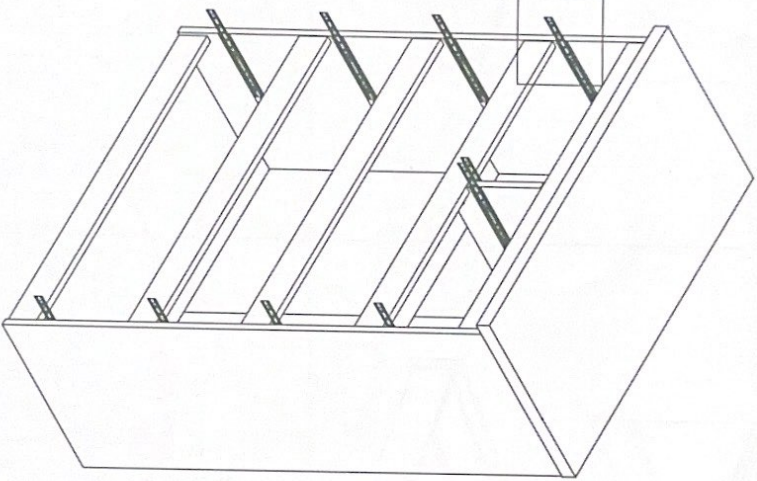


Attach 4x slide rails (IX) in place on each of the panels [A] [K] and 2x slide rails (IX) to both sides of panel [J] using 3x 12mm small screws (X) in each rail bracket. Fasten all screws.

STEP 8

STEP (A)


Attach panels [P] [M] into panels [N] [O] [W] screw with 4x screw (XI) with screwdriver.

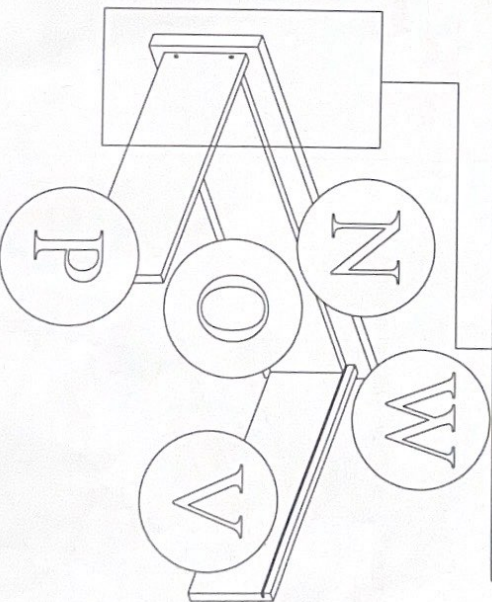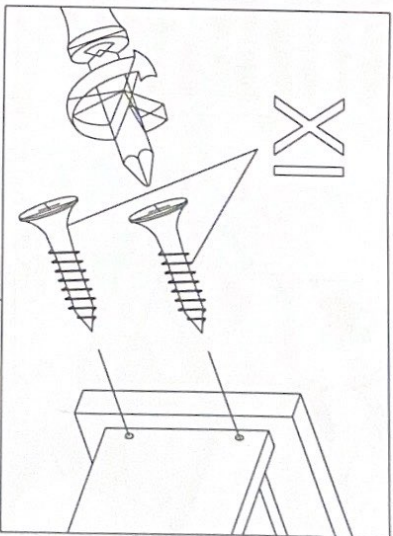

STEP 8


STEP (B)

Join panel (Q) with the small screw (X). Join panel (S) with the big screw (X).

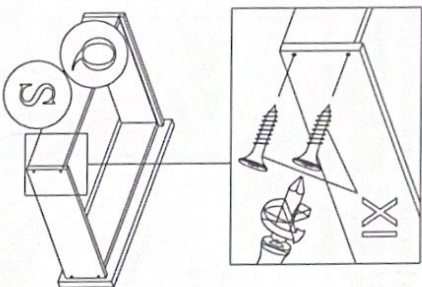


STEP (C)

Slide the base panel (R) to place in the grooves in small drawer side panels. Slide the base panel (T) to place in the grooves in big drawer side panels.

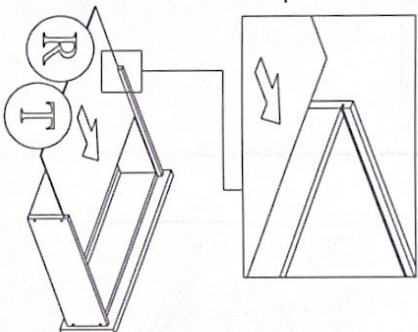


STEP (D)

Using 8x Nail (V) as shown with a hammer.

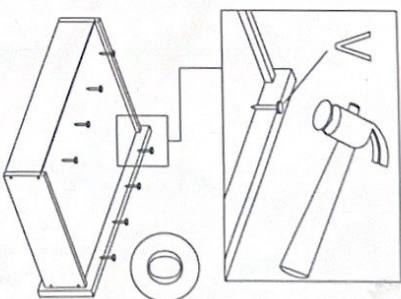


STEP (E)

Using 8x Nail (V) as shown with a hammer.

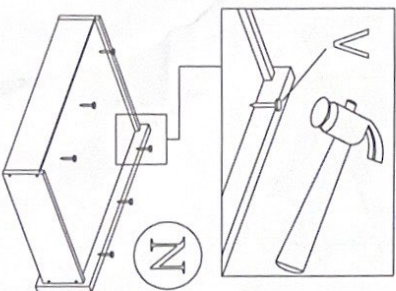

STEP (F)

Attach panel (U) into base panel of big drawer screw with 4x screw (II).

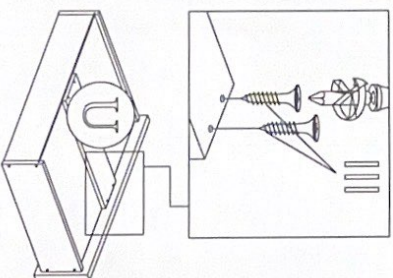

STEP (G)

Attach 2x rail component (IX) to both left and right of the drawer using 3x screw (X) in each rail.

