

RETURN / DAMAGE CLAIM INSTRUCTIONS

1. **DO NOT** discard of the box / original packaging.

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

2. Take a photo of the box markings.

A photo of the markings (text) on the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

3. Take a photo / Video of Damage (if applicable).

A photo /Video of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

4. Send us an email with the images requested.

Email us directly with the attached images, order number (SOXXXX) and a description of your claim.


Auckland / Waikato / BOP Branch:	sales@tsbliving.co.nz
Christchurch Branch:	customersupport@tsbliving.co.nz
Wellington Branch:	wellington@tsbliving.co.nz

ASSEMBLY INSTRUCTION


MODEL : CF 9377 (S')

A	Headboard	1 pc
B	Footboard	1 pc
C	Side Rail C1 C2	2 pcs
D	137mm 14 Pcs Slat	1 pc
E	Center Rail 2040mm	1 pc
F	Support Leg 315mm	2 pcs
G	Trundle Front Panel (P1)	2 pcs
H	Trundle Back Panel	2 pcs
I	Trundle Side Panel	4 pcs
J	Bottom Panel	2 pcs
K	Bottom Panel Leg Support	4 pcs
L	Bottom Panel Small Support	2 pcs
Packing Hardware		
1	M5 x 70mm	1 pc
2	M4 x 65mm	1 pc
3	JCRB M6 X 40	2 pcs
4	CSK M4 x 16mm	32 pcs
5	CSK M4 x 25mm	2 pcs
6	CSK M4 x 32mm	51 pcs
7	CSK M4 x 50 mm	16 pcs
8	JCRB M8 X 20	12 pcs
9	Roller	8 pcs
10	Small Adjuster	2 pcs
11	Power Nail 6/8	32 pcs


Step 1 : Attach side rail (C) to footboard (B) and headboard (A) by pushing the bracket down to fit it.

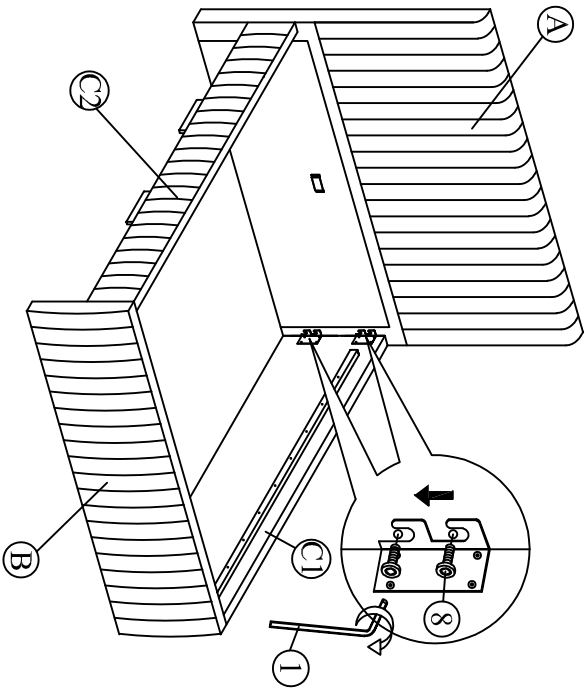


Step 2 : Attach the support legs (F) to the center rail (E) of the bed as shown.

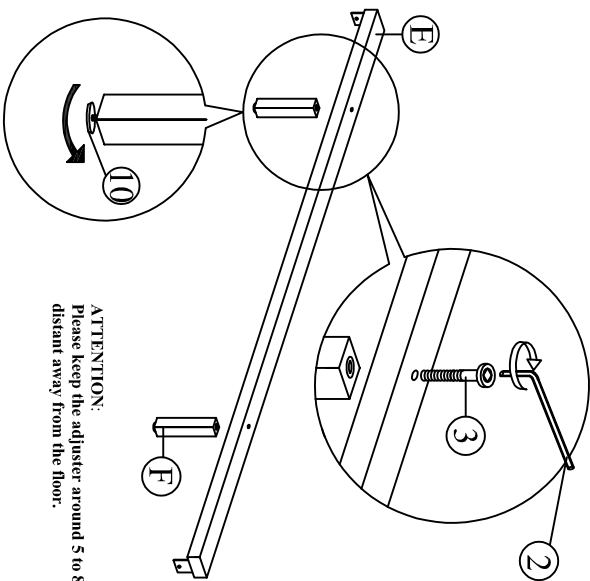


Step 3 : Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (5) using screw driver (not included) to the headboard (A) and footboard (B).

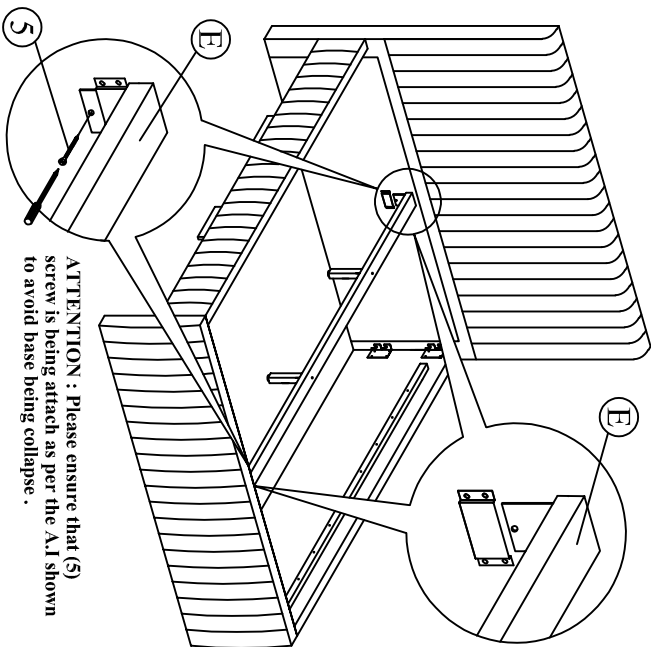


Step 4 : Affix the Slat (D) to the side rail support wood and the center rail (E). Tighten all the 4 corner.

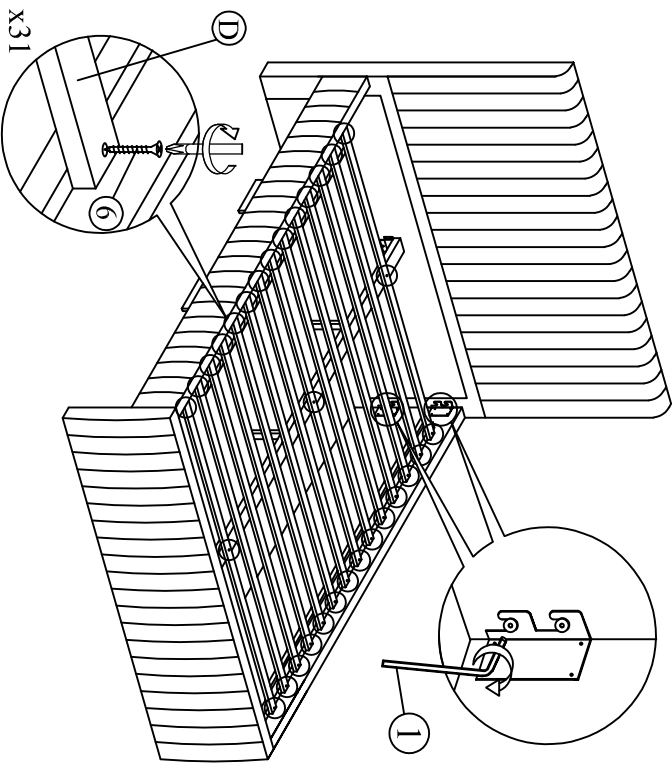


Step 5 : Tighten the side panel (I) to the front panel (G) and back panel (H) with screws (7) using screw driver (not included) .

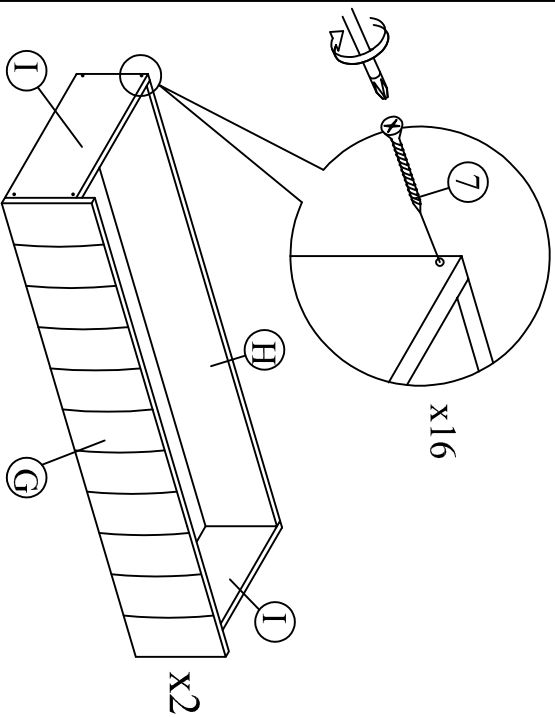


Step 6 : Slide the footboard bottom panel (J) to the set up drawer.

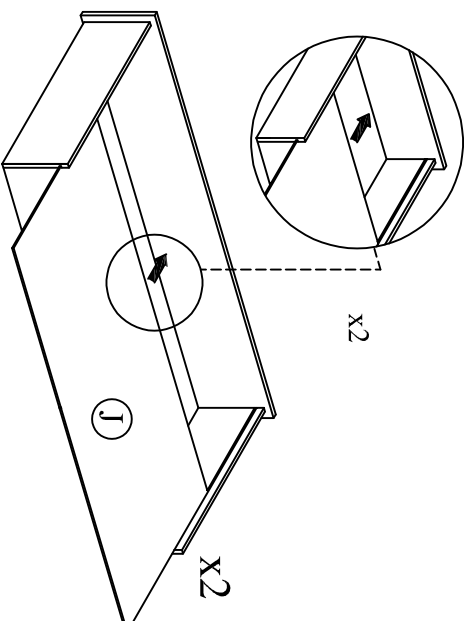

Step 7 : Tighten the bottom panel support (K & L) with screws (6) using screw driver (not included). Attach the bottom panel with Nail (11) using the hammer (not included).

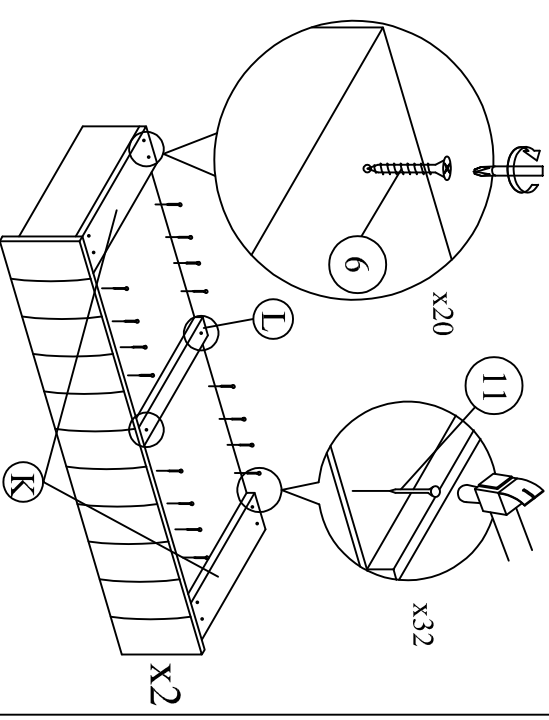

Step 8 : Tighten the roller (9) with screws (4) using screw driver (not included) .

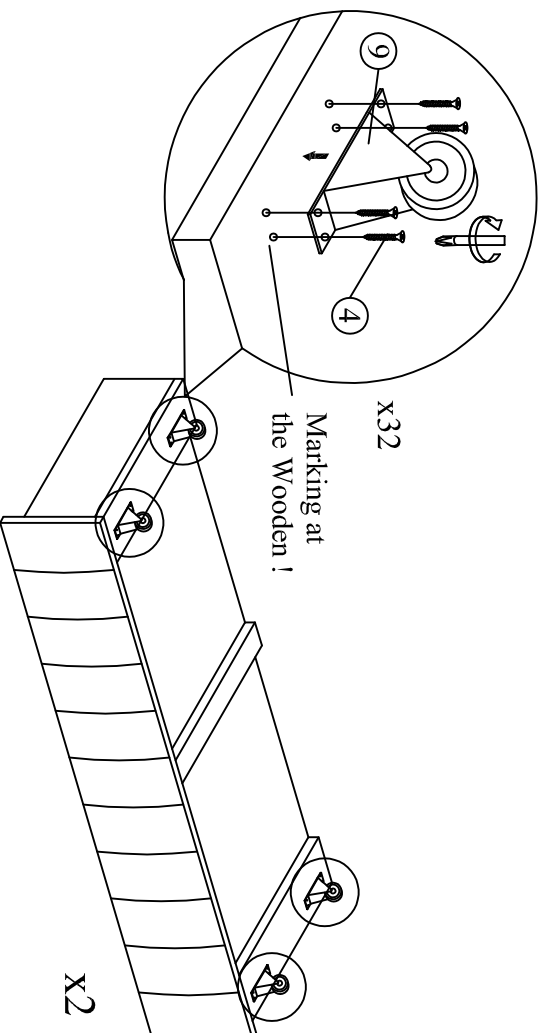

Step 9 : Assembly is complete.

