


PR6656

# PART LIST

CODE	QTY
A	1
B	1
C	1
D	1
E	1
F	1
G	2
H	2
I	1
J	1
K	1
L	1
M	1
N	2
O	1

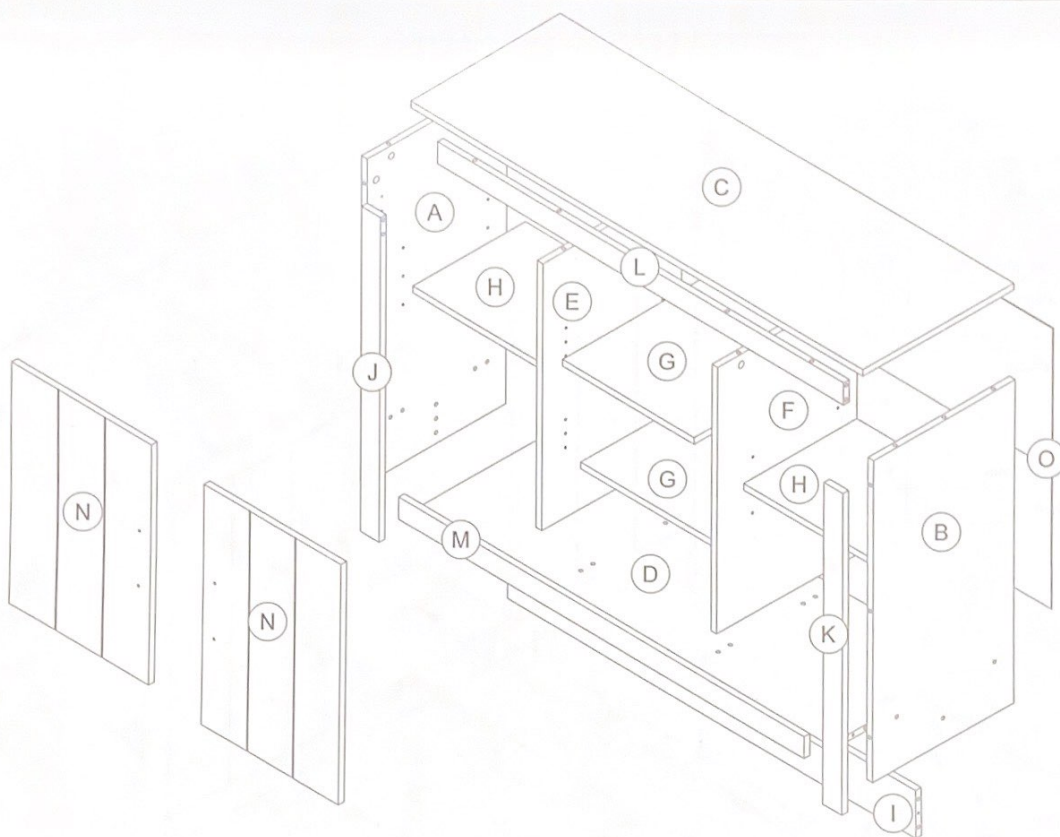









## ASSEMBLY INSTRUCTIONS

DO NOT FULLY TIGHTEN ANY BOLTS BEFORE ALL PARTS ARE LOOSELY ASSEMBLED. THE PRODUCT/FITTINGS MAY BE DAMAGED IF OVERTIGHTENED. BEWARE OF CROSS THREADING SCREWS AND BOLTS DURING ASSEMBLY. SMALL COMPONENT PARTS COULD CHOKE A CHILD IF SWALLOWED. WE STRONGLY RECOMMEND THAT YOU KEEP CHILDREN AWAY FROM THE WORK AREA.

SIDEBOARD 3233

# HARDWARE LIST

1		Minifix Bolt	18 pcs
2		Minifix Cam	18 pcs
3		Wood Dowel $\phi 8 \times 30 \text{mm}$	26 pcs
4		Screw $\phi 3.5 \times 16 \text{mm}$	18 pcs
5		PVC Nail With Pin	5 pcs
6		Hinges 7/8"	4 pcs
7		Handle Screw $\phi 4 \times 19 \text{mm}$	4 pcs
8		Handle - 128mm	2 pcs
9		Shelf Support $\phi 5 \times 16 \text{mm}$	16 pcs
10		Screw $\phi 6.3 \times 50 \text{mm}$	10 pcs
11		Nail	38 pcs
12		Allen Key M4	1 pc
13		Seal Sticker - 18mm	6 pcs
14		Iron L Bracket	1 pc

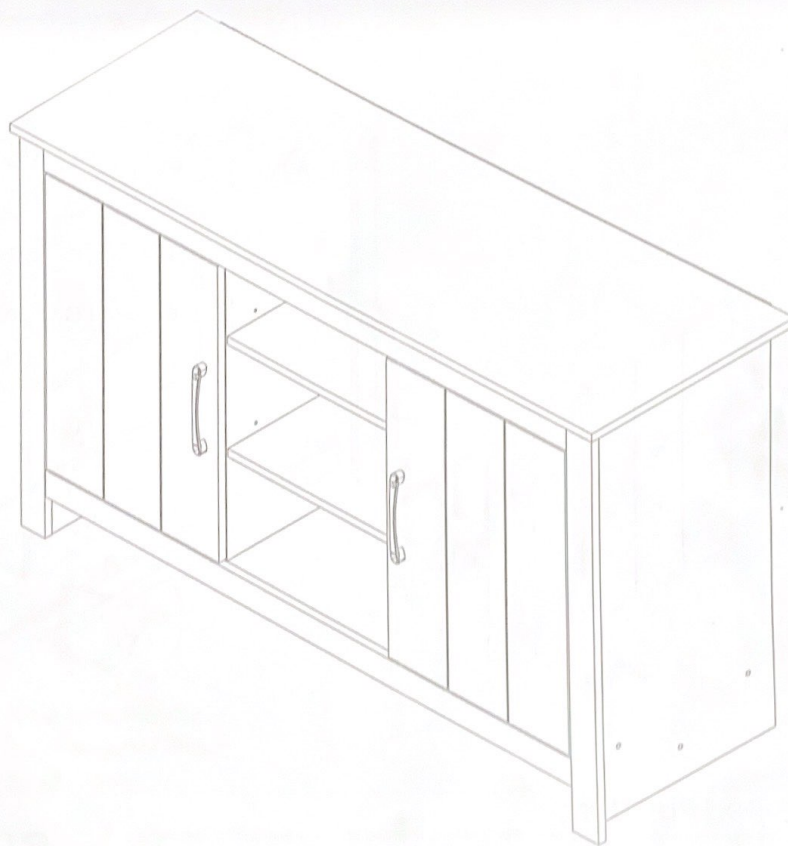

## Minifix Setup :



STEP 1  
UNLOCK


STEP 2

STEP 3  
LOCK



# STEP 1

Insert dowels (1) and bolt (2) into all panel as shown.

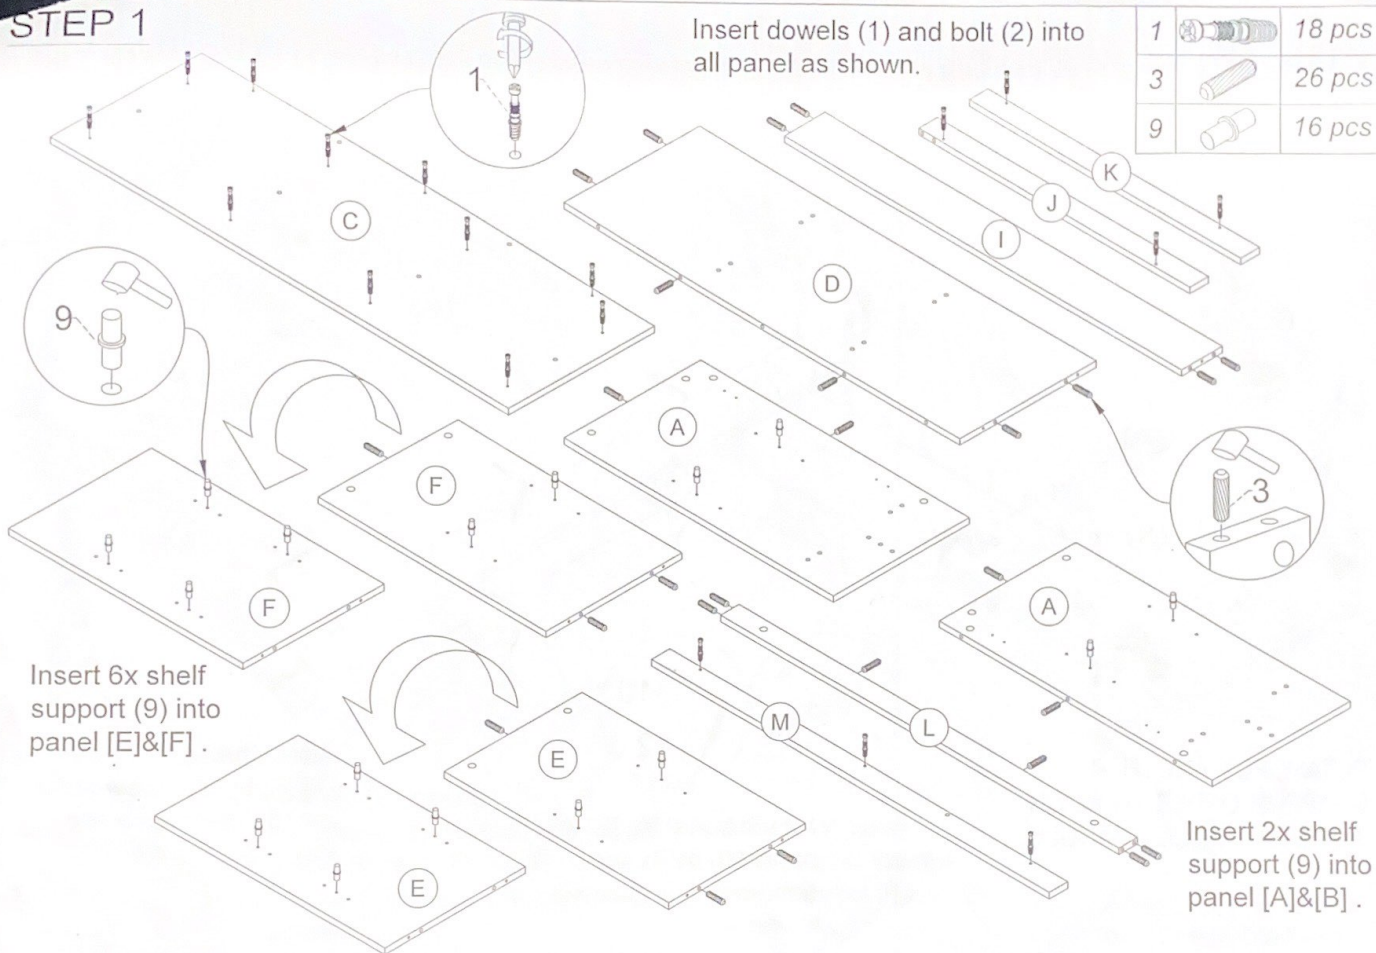
1		18 pcs
3		26 pcs
9		16 pcs



## STEP 2

4		8 pcs
6		4 pcs


Insert 2x hinges (6) into panel [N]x2 with 4x screw (4).

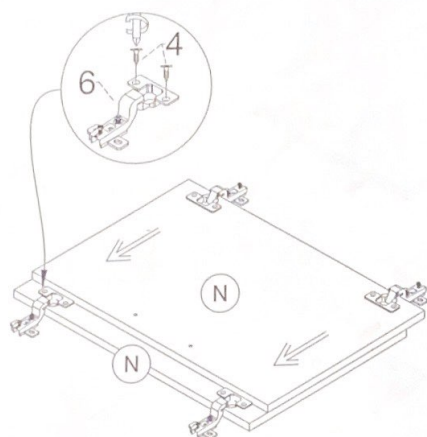

PLEASE PUT ANOTHER BOARD IN ORDER TO ALIGN THE HINGES ACCORDINGLY.

## STEP 3

10		10 pcs
12		1 pc

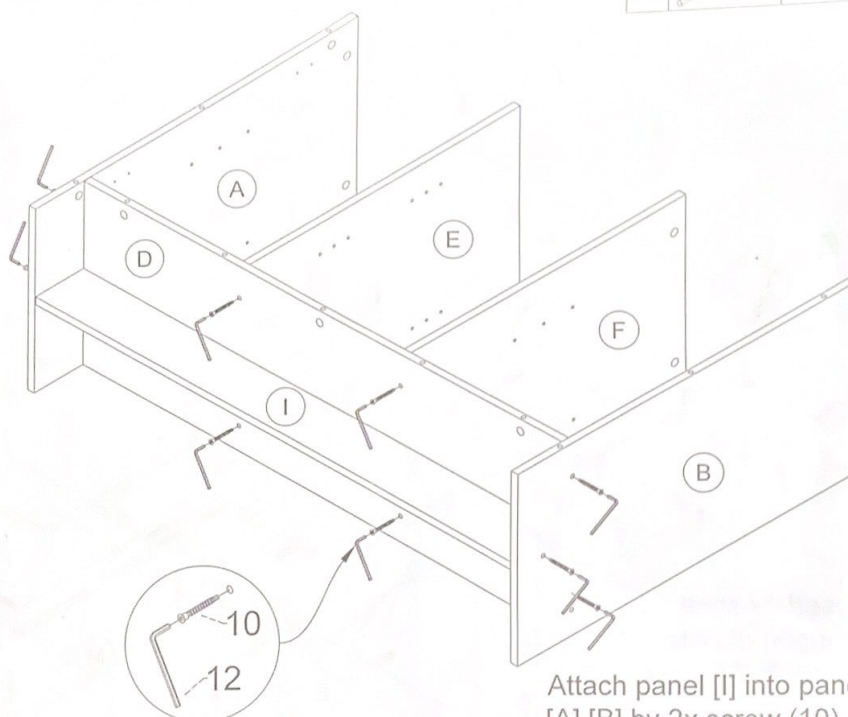

Attach panel [A] [B] [E] [F] into panel [D] by 8x screw (10) and tighten with a allen key (12)

Attach panel [I] into panel [A] [B] by 2x screw (10) and tighten with a allen key (12)




## STEP 4

2




18 pcs

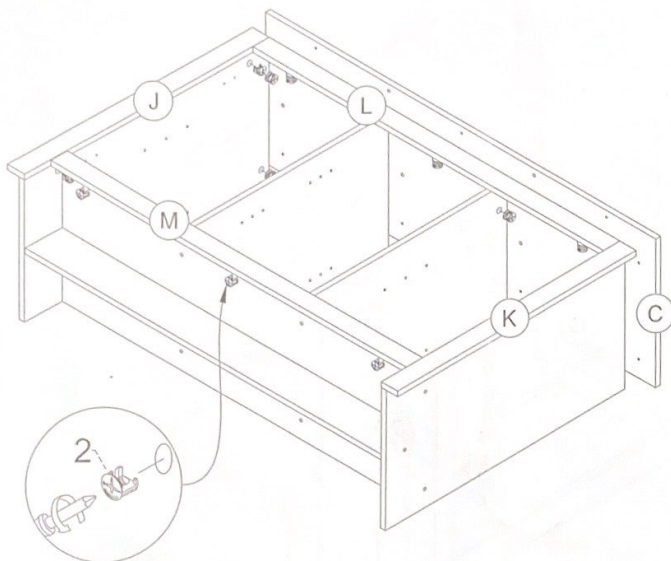

Panel [C] [J] [K] [L] [M] slot together with the rest of cabinet place 18x locking cam (2) into connecting parts and tighten with screwdriver.

## STEP 5

Attach panel [O] at the back of cabinet, using 38pcs nail (11) as shown with a hammer.

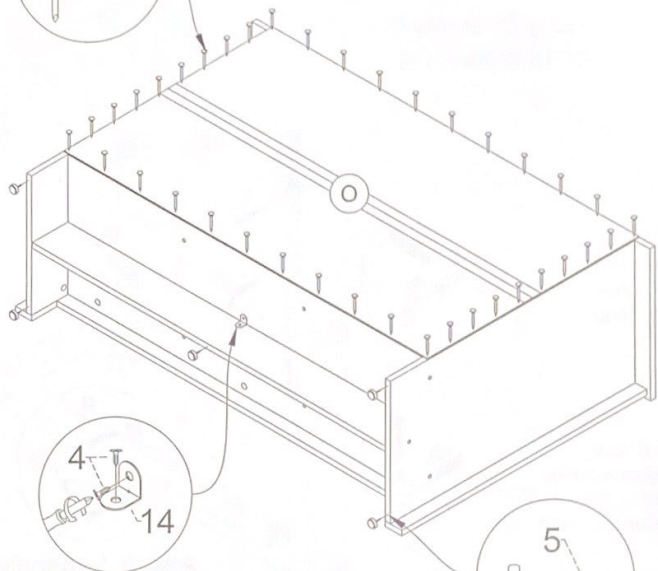

Attach 1x metal bracket (14) into the center panel [I] with 2x screw (4).

4		2 pcs
5		5 pcs
11		38 pcs
14		1 pc





Attach 5x Plastic nail pin (5) into the base.



## STEP 6

Using 2x screw (4)  
for 1x hinges (6).

Insert panel [G]x2  
[H]x2 into the  
cabinet as shown.

4		8 pcs
7		4 pcs
8		2 pcs
13		6 pcs

A. Lateral  
adjustment  
by screw  
adjusting

B. Vertical  
adjustment via  
slot in the  
mounting plate

C. Front-to-Back  
by the slacking  
the hinge arm  
mounting screw

Attach 1x handle  
(8) into panel [N]x2  
by 2x screw (7).

Close up both  
side screw holes  
with 6x holes  
sticker (13).

