


PR6659

PART LIST

| CODE | QTY |
|------|-----|
| A    | 1   |
| B    | 1   |
| C    | 1   |
| D    | 1   |
| E    | 1   |
| F    | 1   |
| G    | 2   |
| H    | 3   |
| I    | 1   |
| J    | 1   |
| K    | 1   |
| L    | 1   |
| M    | 1   |
| N    | 1   |
| O    | 1   |
| P    | 1   |
| Q    | 2   |
| R    | 1   |
| S    | 1   |

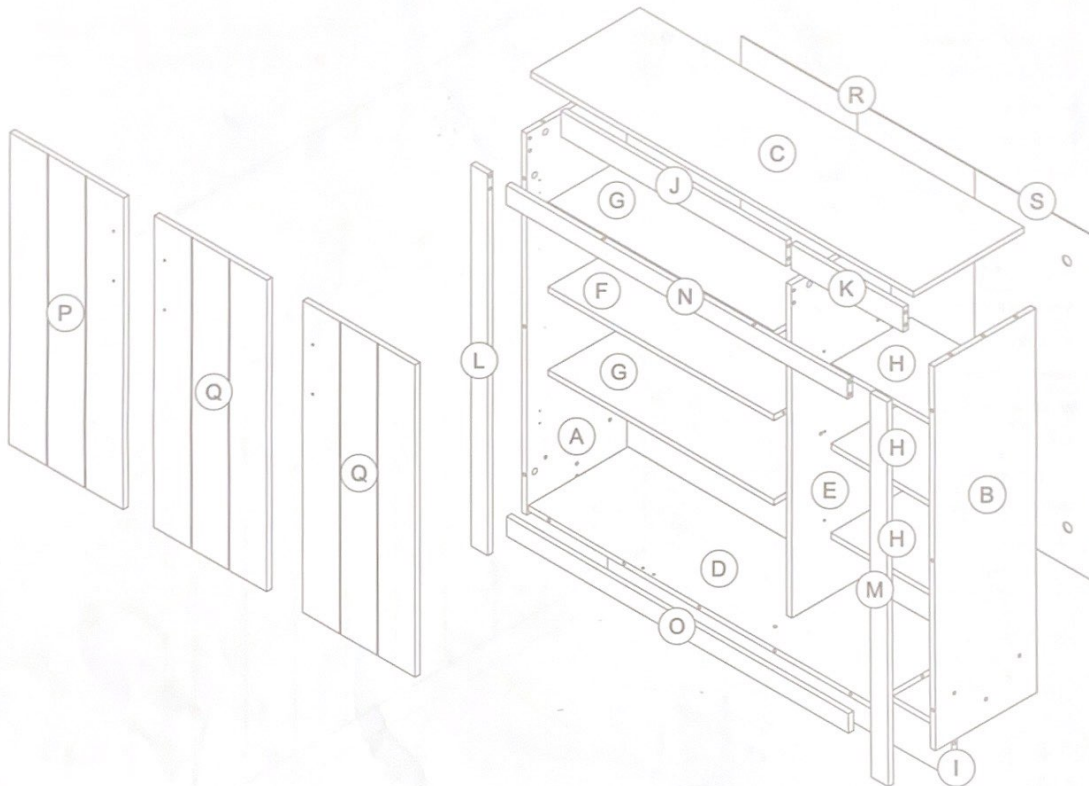


ASSEMBLY INSTRUCTIONS

DO NOT FULLY TIGHTEN ANY BOLTS BEFORE ALL PARTS ARE LOOSELY ASSEMBLED. THE PRODUCT/FITTINGS MAY BE DAMAGED IF OVERTIGHTENED. BEWARE OF CROSS THREADING SCREWS AND BOLTS DURING ASSEMBLY. SMALL COMPONENT PARTS COULD CHOKO A CHILD IF SWALLOWED. WE STRONGLY RECOMMEND THAT YOU KEEP CHILDREN AWAY FROM THE WORK AREA.

SHOE CABINET 3203

## HARDWARE LIST

|    |   |  |        |
|----|---|--|--------|
| 1  |    | Wood Dowel $\phi 8 \times 30 \text{mm}$    | 25 pcs |
| 2  |    | Wood Dowel $\phi 8 \times 50 \text{mm}$    | 2 pcs  |
| 3  |    | Minifix Bolt                               | 13 pcs |
| 4  |    | Minifix Cam                                | 13 pcs |
| 5  |    | Screw $\phi 6.3 \times 50 \text{mm}$       | 12 pcs |
| 6  |    | PVC Nail With Pin                          | 5 pcs  |
| 7  |    | Hinges 7/8"                                | 4 pcs  |
| 8  |    | Hinges 1/4"                                | 2 pcs  |
| 9  |    | Screw $\phi 3.5 \times 16 \text{mm}$       | 26 pcs |
| 10 |   | Iron L Bracket                             | 1 pc   |
| 11 |  | Handle - 128mm                             | 3 pcs  |
| 12 |  | Handle Screw $\phi 4 \times 19 \text{mm}$  | 6 pcs  |
| 13 |  | Nail                                       | 28 pcs |
| 14 |  | Seal Sticker - 18mm                        | 8 pcs  |
| 15 |  | Shelf Support $\phi 5 \times 16 \text{mm}$ | 20 pcs |
| 16 |  | PVC Stopper                                | 1 pc   |
| 17 |  | Allen Key M4                               | 1 pc   |

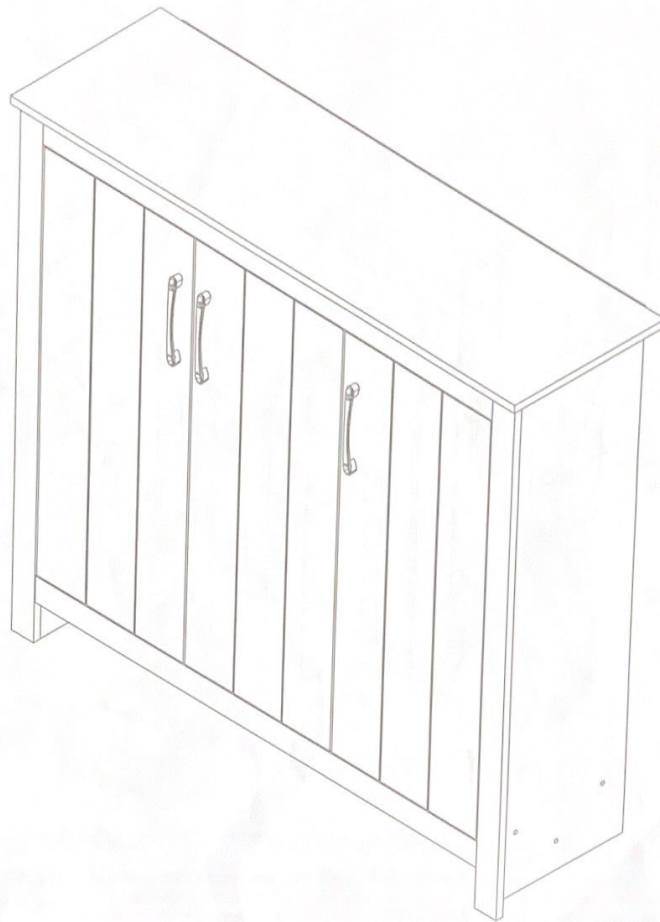

### Minifix Setup :








-  STEP 1  
UNLOCK
-  STEP 2
-  STEP 3  
LOCK

# STEP 1

Insert 10x shelf support (15) and into panels [A] [B] as shown.

Insert 1x PVC stopper (16) and into panels [D].

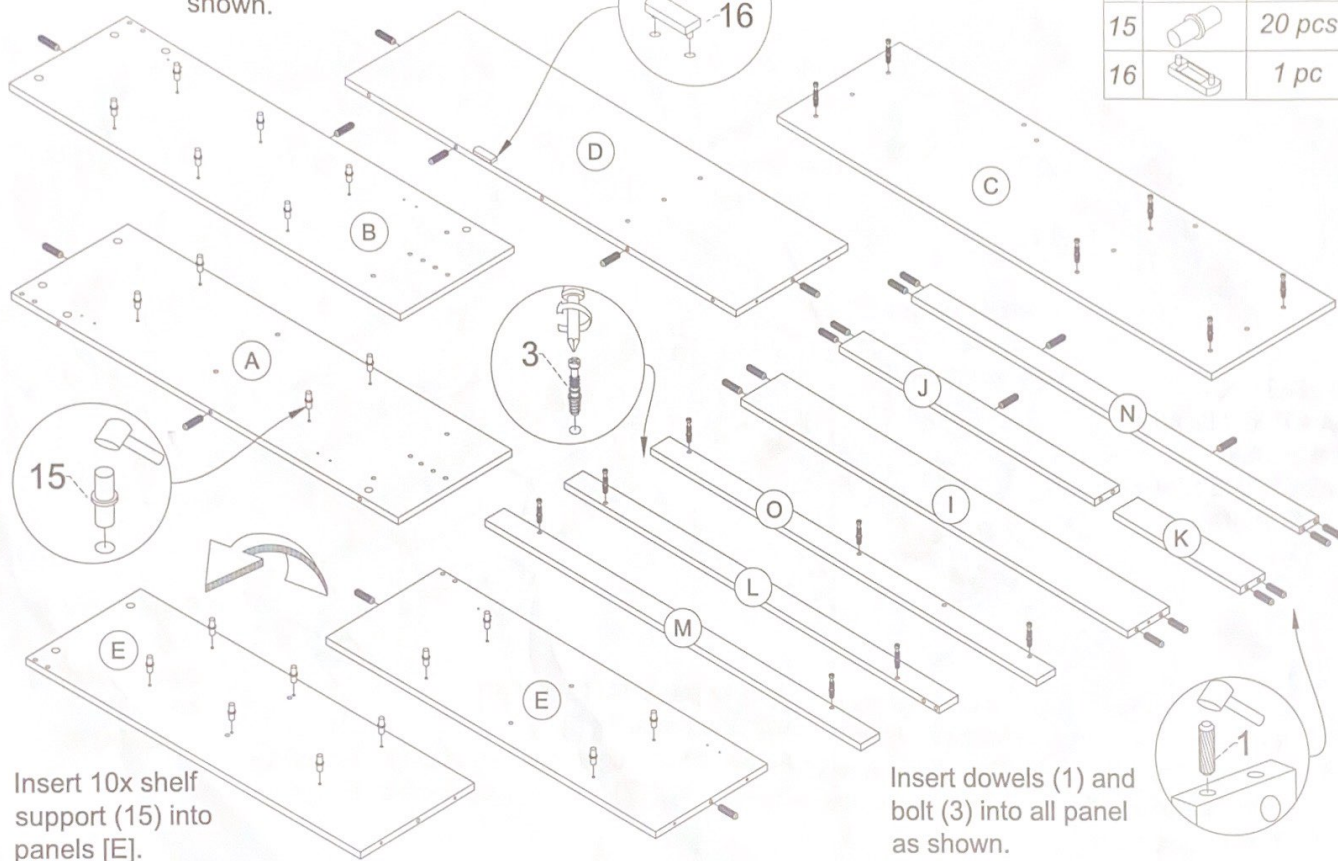


|    |   |        |
|----|---|--------|
| 1  |  | 25 pcs |
| 3  |  | 13 pcs |
| 15 |  | 20 pcs |
| 16 |  | 1 pc   |




Insert 10x shelf support (15) into panels [E].

Insert dowels (1) and bolt (3) into all panel as shown.


## STEP 2

|   |   |        |
|---|---|--------|
| 7 |  | 4 pcs  |
| 8 |  | 2 pcs  |
| 9 |  | 12 pcs |

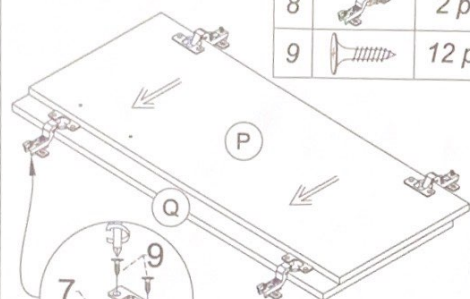

Insert 4x hinges (7) into panel [P] [Q] with 8x screw (9).

PLEASE PUT ANOTHER BOARD IN ORDER TO ALIGN THE HINGES ACCORDINGLY.


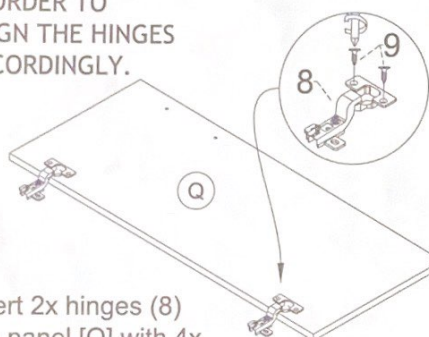


Insert 2x hinges (8) into panel [Q] with 4x screw (9).

## STEP 3

Attach 2x dowels (2) into panel [J] align with panel [K]. Slot it into corresponding holes in panel [A] [B] [E]

|    |   |        |
|----|---|--------|
| 2  |  | 2 pcs  |
| 5  |  | 12 pcs |
| 17 |  | 1 pc   |

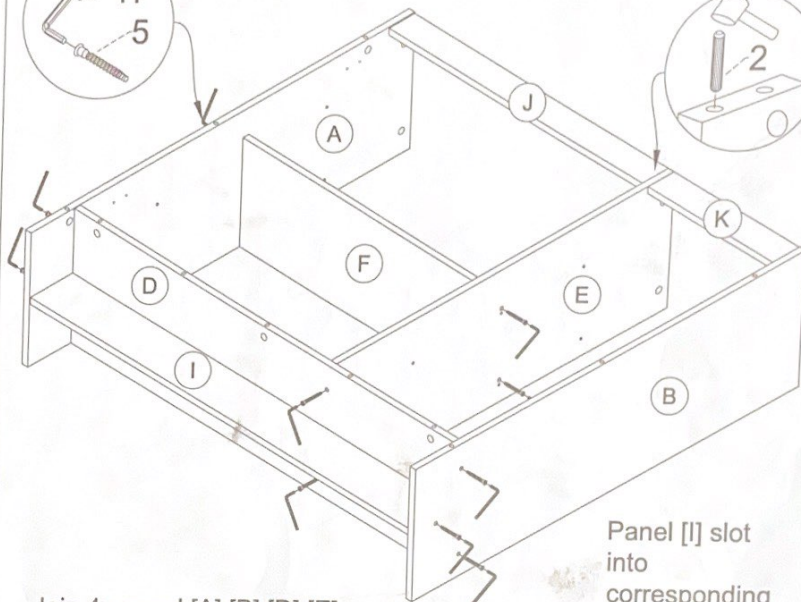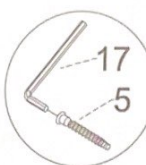



Join 4x panel [A] [B] [D] [E] with the panel [F] [I] by screw (5) and tighten with a allen key (17).


Panel [I] slot into corresponding holes in panel [A] [B]



## STEP 4



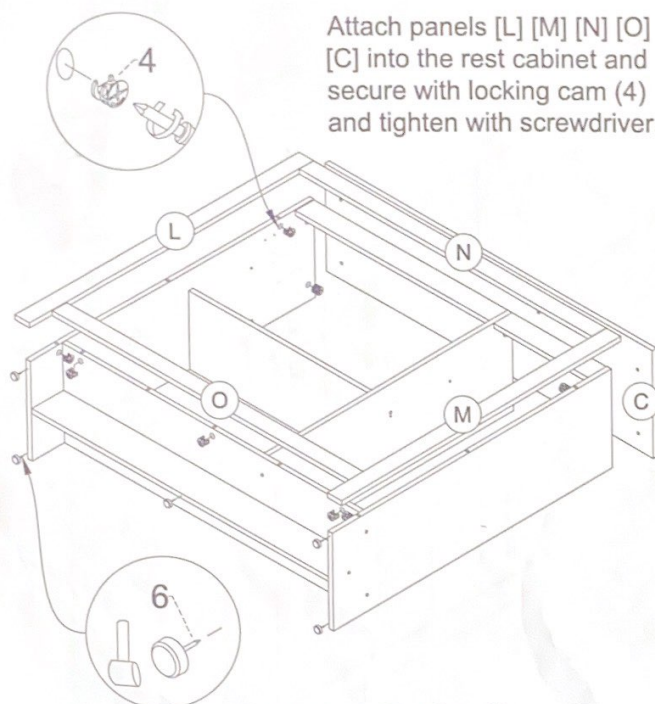

|   |   |        |
|---|---|--------|
| 4 |  | 13 pcs |
| 6 |  | 5 pcs  |

Attach panels [L] [M] [N] [O] [C] into the rest cabinet and secure with locking cam (4) and tighten with screwdriver.




Attach 5x Plastic nail pin (6) into the base.

## STEP 5

|    |   |        |
|----|---|--------|
| 9  |  | 2 pcs  |
| 10 |  | 1 pc   |
| 13 |  | 28 pcs |
| 14 |  | 8 pcs  |

Attach panel [R] [S] at the back cabinet using 28pcs nail (13) as shown with a hammer

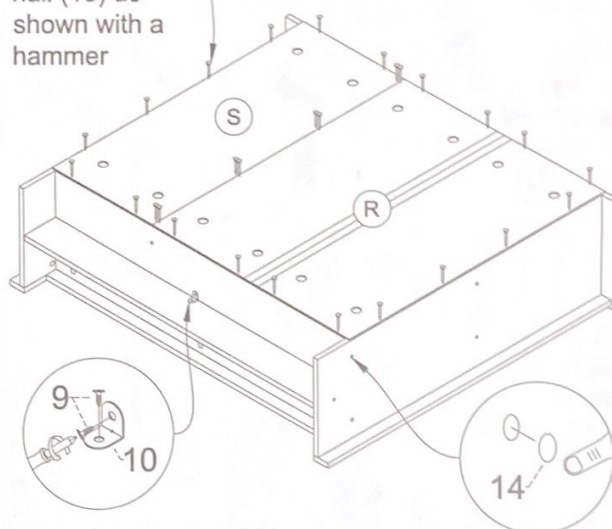


Attach L-bracket (10) at the bottom cabinet as shown using 2x screw (9) and tighten with screwdriver

Close up both side screw holes with 8x holes sticker (14).


## STEP 6

Using 2x screw (9) for 1x hinges (7) / (8).




**A. Lateral adjustment by screw adjusting**

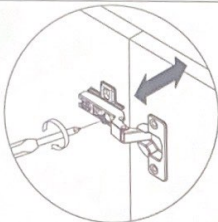

**B. Vertical adjustment via slot in the mounting plate**

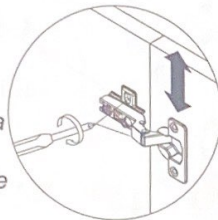

**C. Front-to-Back by the slacking the hinge arm mounting screw**

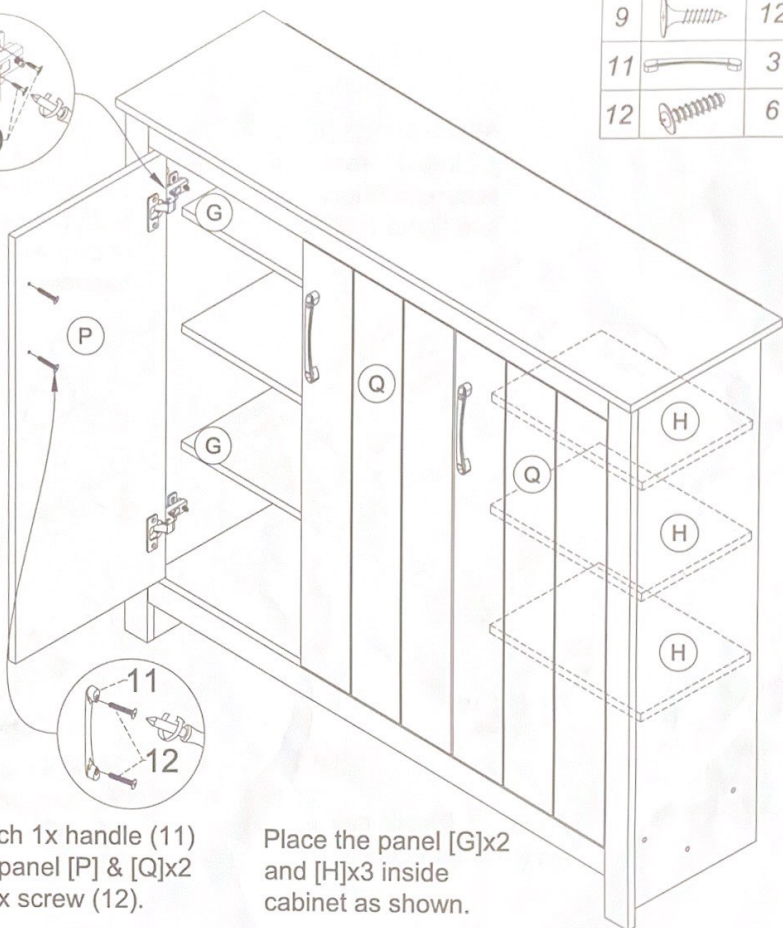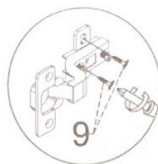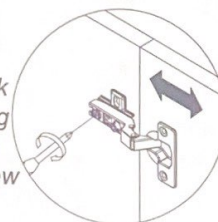

Attach 1x handle (11) into panel [P] & [Q]x2 by 2x screw (12).

Place the panel [G]x2 and [H]x3 inside cabinet as shown.

|    |  |        |
|----|--|--------|
| 9  |  | 12 pcs |
| 11 |  | 3 pcs  |
| 12 |  | 6 pcs  |