Before you begin, please follow assembly instructions carefully, then follow them step by step.

Read instruction carefully . See Furniture Parts list and Hardware List for guidance . Be sure you have all parts before you start assembling .
Place and assemble furniture on a clean flat soft surface , such as carpet or rug to pervent being scratched .

	PART LIST	QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	BACK PANEL	1 PC
6	DRAWER FRONT	1 PC
7	DRAWER BACK	1 PC
8	DRAWER SIDE	2 PCS
9	DRAWER BOTTOM	1 PC
10	METAL SIDE (L)	1 PC
11	METAL SIDE (R)	1 PC
12	METAL BONE	2 PCS

	HARDWARE		
A	MINI FIX A1 A2 A3		4 SETS
B	M8 X 30MM WOOD DOWEL		12 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		4 PCS
D	ALLEN KEY M4		1 PC
E	M3.5 X 16MM C.B SCREW		12 PCS
F	M4 X 38MM C.B SCREW		8 PCS
G	M4 X 45MM C.B SCREW		2 PCS
H	5/8 NAIL		8 PCS
I	JCBC SCREW M6 X 30MM		5 PCS
J	JCBC SCREW M6 X 40MM		4 PCS
K	HANDLE 12812		1 PC
L	14" DRAWER SLIDE	L1 (L/R) L2 (L/R)	1 SET
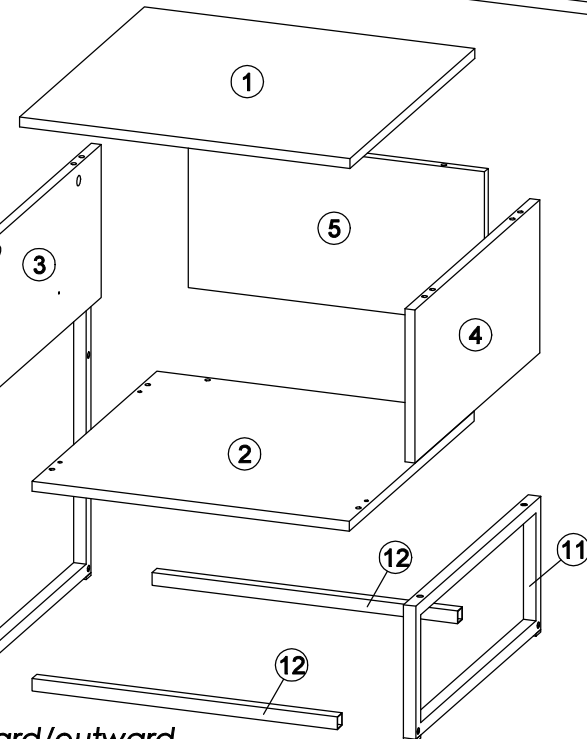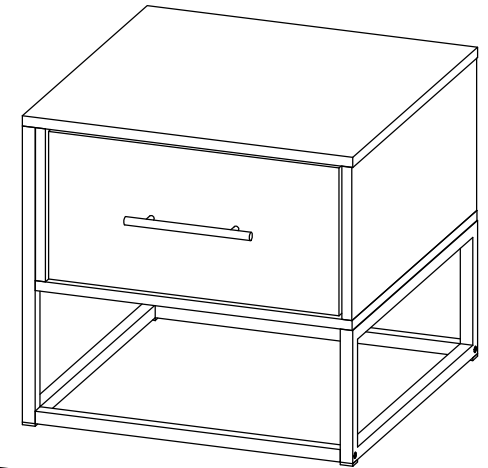
SELF-PREPARED TOOLS: *Tools below are NOT included in package.*

SCREWDRIVER   HAMMER
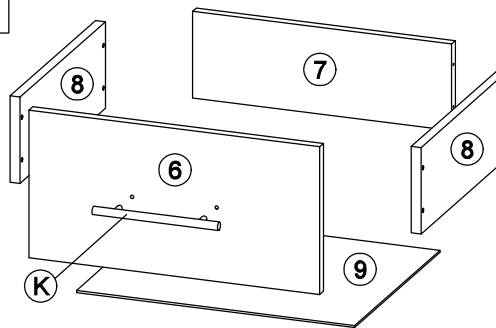
Reminder:
Please ensure that all surfaces and edges with colours/laminations are facing forward/outward.
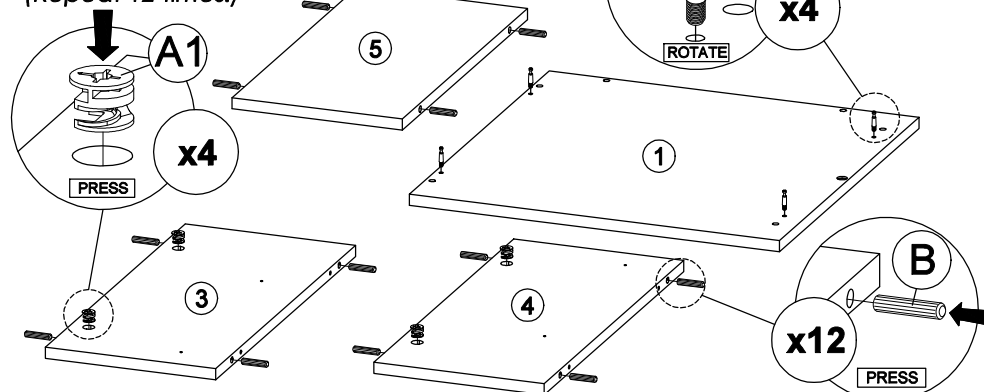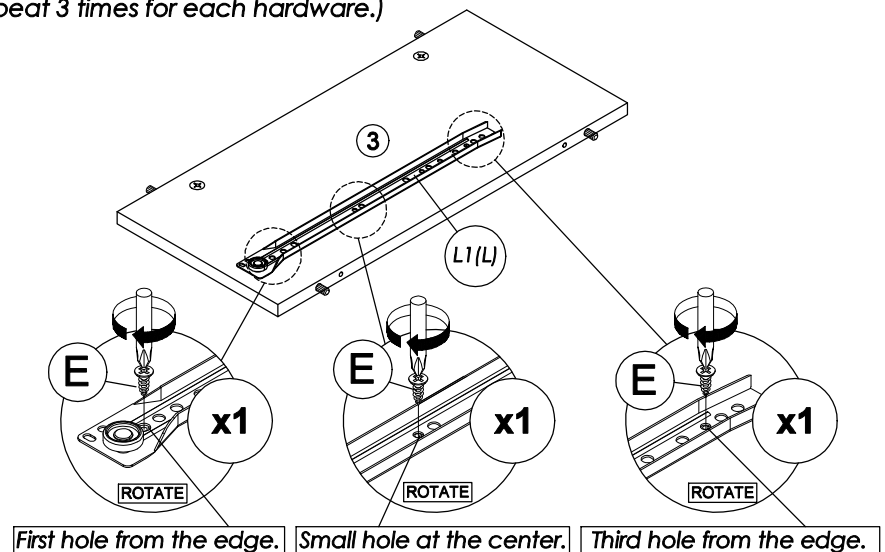
MODEL : **VOGUE-ST 5050**

STEP 1

- Insert hardware **A1** onto panel **(3)** and **(4)**.
  (Repeat 4 times.)
- Insert hardware **A2** onto panel **(1)**.
  (Repeat 4 times.)
- Insert hardware **B** onto panel **(3)**, **(4)** and **(5)**.
  (Repeat 12 times.)

SCREWDRIVER REQUIRED

A2 — x4 — ROTATE

A1 — x4 — PRESS

B — x12 — PRESS

** Ensure the arrows on hardware **A1** point towards mounting positions.*

STEP 2

- Fix hardware **L1 (L)** into panel **(3)** with hardware **E**.
  (Repeat 3 times for each hardware.)

SCREWDRIVER REQUIRED

L1(L)

E — x1 — ROTATE — First hole from the edge.
E — x1 — ROTATE — Small hole at the center.
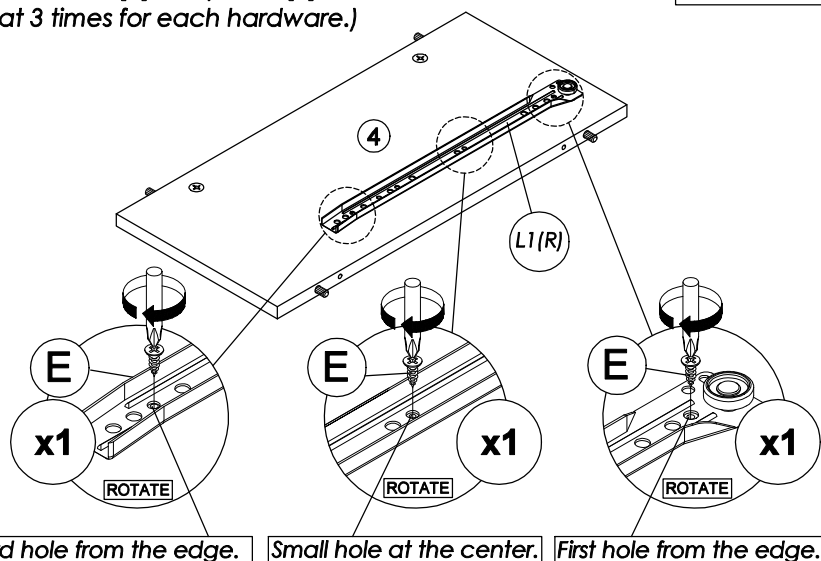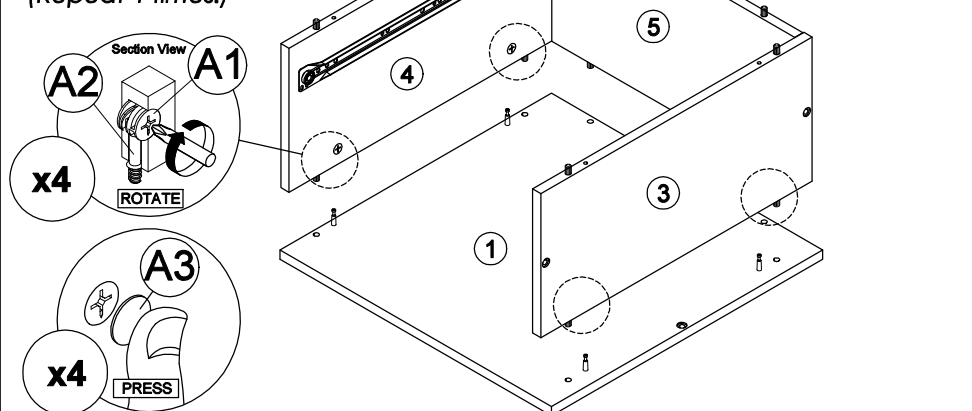E — x1 — ROTATE — Third hole from the edge.

STEP 3

- Fix hardware **L1 (R)** into panel **(4)** with hardware **E**.
  (Repeat 3 times for each hardware.)

SCREWDRIVER REQUIRED

L1(R)

E — x1 — ROTATE — Third hole from the edge.
E — x1 — ROTATE — Small hole at the center.
E — x1 — ROTATE — First hole from the edge.

STEP 4

- Attach panel **(3)**, **(4)** and **(5)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
  (Repeat 4 times.)

SCREWDRIVER REQUIRED

OR

HARDWARE D

Section View
A2 — A1 — x4 — ROTATE

A3 — x4 — PRESS

** In this step hardware **A1**, **A2** and **B** are pre-inserted.*

STEP 5

- Connect panel **(2)** to panel **(3)** and **(4)**
  by using hardware **C** and **D**.
  (Repeat 4 times.)

HARDWARE
D

C

x4

ROTATE
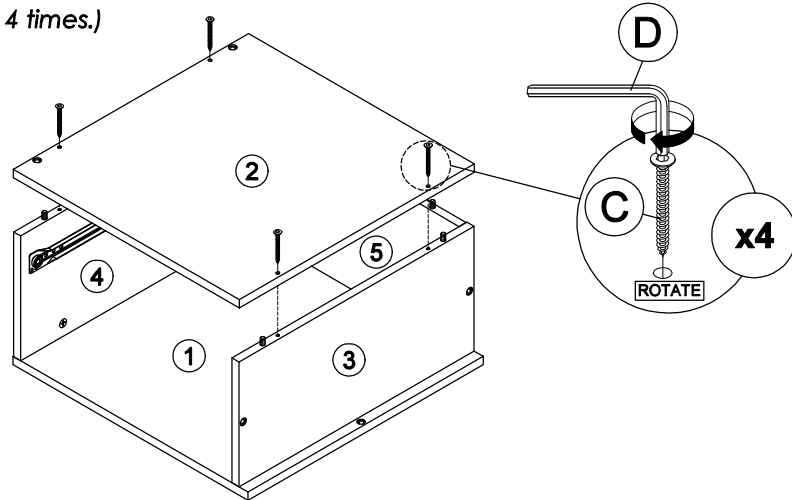
** In this step hardware **B** are pre-inserted.*

STEP 6

- Connect Metal Side **(10)** and **(11)** to Metal Bone **(12)**
  by using hardware **D** and **J**.
  (Repeat 4 times.)

HARDWARE
D

J

D

x4

ROTATE

STEP 7

- Connect Metal Side **(10)** and **(11)** to panel **(1)**, **(2)** and **(3)**
  by using hardware **D** and **I**.
  (Repeat 5 times.)

HARDWARE
D

D

I

x5

ROTATE
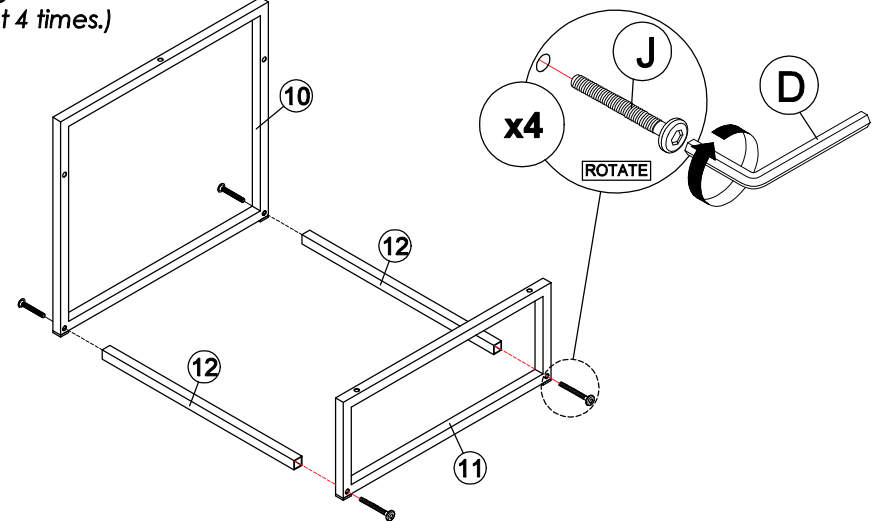
STEP 8

- Assemble panel **(8)** with panel **(6)** and **(7)**
  by using hardware **F**.
  (Repeat 8 times.)

SCREWDRIVER
REQUIRED

F

x8

ROTATE
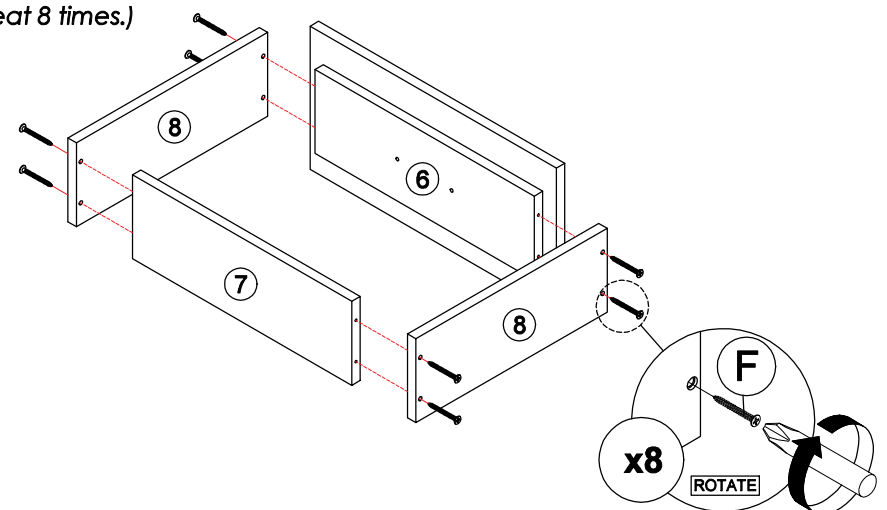
STEP 9

- Assemble panel **(9)** to entire body with hardware **H.**
  (Repeat 8 times.)

HAMMER REQUIRED

H

HIT

x8

9

8

7

8

6
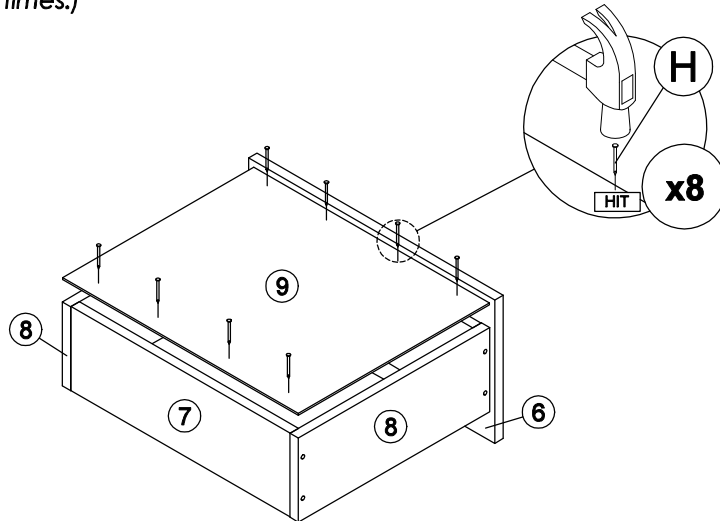
STEP 10

- Assemble hardware **L2 (L/R)** to panel **(9)**
  by using hardware **E.**
  (Repeat 3 times for each hardware.)

SCREWDRIVER REQUIRED

L2 (R)

9

8

7

8

6

L2 (L)

E   x2   ROTATE

E   x2   ROTATE

E   x2   ROTATE
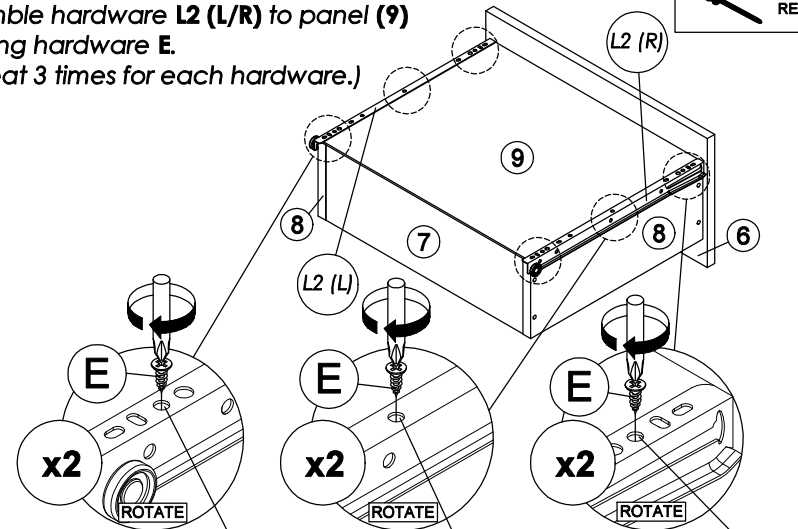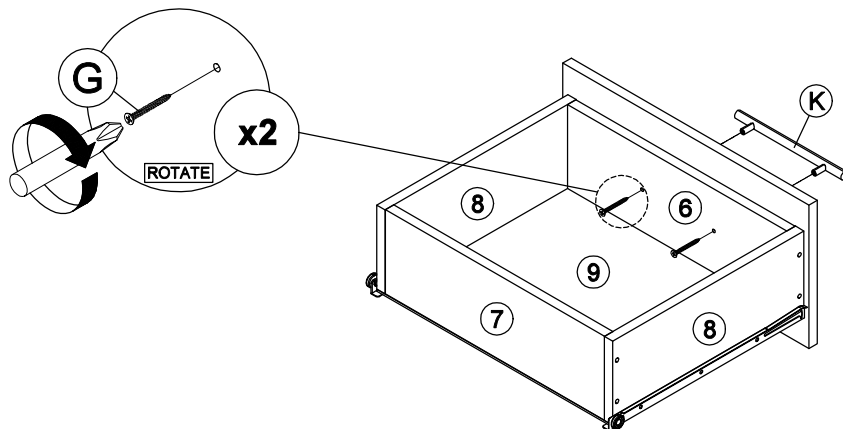
Third hole from the edge. | Hole at the center. | Third hole from the edge.

*Hardware **L2 (L/R)** shall be leaning against panel **(6)** when assembling.

STEP 11

- Fix hardware **K** onto panel **(6)** by using hardware **G.**
  (Repeat 2 times.)

SCREWDRIVER REQUIRED

G   x2   ROTATE

K

8   6

9

7   8

STEP 12

- Put all the drawer in place along the drawer slides.

1

4

6